

## StageBanner 50 AT - DMX Protocol-version 1.0

Channel	Value	Function	Type of control
1	0 - 255	<b>Pan coarse</b> Coarse control of pan movement by 360°	proportional
2	0 - 255	<b>Pan Fine</b> Fine control of pan movement	proportional
3	0	<b>Pan speed</b> Max. speed (tracking mode)	step
	1 - 255	<b><i>Pan speed-set Speed Mode in menu: Pan Mode</i></b> Speed from max. to min. (vector mode)	proportional
	1 - 255	<b><i>Pan time - set Time Mode in menu: Pan Mode</i></b> Time from 0,1 s to 25,5 s.	proportional
4	0 - 129	<b>Pan functions</b> Standard operation (fixture is controlled by channels 1, 2 and 3)	step
	130 - 139	Reset of the pan	step
	140 - 199	Forward pan rotation (speed is controlled by channel 3)	step
	200 - 255	Backward pan rotation (speed is controlled by channel 3)	step