


Digital 9000

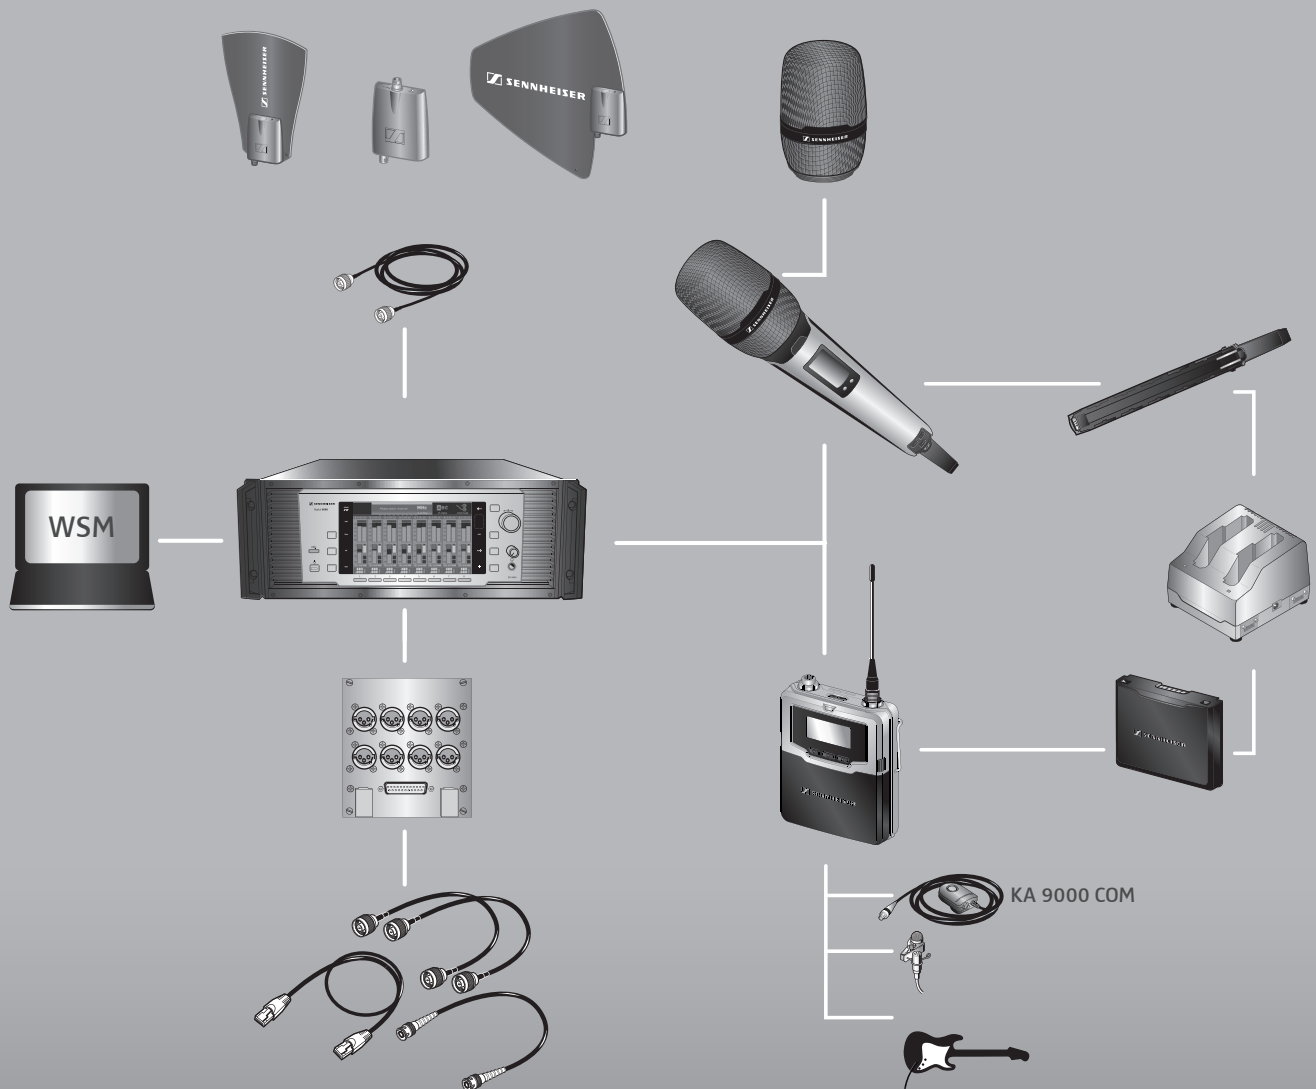

Digital 9000
Instruction manual

Content


Important safety instructions	5
Digital 9000 – System overview	8
EM 9046 receiver	9
Antennas and antenna boosters	9
SKM 9000 radio microphone/ SK 9000 bodypack transmitter	10
L 60 charger	10
Delivery includes	11
EM 9046 receiver	11
EM 9046 CAB cable set	11
Antennas and antenna boosters	11
GZL 9000 antenna cables	11
SKM 9000/SKM 9000 COM radio microphone	12
Microphone heads for the SKM 9000 radio microphone	12
SK 9000 bodypack transmitter	12
Microphones for the SK 9000 bodypack transmitter	12
KA 9000 COM command adapter for the SK 9000 bodypack transmitter	12
CI 1-4 line/instrument cable for the SK 9000 bodypack transmitter	12
B 60/B 61 battery packs	13
BA 60/BA 61 accupack	13
L 60 charger	13
Product overview	14
EM 9046 receiver	14
Antennas and antenna boosters A/AB/AD9000	18
GZL 9000 antenna cable	19
SKM 9000/SKM 9000 COM radio microphone	19
SK 9000 bodypack transmitter	21
KA 9000 COM command adapter for the SK 9000 bodypack transmitter	22
BA 60 accupack	23
BA 61 accupack	23
B 60 battery pack	24
B 61 battery pack	24
L 60 charger	25
Preparing the Digital 9000 system for use	26
Preparing the EM 9046 receiver for use	27
Setting up the receiver or mounting it into a 19" rack	27
Connecting devices to the analog audio outputs	28
Connecting devices to the digital audio outputs	29
Daisy chaining receivers	29
Connecting external word clock signals	31
Connecting receivers in a network	31
Connecting the receiver to the mains	32
Connecting headphones	33

Preparing the A/AB/AD 9000 antennas and/ or antenna boosters for use	34
Positioning the receiving antennas	34
Connecting the receiving antennas/antenna boosters	35
Adjusting the receiving antennas/antenna boosters	35
Preparing the SKM 9000 radio microphone for use	35
Changing the microphone head	37
Preparing the SK 9000 bodypack transmitter for use	37
Connecting the antenna	40
Connecting the KA 9000 COM command adapter	40
Preparing the L 60 charger for use	41
Cascading several chargers	41
Setting up or mounting the charger	41
Using the EM 9046	43
Switching the receiver on/off	44
“sys”, “ch”, “live” – operating modes at a glance	45
Basic functions of the Sennheiser operating menu	45
Displays of the Sennheiser operating menu	46
Error and warning messages	48
“sys” operating mode – Configuring the system	49
Overview of the “sys” menu	49
Main menu “System setup”	50
Extended menu “Service setup”	57
“ch” operating mode – Configuring channels	65
Overview of the “ch” menu	65
Main menu “Channel setup”	67
Extended menu “Transmitter setup”	71
“live” operating mode – Using a configured system	74
Using the SKM 9000	75
Switching the SKM 9000 on/off	76
Activating/deactivating the automatic lock mode (Autolock)	77
Basic functions of the Sennheiser operating menu	78
Overview of the status displays	78
Overview of the menu items	79
Using the SK 9000	81
Switching the SK 9000 on/off	82
Activating/deactivating the automatic lock mode (Autolock)	83
Basic functions of the Sennheiser operating menu	84
Overview of the status displays	84
Overview of the menu items	85

Using the L 60	88
Cleaning and maintaining the Digital 9000 system	91
If a problem occurs	94
EM 9046 receiver	95
SKM 9000 radio microphone	96
SK 9000 bodypack transmitter	96
L 60 charger	97
Specifications	98
Manufacturer Declarations	107

Digital 9000

Important safety instructions

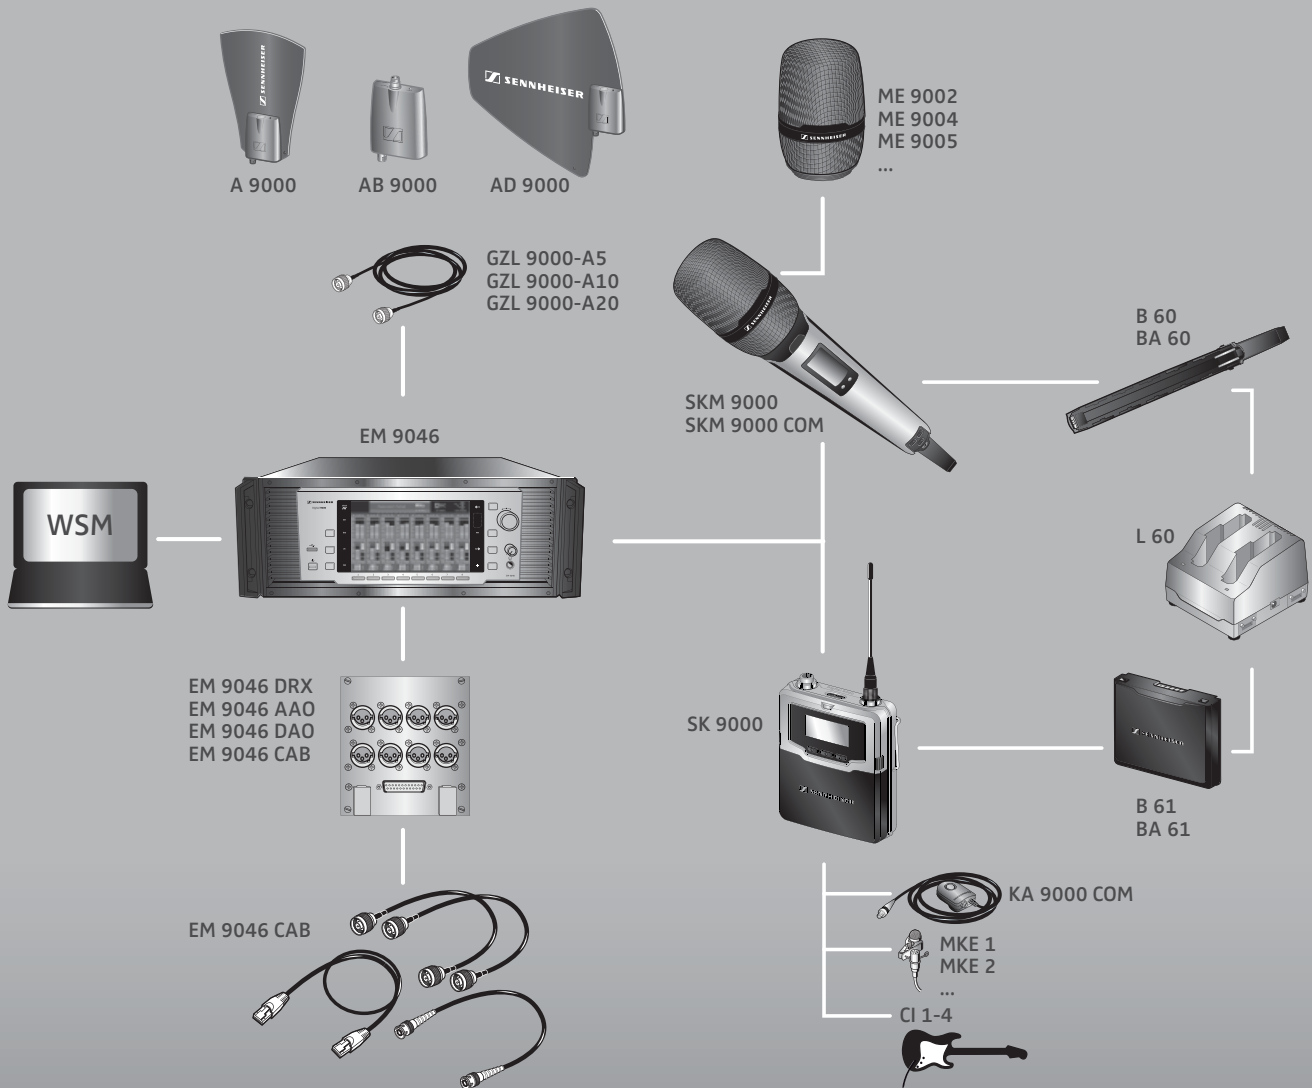

Important safety instructions

1. Read these instructions.
2. Keep these instructions. Always include these instructions when passing the apparatus on to third parties.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power supply cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel.
Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, when the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. To completely disconnect this apparatus from the AC mains, disconnect the power supply cord plug from the AC receptacle.
16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
17. Do not expose this equipment to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the equipment.
18. The mains plug of the power supply cord shall remain readily accessible.





Hazard warnings on the rear of the receiver

The label shown on the left is attached to the rear of the EM 9046.

The symbols on this label have the following meaning:

Presence of uninsulated dangerous voltage within the EM 9046's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

Never open the EM 9046 as there is a risk of electric shock. There are no user serviceable parts inside. Never attempt to change the modules of the EM 9046 yourself. Always refer repairs, servicing and the change of the modules to your authorized Sennheiser service partner.

Read and follow the safety and operating instructions contained in the instruction manual.

Risk of fire due to overloading

Do not overload wall outlets and extension cables as this may result in fire and electric shock.

Danger of hearing damage due to high volumes

This is a professional receiver. Commercial use is subject to the rules and regulations of the trade association responsible. Sennheiser, as the manufacturer, is therefore obliged to expressly point out possible health risks arising from use.

This receiver is capable of producing sound pressure levels exceeding 85 dB(A). 85 dB(A) is the sound pressure corresponding to the maximum permissible volume which is by law (in some countries) allowed to affect your hearing for the duration of a working day. It is used as a basis according to the specifications of industrial medicine. Higher volumes or longer durations can damage your hearing. At higher volumes, the duration must be shortened in order to prevent hearing damage. The following are sure signs that you have been subjected to excessive noise for too long a time:

- You can hear ringing or whistling sounds in your ears.
- You have the impression (even for a short time only) that you can no longer hear high notes.

Intended use

Intended use of the Digital 9000 system components includes:

- having read and understood this instruction manual, especially the chapter "Important safety instructions",
- using the products within the operating conditions and limitations described in this instruction manual.

"Improper use" means using the products other than as described in these instructions, or under operating conditions which differ from those described herein.



This instruction manual is also available at www.sennheiser.com.

Safety instructions for A/AB/AD 9000 antennas/ antenna boosters

Use safety wires to protect the receiving antennas against tipping/dropping. The safety wires, rope terminations and coupling links must comply in their dimensioning and condition with the regulations and standards of the country in which they are used!

















Safety instructions for lithium-ion rechargeable batteries

If abused or misused, the rechargeable batteries of the SK 9000/SKM 9000 may leak. In extreme cases, they may even present a risk of




- explosion,
- fire development,
- heat generation,
- smoke or gas development.

Sennheiser does not accept any liability for damage arising from abuse or misuse.

	Keep away from children.		Only charge rechargeable batteries with a charger recommended by Sennheiser.
	Observe correct polarity.		Pack/store charged rechargeable batteries so that the terminals cannot contact each other – danger of shorting out/fire hazard.
	Do not expose to moisture.		Switch rechargeable battery-powered products off after use.
	Only charge rechargeable batteries at ambient temperatures between 10°C/50°F and 40°C/104°F.		When not using rechargeable batteries for extended periods of time, charge them regularly (about every three months).
	Do not mutilate or dismantle.		Do not heat above 70°C/158°F, e.g. do not expose to sunlight or throw into a fire.
	Immediately remove rechargeable batteries from an obviously defective product.		Do not continue to use defective rechargeable batteries.
	Only use rechargeable batteries specified by Sennheiser.		Dispose of rechargeable batteries at special collection points or return them to your specialist dealer.
	Store the product in a cool and dry place at room temperature (approx. 20°C/68°F).		Remove the rechargeable batteries if the product will not be used for extended periods of time.

Digital 9000 System overview

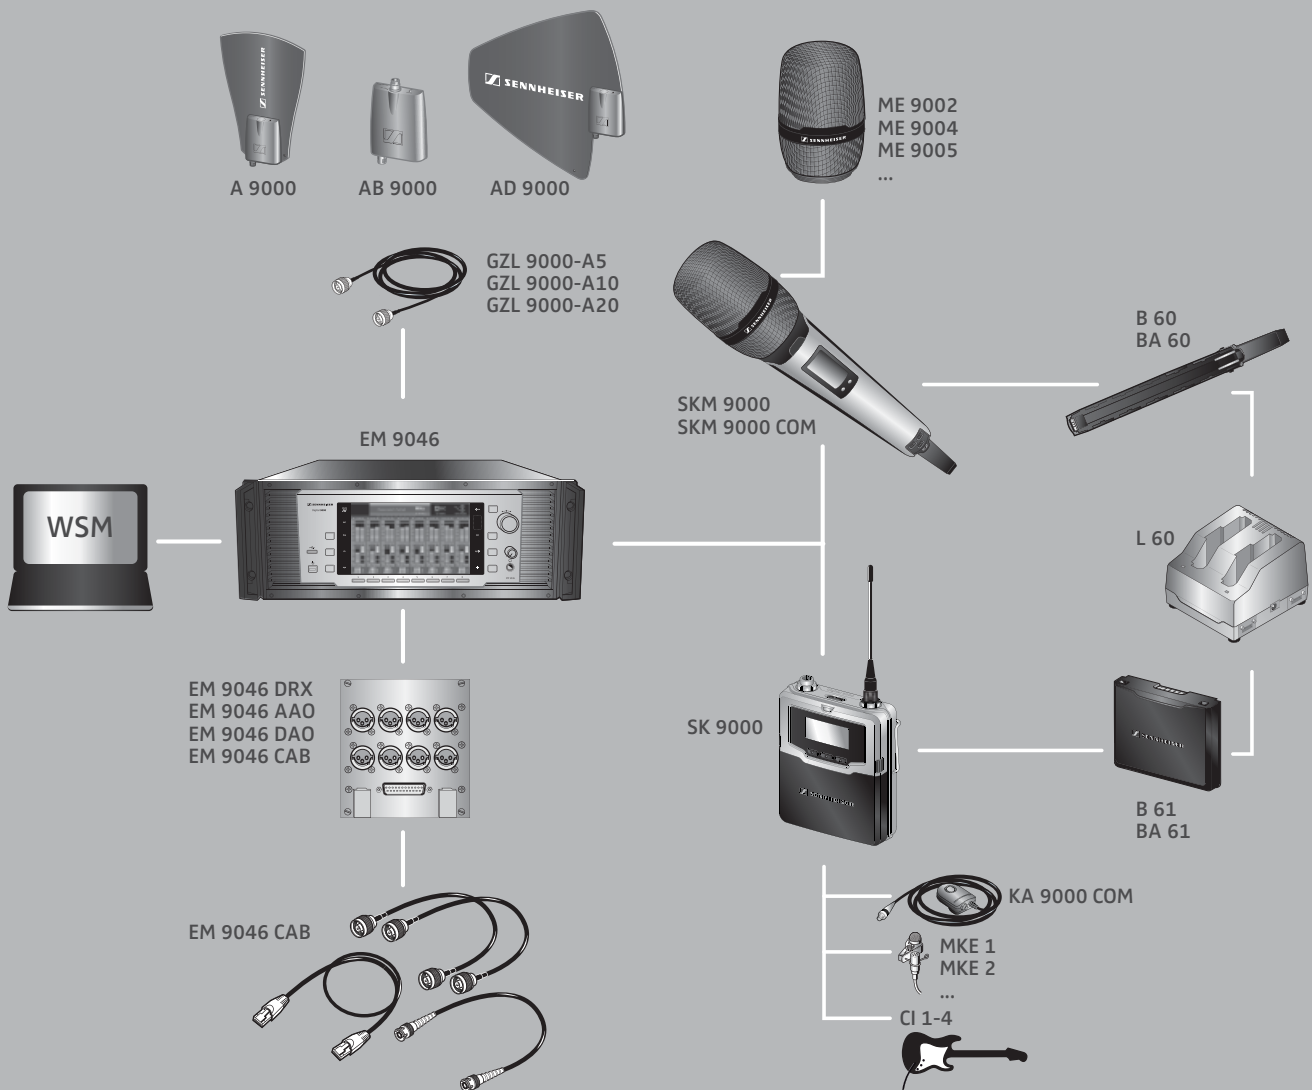

Digital 9000 – System overview	8	CI 1-4 line/instrument cable for the	
EM 9046 receiver	9	SK 9000 bodypack transmitter	12
Antennas and antenna boosters	9	B 60/B 61 battery packs	13
SKM 9000 radio microphone/ SK 9000 bodypack transmitter	10	BA 60/BA 61 accupack	13
L 60 charger	10	L 60 charger	13
Delivery includes	11	Product overview	14
EM 9046 receiver	11	EM 9046 receiver	14
EM 9046 CAB cable set	11	Antennas and antenna boosters A/AB/AD 9000	18
Antennas and antenna boosters	11	GZL 9000 antenna cable	19
GZL 9000 antenna cables	11	SKM 9000/SKM 9000 COM radio microphone	19
SKM 9000/SKM 9000 COM radio microphone	12	SK 9000 bodypack transmitter	21
Microphone heads for the SKM 9000 radio microphone	12	KA 9000 COM command adapter for the SK 9000 bodypack transmitter	22
SK 9000 bodypack transmitter	12	BA 60 accupack	23
Microphones for the SK 9000 bodypack transmitter	12	BA 61 accupack	23
KA 9000 COM command adapter for the SK 9000 bodypack transmitter	12	B 60 battery pack	24
		B 61 battery pack	24
		L 60 charger	25

The Digital 9000 system

The Digital 9000 system is characterized by its high transmission reliability and easy of use. The large switching bandwidth as well as various different connection possibilities offer great flexibility in daily use.

- Outstanding sound quality due to digital transmission technology
- Efficient use of the available frequency spectrum
- Frequencies tuneable in 25 kHz steps
- Switching bandwidth across the entire UHF range (470 MHz to 798 MHz)
- Encryption of the digital audio signal
- Intuitive, icon-based operating menu
- Modular system
- Infra-red synchronization of receivers and transmitters
- WSM-assisted

EM 9046 receiver

- Scan function
- True bit diversity technology
- Audio output level adjustable in 1 dB steps
- Configurable Command audio output
- EM 9046 receiver can be equipped with up to 8 EM 9046 DRX receiver modules for 8 individually adjustable channels
- Optional audio modules: transformer balanced analog or digital (AES3)
- Up to 4 receivers can be RF daisy chained
- High quality antenna splitters with booster supply
- Internal and external word clock synchronization of digital audio outputs
- Ethernet socket for connection to a PC and/or for connection of several receivers in a network
- Headphone output with high gain reserve

Antennas and antenna boosters

- A 9000 active, intelligent, omni-directional antenna
- AD 9000 active, intelligent, directional antenna
- AB 9000 active, intelligent antenna booster
- Power supply via EM 9046
- EM 9046-controlled preselection of booster frequency ranges "A1" ... "A8" or "B1" ... "B8" (24 MHz respectively)
- Automatic calibration of cable attenuation
- Can also be used with other receivers with booster supply voltage (e.g. EM 3732-II)

SKM 9000 radio microphone/ SK 9000 bodypack transmitter

The SKM 9000 and SK 9000 transmitters offer great ease of use and can easily be adapted to any transmission situation:

- Rugged housing
- Input gain adjustable in 3 dB steps
- Switchable 1 kHz test tone, useful for level matching the system and for the walk test
- High accuracy of charge status display (B/BA 60/61) or remaining operating time display (B 60/61)
- Detection and support of the type of microphone head being used, incl. Neumann microphone heads
- Switchable low cut filter for filtering out low frequency components
- Frequencies tuneable in 25 kHz steps

SKM 9000 radio microphone

- Power supply optionally via BA 60 lithium-ion accupack or B 60 battery pack (2 AA size alkaline batteries or 2 AA size lithium batteries)
- Different microphone heads for different areas of application (see page 20)
- Optionally available with command function (SKM 9000 COM)

SK 9000 bodypack transmitter

- Power supply optionally via BA 61 lithium-ion accupack or B 61 battery pack (3 AA size alkaline batteries or 3 AA size lithium batteries)
- Automatic detection of the input signal type (mic, line, instrument) when Sennheiser accessories are used
- Emulation of different instrument cable lengths
- Different clip-on microphones for different areas of application (see page 22)
- Command function via KA 9000 COM command adapter

L 60 charger

- Simultaneous charging of up to two BA 60/BA 61 accupacks
- Up to four chargers can be cascaded together

Delivery includes

You can make up your own Digital 9000 system with the following components:

EM 9046 receiver

- 1 EM 9046 receiver
 - fixedly** equipped with
 - PSU power supply unit
 - CCC core clock controller
 - ASP antenna splitter
 - AUX blanking plate
 - optionally** equipped with
 - up to eight EM 9046 DRX receiver modules and
 - AAO/DAO analog/digital audio out modules
- 3 mains cables (with EU, UK and US plug)
- 1 CAT 5 Ethernet cable
- 1 instruction manual
- 1 CD ROM with
 - "Wireless Systems Manager" (WSM) software
 - WSM instruction manual
- 1 CD ROM with instruction manual for the Digital 9000 system



The optional EM 9046 DRX, AAO and DAO modules can be purchased from and must be assembled by your Sennheiser service partner.

EM 9046 CAB cable set

- 2 RF patch cable (type N, 50 Ω)
- 1 Ethernet patch cable (RJ45 connectors, CAT 5)
- 1 Word clock patch cable (BNC, 75 Ω)

Antennas and antenna boosters

- 1 A 9000 omni-directional antenna **or**
- 1 AD 9000 directional antenna **or**
- 1 AB 9000 antenna booster
- 1 supplement

GZL 9000 antenna cables

- 1 GZL 9000-A5 antenna cable (length 5 m) **or**
- 1 GZL 9000-A10 antenna cable (length 10 m) **or**
- 1 GZL 9000-A20 antenna cable (length 20 m)

SKM 9000/SKM 9000 COM radio microphone

- 1 SKM 9000 radio microphone [or](#)
- 1 SKM 9000 COM radio microphone
- 1 MZQ 9000 microphone clamp
- 1 supplement "Framework requirements and restrictions on frequency usage in Europe"
- 1 instruction manual



You additionally require microphone heads as well as a BA 60 accu-pack and/or a B 60 battery pack. If you are using the BA 60 accu-pack, you will also require an L 60 charger.

Microphone heads for the SKM 9000 radio microphone

- 1 microphone head
- 1 MZQ 9000 microphone clamp
- 1 instruction manual



For an overview of all microphone heads for the SKM 9000 radio microphone, refer to page 20.

SK 9000 bodypack transmitter

- 1 SK 9000 bodypack transmitter
- 1 supplement "Framework requirements and restrictions on frequency usage in Europe"
- 1 instruction manual



You additionally require microphones or the CI 1-4 line/instrument cable as well as a BA 61 accupack and/or a B 61 battery pack. If you are using the BA 61 accupack, you will also require an L 60 charger

Microphones for the SK 9000 bodypack transmitter

- 1 microphone
- 1 instruction manual



For an overview of all microphones for the SK 9000 bodypack transmitter, refer to page 22.

KA 9000 COM command adapter for the SK 9000 bodypack transmitter

- 1 command adapter
- 1 instruction manual

CI 1-4 line/instrument cable for the SK 9000 bodypack transmitter

- 1 CI 1-4 line/instrument cable
- 1 instruction manual

B 60/B 61 battery packs

- 1 B 60 battery pack for SKM 9000 radio microphone [or](#)
- 1 B 61 battery pack for SK 9000 bodypack transmitter
- 1 instruction manual

BA 60/BA 61 accupack

- 1 BA 60 accupack for SKM 9000 radio microphone [or](#)
- 1 BA 61 accupack for SK 9000 bodypack transmitter
- 1 instruction manual

L 60 charger

- 1 L 60 charger for BA 60/BA 61 accupacks
- 1 instruction manual



For powering the L 60 charger, you require the NT 3-1 mains unit with a country-specific mains cable (EU, UK or US version).

One NT 3-1 mains unit can power up to four chargers.




A list of accessories can be found on the Digital 9000 product page at www.sennheiser.com. For information on suppliers, contact your local Sennheiser partner: www.sennheiser.com >“Service & Support”.

Product overview

EM 9046 receiver

Overview of the front panel

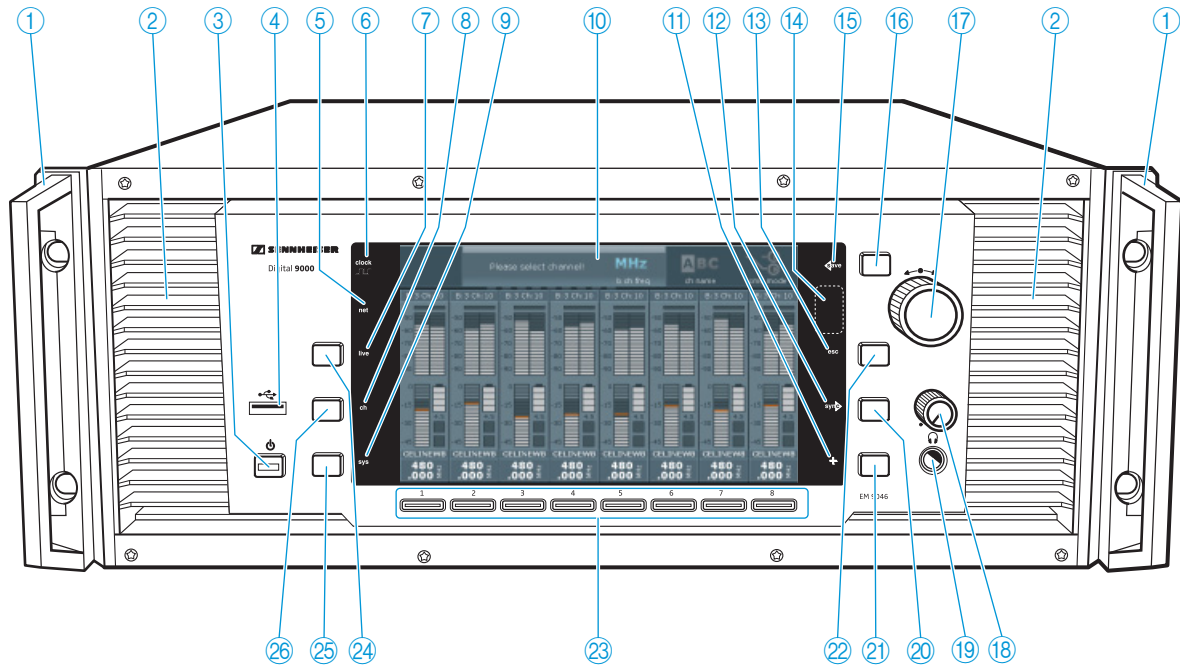


- ① Rack-mount "ear" with handle
- ② Ventilation openings
- ③ Standby button
- ④ USB socket
- ⑤ net LED (network)
- ⑥ clock LED (external word clock synchronization)
- ⑦ live LED
- ⑧ ch LED
- ⑨ sys LED
- ⑩ Display panel
- ⑪ + LED
- ⑫ syn LED
- ⑬ esc LED
- ⑭ Infra-red interface
- ⑮ save LED
- ⑯ save button
- ⑰ Jog dial for menu control
- ⑱ Headphone volume control
- ⑲ Headphone socket , 1/4" (6.3 mm) jack socket
- ⑳ syn button
- ㉑ Multiple channel selection button +
- ㉒ esc button
- ㉓ Channel 1 to 8 button
- ㉔ live button (for selecting the "live" operating mode)
- ㉕ sys button (for configuring the system)
- ㉖ ch button (for configuring the channels)

Overview of the rear panel

The overview of the rear panel shows an EM 9046 receiver equipped with the fixed PSU, CCC and ASP modules and the optional DRX, DAO and AAO modules. The configuration shown is an example configuration. The interchangeable modules are highlighted in color.

Your Sennheiser service partner can configure the EM 9046 as follows:

- 1 to 8 EM 9046 DRX receiver modules H
- 1 AAO analog audio out module D and 1 DAO digital audio out module E or
- 2 AAO analog audio out modules D or
- 2 DAO digital audio out modules E

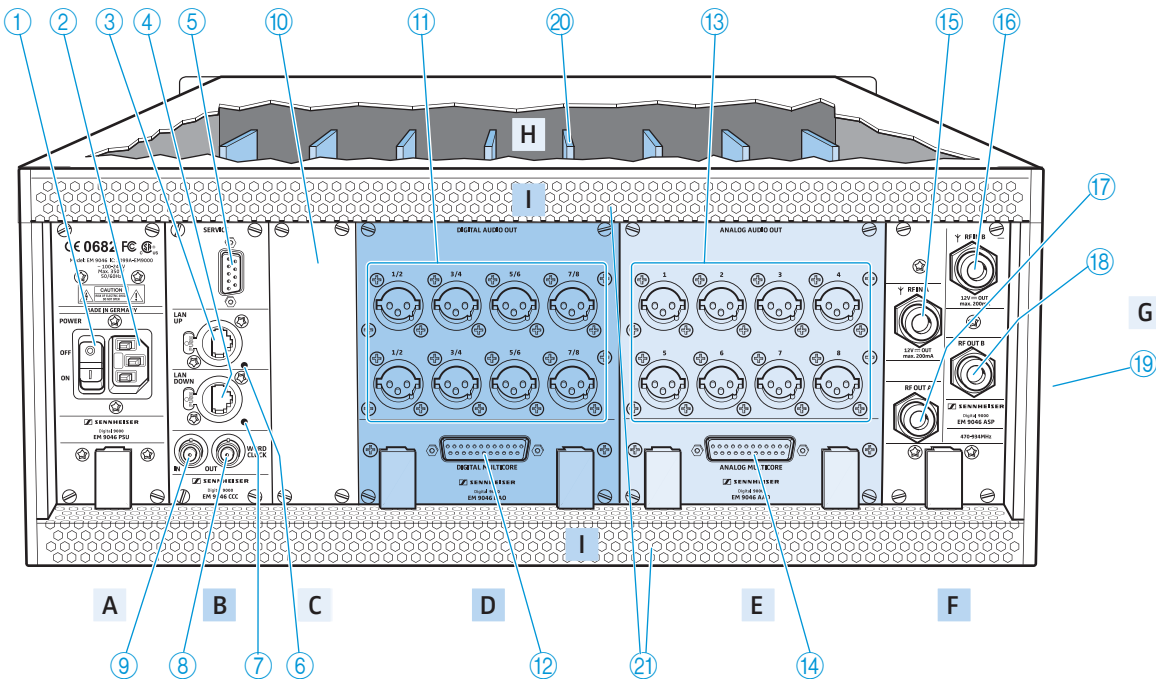

A | PSU – power supply unit

- ① ON/OFF switch
- ② IEC mains socket, 3-pin

B | CCC – clock core controller

- ③ LAN UP socket
- ④ LAN DOWN socket
- ⑤ SERVICE interface
- ⑥ LAN UP LED
- ⑦ LAN DOWN LED
- ⑧ WORD CLOCK OUT socket (BNC), looped-through output (75 Ω)
- ⑨ WORD CLOCK IN socket (BNC), input (75 Ω)

C | Aux opening for optional extensions

- ⑩ Blanking plate for aux opening

D | DAO – digital audio out

- ⑪ XLR-3 sockets (male) for digital audio outputs 1/2 to 7/8, balanced, AES3
- ⑫ DIGITAL MULTICORE socket (sub-D, 25-pin), digital, balanced

E | AAO – analog audio out

- ⑬ XLR-3 sockets (male) for analog audio outputs 1 to 8, transformer balanced
- ⑭ ANALOG MULTICORE socket (sub-D, 25-pin), analog, transformer balanced

F | ASP – antenna splitter

- ⑮ RF IN A socket (N-type), antenna input, 12 V $\overline{\text{DC}}$ out, max. 200 mA, 50 Ω
- ⑯ RF IN B socket (N-type), antenna input, 12 V $\overline{\text{DC}}$ out, max. 200 mA, 50 Ω
- ⑰ RF OUT A socket (N-type), daisy chain output
- ⑱ RF OUT B socket (N-type), daisy chain output

G | Type plate

- ⑲ EM 9046 type plate

H | DRX – receiver modules


- ⑳ DRX receiver modules 1 ... 8

I | Ventilation openings

- ㉑ Ventilation openings

i For the pin assignment of the XLR-3 and sub-D sockets of the EM 9046, refer to the chapter “Specifications” on page 106.

Overview of the displays and the clock LED

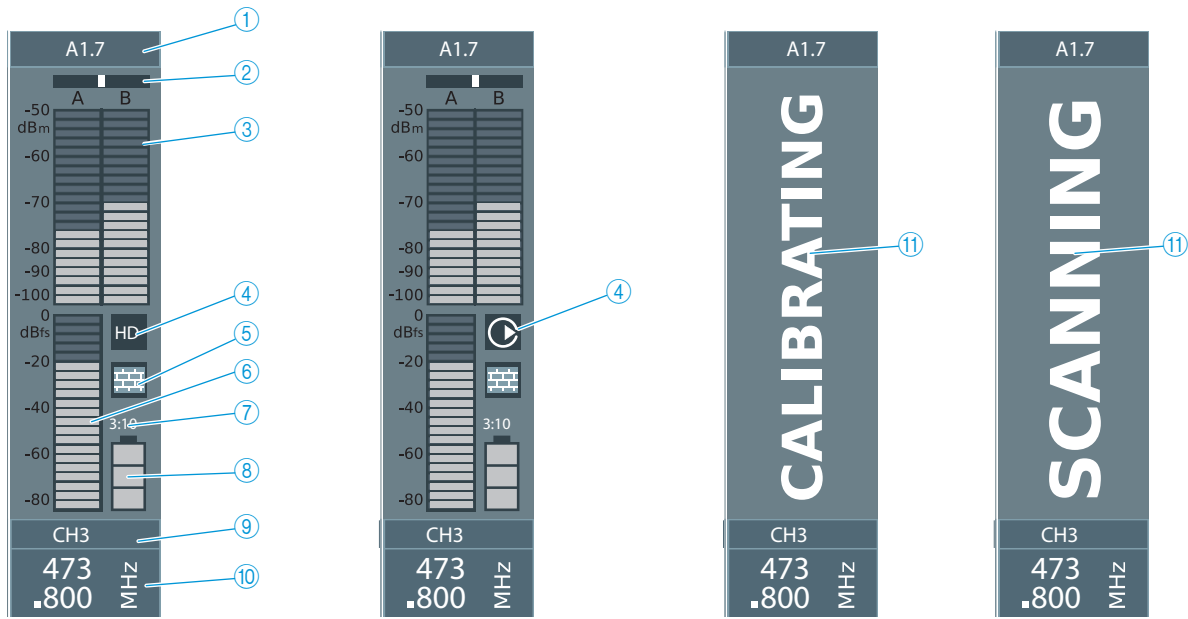

① Frequency preset display

A1.7


- A** Selected booster (type A or type B)
- 1** Selected booster frequency range (1 ... 8)
(bandwidth: 24 MHz)
- 7** Frequency preset (1 ... 40)




In addition, channel-related warnings are displayed in alternation with the frequency preset display:

range	The frequency range set is outside the booster frequency range
low bat.	Charge status of accupack/battery pack is critical
no signal	No evaluable RF signal
peak	Audio signal is overmodulated
booster	No booster connected to one or both RF IN A/B N-type sockets
sync fail	Infra-red synchronization has failed
encryption	Audio signal of this channel is bound to the EM 9046


- ② Diversity evaluation display (true bit diversity)
- ③ Antenna signal display (dBm)
- ④ "HD"/"LR" and "Command" display
- ⑤ "Encryption" display
- ⑥ Audio level display (dBfs)
- ⑦ Display for remaining operating time of the transmitter
- ⑧ Display for charge status of accupack/battery pack
- ⑨ Channel name display
- ⑩ Receiving channel display
- ⑪ Channel status displays (examples)

The clock LED

The clock LED  provides information on the following states:

clock LED 	Meaning
lights up	The receiver's digital audio output is synchronized with an external word clock signal.
flashes	The "Word clock" menu item is set to "external", but the EM 9046 receiver cannot find an external word clock signal and generates its own word clock signal. The word clock rate of this signal corresponds to the last set or active word clock rate. As soon as an external word clock signal is present at the WORD CLOCK IN BNC socket  , the digital audio output of the EM 9046 automatically synchronizes with it and the clock LED  lights up constantly.
if off	The EM 9046 receiver generates its own word clock signal.


Antennas and antenna boosters A/AB/AD9000

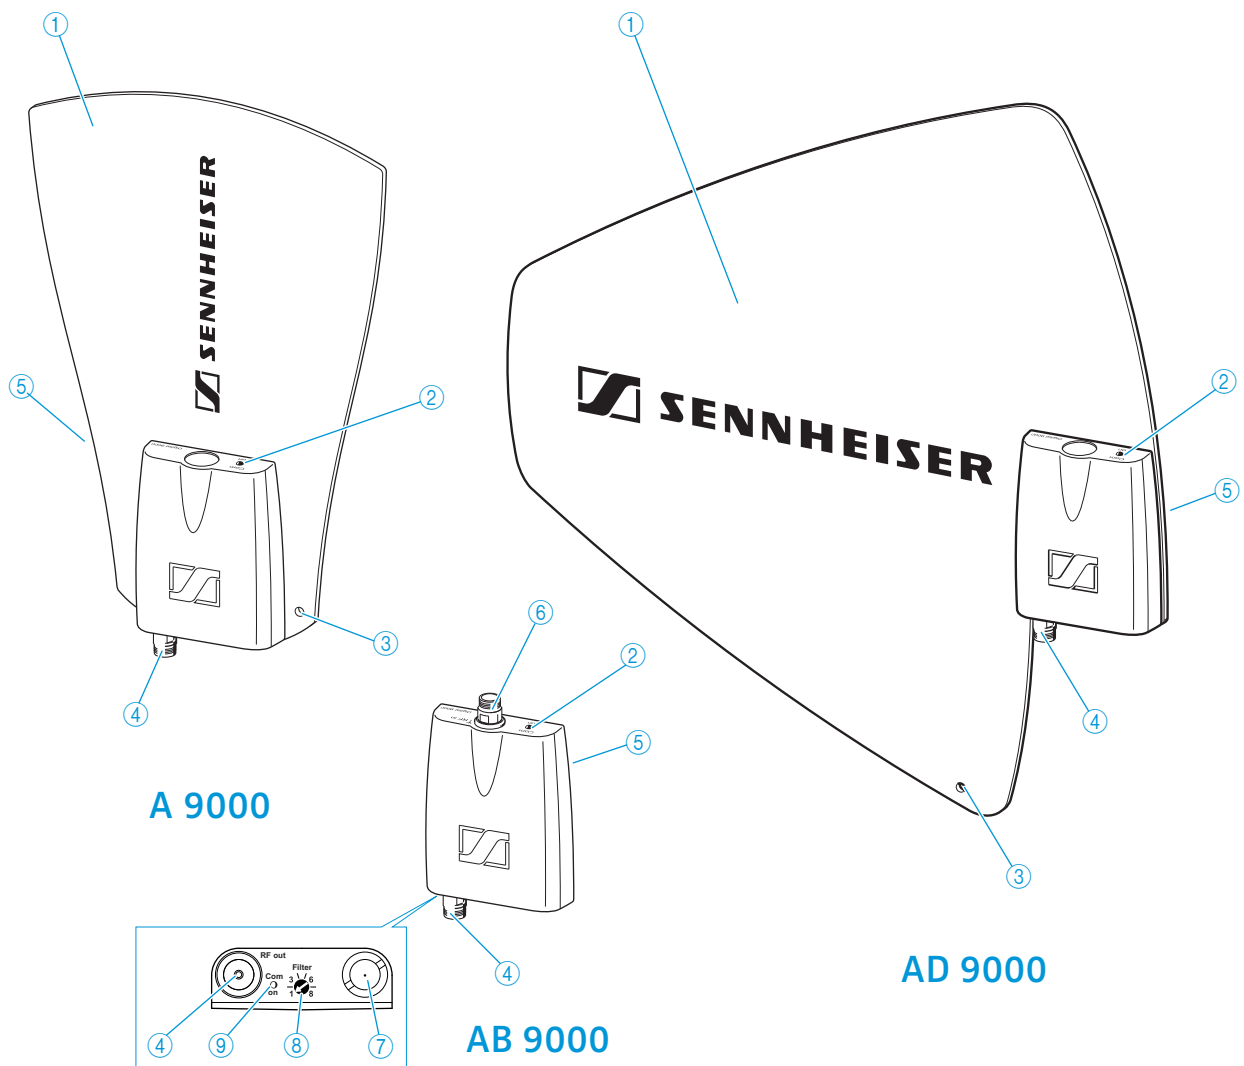

- ① Antenna surface
- ② and ⑨: "Com" and "On" LED
 - red: error
 - green: manual mode
 - blue: automatic mode (EM 9046-controlled)
 - white: firmware update in progress
- ③ Hole for connection of safety wires
- ④ RF out socket (N-type)
- ⑤ Type plate (not visible here)
- ⑥ RF in socket (N-type) (AB 9000 only)
- ⑦ Stand adapter
- ⑧ "Filter" rotary switch (see below)


i If you are using the antennas/antenna booster with the EM 9046, the "Filter" rotary switch has no function because the frequency range is automatically set. If you are **not** using the antennas/antenna booster with the EM 9046, the "Filter" rotary switch allows you to set the desired frequency range ("A1" ... "A8" or "B1" ... "B8").

GZL 9000 antenna cable

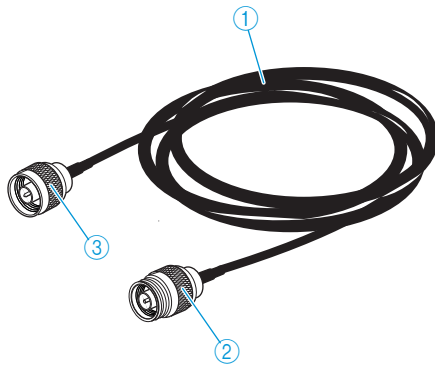

- ① GZL cable, available in lengths of 5 m, 10 m and 20 m
- ② N-type connector
- ③ N-type socket


SKM 9000/SKM 9000 COM radio microphone

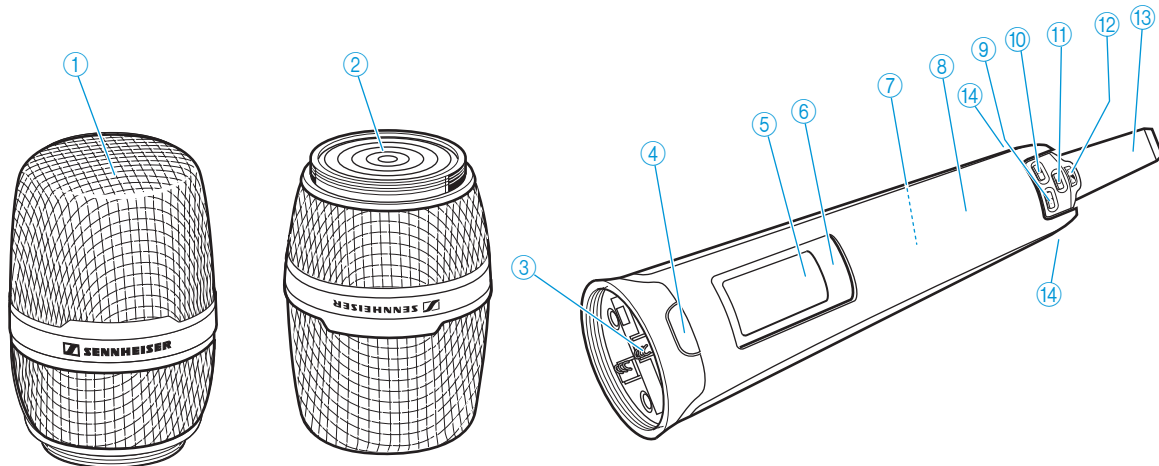

- ① Microphone head
- ② Contacts of microphone head
- ③ Contacts of radio microphone
- ④ COMMAND button (SKM 9000 COM)
- ⑤ Display panel
- ⑥ Infra-red interface
- ⑦ Accupack **or** battery pack for 2 AA size cells
- ⑧ Body of radio microphone
- ⑨ DOWN button ◀
- ⑩ UP button ▶
- ⑪ SET button ●
- ⑫ ON/OFF button ☑ with ESC function (cancel)
- lights up constantly:
radio microphone is operational
- ⑬ Antenna
- ⑭ Catches for accupack/battery pack

Overview of the standard display after switch-on

After switch-on, the radio microphone displays the currently selected standard display (here: "Frequency"). For an overview of all standard displays, refer to page 80.

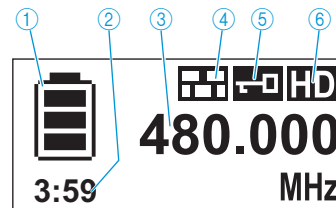


- ① Display for charge status of the accupack/battery pack
- ② Operating time display (only when used with the BA 60 accupack)
- ③ Frequency/channel/name display, switchable
- ④ "Encryption" display
- ⑤ Lock mode icon
- ⑥ Transmission mode display: "HD" (High Definition Audio) or "LR" (Long Range Audio)

Recommended microphone heads for the SKM 9000 radio microphone

Microphone head	Pick-up pattern	Transducer principle
ME 9002	omni-directional	condenser
ME 9004	cardioid	condenser
ME 9005	super-cardioid	condenser
MD 9235	super-cardioid	dynamic
MMD 935-1	cardioid	dynamic
MMD 945-1	super-cardioid	dynamic
MMK 965-1	cardioid/super-cardioid, switchable	permanently polarized
KK 204 (Neumann)	cardioid	condenser
KK 205 (Neumann)	super-cardioid	condenser

i You can also use your radio microphone together with the microphone heads of the ew G3 and 2000 series.


SK 9000 bodypack transmitter

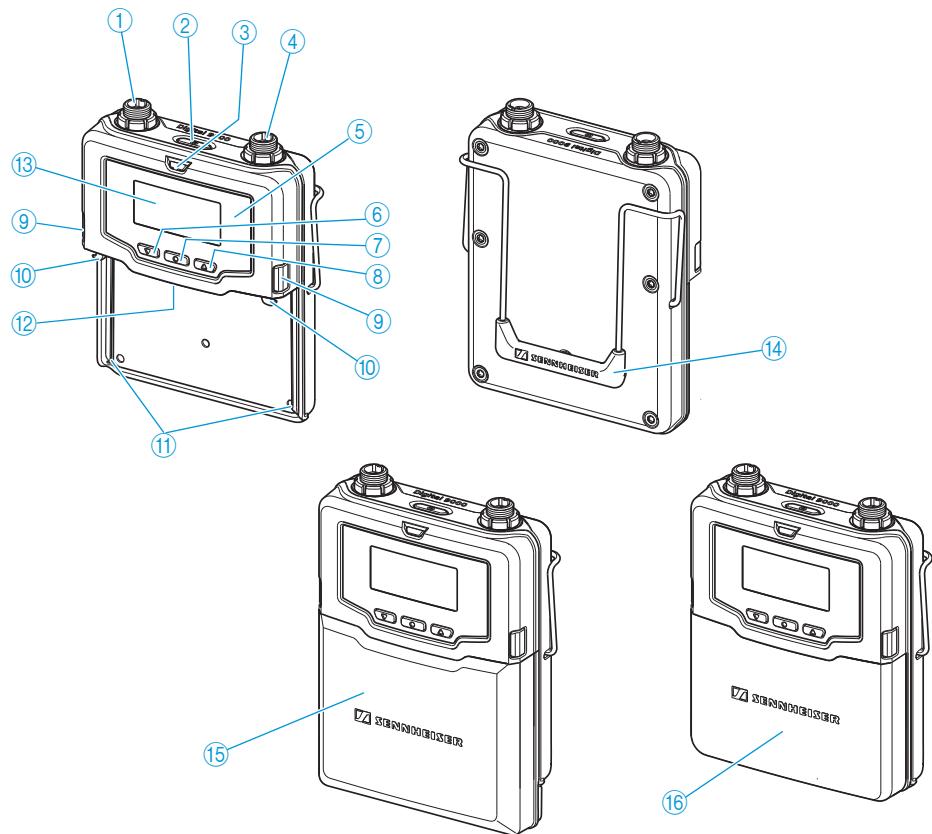

- ① 3-pin special audio socket for
 - Sennheiser microphones
 - CI 1-4 Sennheiser instrument cable
 - KA 9000 COM command adapter
- ② ON/OFF button with ESC function (cancel)
- ③ ON LED
 - lights up constantly: transmitter is operational
 - flashes regularly: remaining operating time is less than 30 minutes
 - flashes with high levels: audio signal is excessively high
- ④ Antenna socket
- ⑤ Infra-red interface
- ⑥ DOWN button
- ⑦ SET button
- ⑧ UP button
- ⑨ Catches for accupack/battery pack
- ⑩ Snap-in elements for accupack/battery pack
- ⑪ Guide rails for accupack/battery pack
- ⑫ Contacts for supply voltage and data contacts
- ⑬ Display panel
- ⑭ Belt clip
- ⑮ Battery pack for 3 AA size cells
- ⑯ Accupack

Overview of the standard display after switch-on

After switch-on, the bodypack transmitter displays the currently selected standard display (here: "Frequency"). For an overview of all standard displays, refer to page 86.

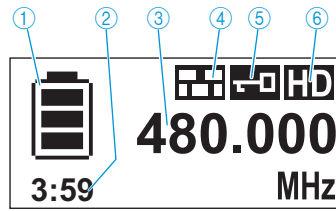

- ① Display for charge status of the accupack/battery pack
- ② Operating time display (only when used with the BA 61)
- ③ Frequency/channel/name display, switchable
- ④ "Encryption" display
- ⑤ Lock mode icon
- ⑥ Transmission mode display: "HD" (High Definition Audio) or "LR" (Long Range Audio)


Microphones for the SK 9000 bodypack transmitter

Microphone	Pick-up pattern
MKE 1	omni-directional
MKE 2	cardioid
ME 102	omni-directional
ME 104	cardioid
ME 105	super-cardioid
HSP 2	omni-directional
HSP 4	cardioid

Sennheiser CI 1-4 line/instrument cable


1/4" (6.3 mm) jack plug (silent plug) to 3-pin special audio connector

KA 9000 COM command adapter for the SK 9000 bodypack transmitter

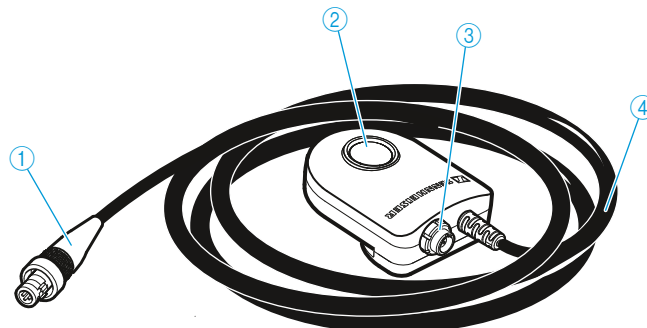


- ① 3-pin special audio connector
- ② COMMAND button
- ③ 3-pin special audio socket
- ④ Connection cable, length: 1.6 m

BA 60 accupack

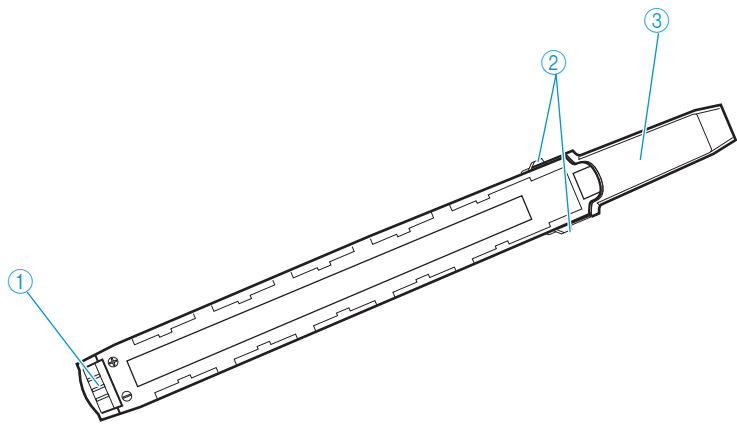


- ① Charging and data contacts
- ② Snap-in elements
- ③ Antenna

BA 61 accupack

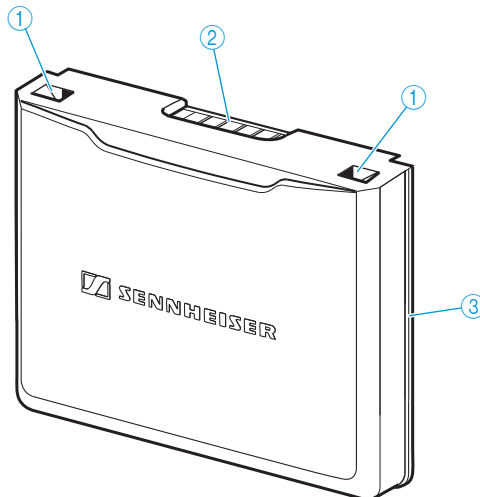



- ① Snap-in elements
- ② Charging and data contacts
- ③ Guide rail

B 60 battery pack

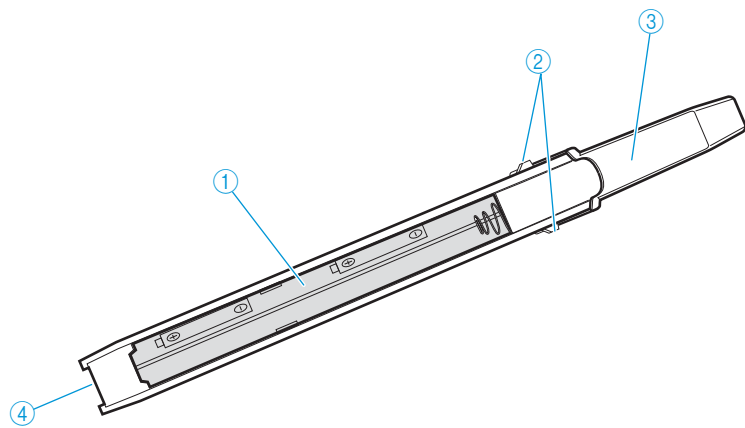


- ① Battery compartment for 2 AA size batteries
- ② Snap-in elements
- ③ Antenna
- ④ Data contacts

B 61 battery pack

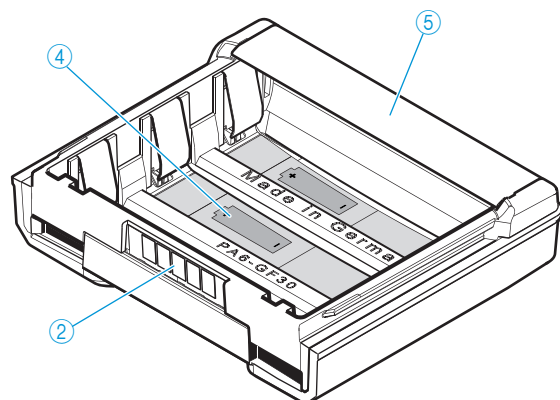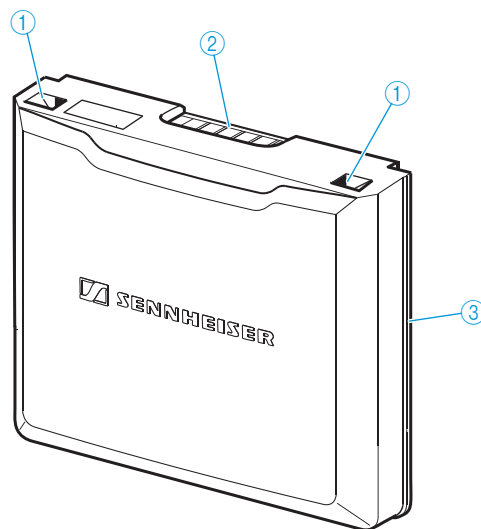

- ① Snap-in elements
- ② Data contacts
- ③ Guide rail
- ④ Battery compartment for 3 AA size batteries
- ⑤ Cover

L 60 charger

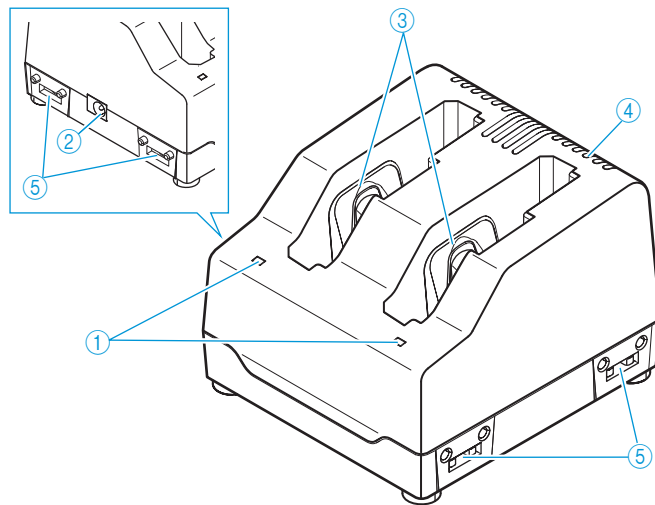


- ① Status LED
- ② DC input socket for connection of NT 3-1 mains unit
- ③ Charging compartments for BA 60 or BA 61 accupacks
- ④ Ventilation openings
- ⑤ Rails for cascading up to 4 chargers

Indications of the status LED

Status LED ①	Meaning
off	Standby mode/no connection to the mains
red	Accupack is being charged, capacity obtained is approx. 0-70%
orange	Accupack is being charged, capacity obtained is approx. 70-100%
green	Accupack is fully charged, capacity is continuously monitored
flashing red	Error, charging is aborted (accupack is e.g. defective or overheated)

Digital 9000 Preparing for use

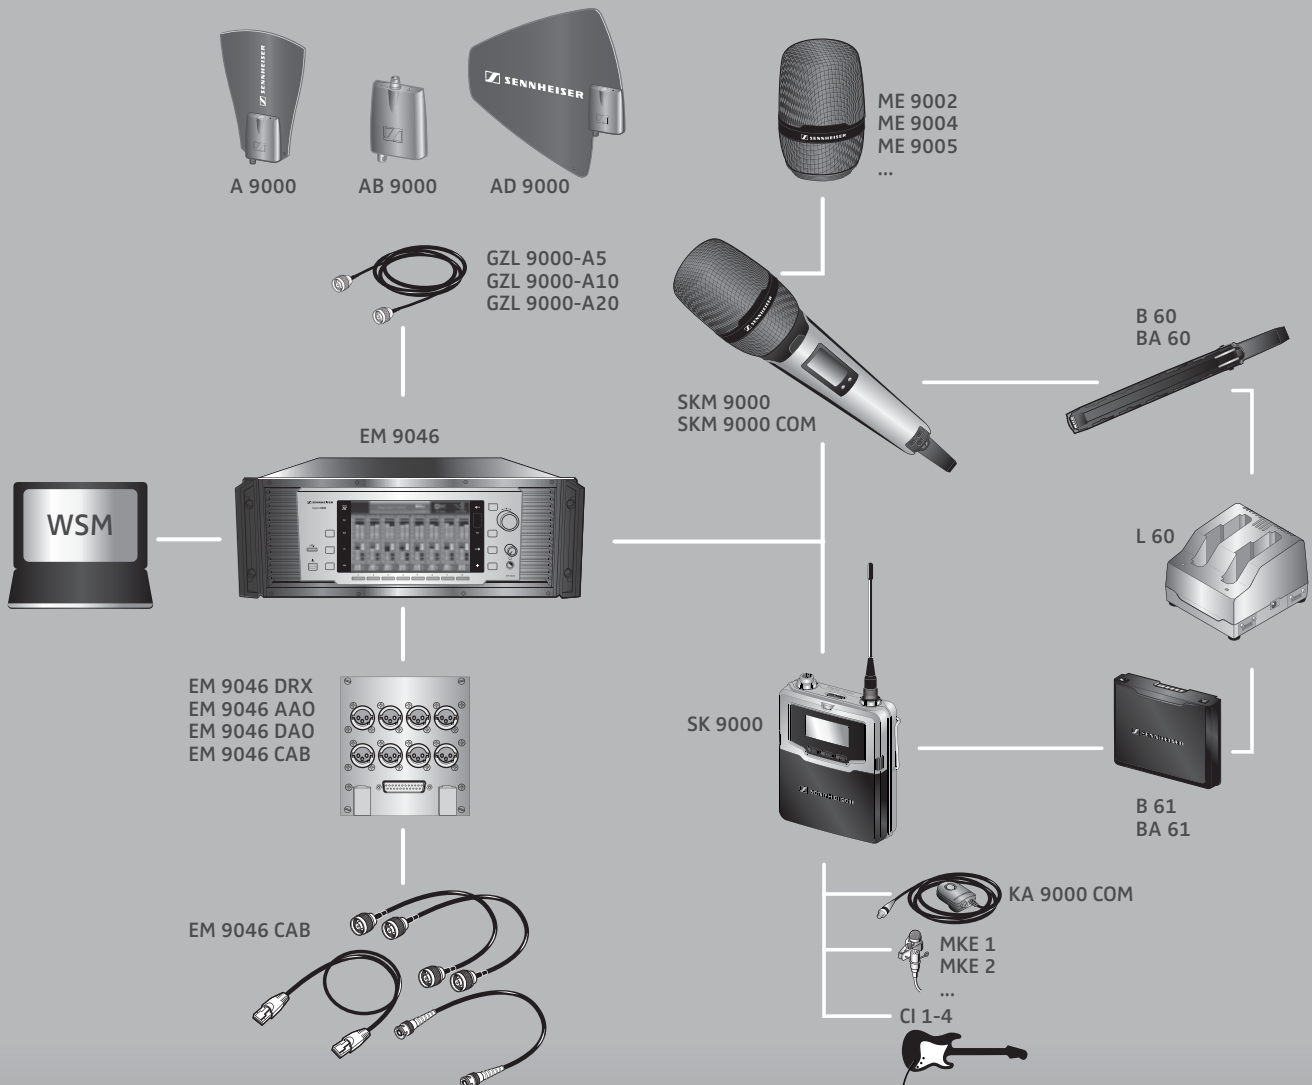

Preparing the EM 9046 receiver for use	27
Setting up the receiver or mounting it into a 19" rack	27
Connecting devices to the analog audio outputs	28
Connecting devices to the digital audio outputs	29
Daisy chaining receivers	29
Connecting external word clock signals	31
Connecting receivers in a network	31
Connecting the receiver to the mains	32
Connecting headphones	33
Preparing the A/AB/AD 9000 antennas and/ or antenna boosters for use	34
Positioning the receiving antennas	34
Connecting the receiving antennas/antenna boosters	35
Adjusting the receiving antennas/antenna boosters	35

Preparing the SKM 9000 radio microphone for use	35
Changing the microphone head	37
Preparing the SK 9000 bodypack transmitter for use	37
Connecting the antenna	40
Connecting the KA 9000 COM command adapter	40
Preparing the L 60 charger for use	41
Cascading several chargers	41
Setting up or mounting the charger	41

Preparing the EM 9046 receiver for use

Setting up the receiver or mounting it into a 19" rack

Setting up the receiver on a flat surface

CAUTION!

Risk of staining of furniture surfaces!

Furniture surfaces can be treated with varnish, polish or synthetics which might cause stains when they come into contact with other synthetics. Despite a thorough testing of the synthetics used by us, we cannot rule out the possibility of staining.

- ▶ Do not place the receiver on delicate surfaces.

The receiver is supplied with 4 self-adhesive soft rubber feet to ensure that it cannot slip on the surface on which it is placed.



Do not fit the device feet when rack mounting the receiver.

- ▶ Ensure that the base of the receiver is clean and free from grease before fitting the device feet.
- ▶ Fit the device feet.
- ▶ Place the receiver on a flat, horizontal surface.

Mounting the receiver into a 19" rack




CAUTION

Danger of material damage and personal injury when rack mounting the receiver!

When installing the EM 9046 in a closed or multi-rack assembly, please consider that

- the ambient temperature may increase considerably,
- high mechanical loadings occur.
- ▶ Always make sure that the ambient temperature within the rack does not exceed the permissible temperature limit specified in the specifications. If necessary, provide additional ventilation.
- ▶ Do not obstruct the air flow through the ventilation openings on the front and rear of the EM 9046.
- ▶ **Always** mount the receiver on rack rails.
- ▶ Make sure that the mechanical loading of the rack is even to avoid, for example, tipping of the rack.
- ▶ Make sure that the rack is sufficiently stable.
- ▶ Avoid circuit overloading. If necessary, provide overcurrent protection.
- ▶ Make sure that the mains cable of the EM 9046 as well as connected multi-outlet power strips or extension cables have protective ground contacts.
- ▶ Always ground the rack via an additional ground connection.

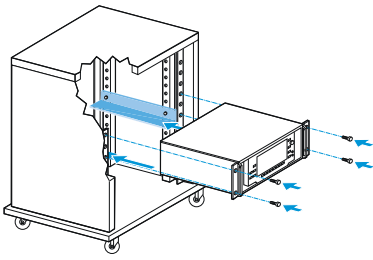


To mount the receiver into a 19" rack:

- ▶ Mount rack rails that are designed to carry the total weight of the EM 9046.
Slide the receiver onto the rack rails and screw it to the front of the rack using 2 screws per side (screws to be ordered separately).

Connecting devices to the analog audio outputs

When equipped with an AAO analog audio out module, the EM 9046 receiver has 8 analog transformer balanced audio outputs.


- ▶ Connect the analog audio inputs of an external device to the XLR-3 sockets ⑬ or the sub-D socket ⑭ (multicore, Tascam) of the EM 9046.

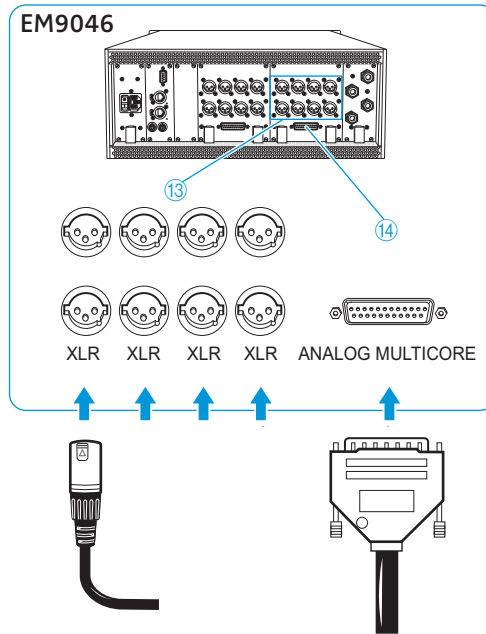

Connecting devices to the digital audio outputs

When equipped with an DAO digital audio out module, the EM 9046 receiver has 8 digital balanced audio outputs. The signals are output in AES3 format.

- ▶ Connect the digital audio inputs of an external device to the XLR-3 sockets ⑪ or the sub-D socket ⑫ of the EM 9046.

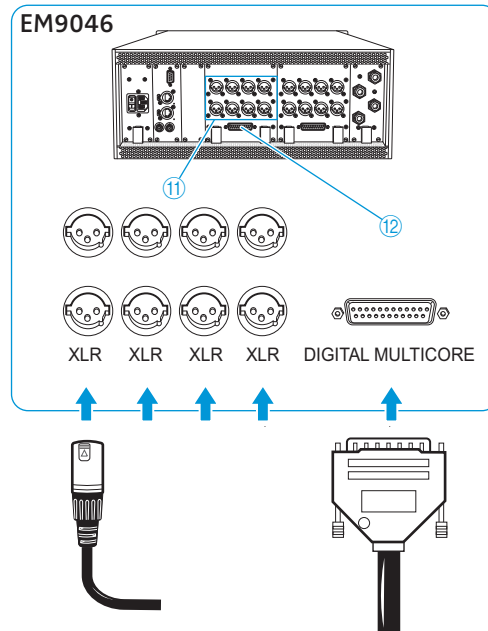

If you are using the XLR-3 sockets ⑪:

- ▶ Use a special double-shielded 110 Ω AES3 cable. This prevents that the digital data transmission interferes with RF reception.

i For the pin assignment of the XLR-3 and sub-D sockets of the EM 9046, refer to the chapter “Specifications” on page 106.


Ready-made AES3 cables are available from Sennheiser (optional accessories).

Daisy chaining receivers

The EM 9046 receivers feature an integrated antenna splitter so that up to four receivers can be daisy chained. This allows you to use two antennas/ antenna boosters for up to four receivers. In this case, all receivers have to use **the same** booster frequency range.

- ▶ Use GZL 9000 antenna cables to connect two antennas via antenna boosters to the **RF IN** N-type sockets ⑮ and ⑯ of the first receiver.

- ▶ Connect the **RF OUT** N-type sockets of the first receiver to the **RF IN** N-type sockets of an additional receiver. To do so, use the RF patch cables from the EM 9046 CAB cable set.

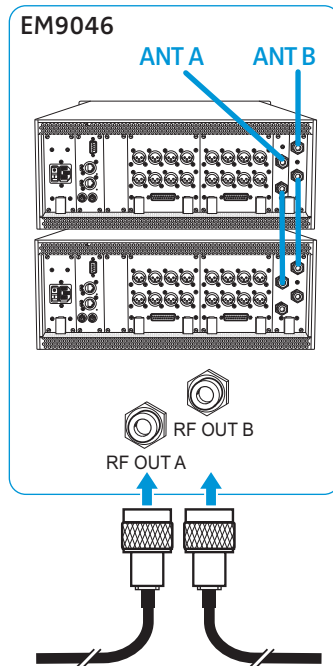


- ▶ Repeat the previous steps for up to four receivers.

i The length of the RF patch cables from the EM 9046 CAB cable set allows a distance of 1 height unit (HU) between two EM 9046 in a 19" rack.

If you want to pass on word clock signals between daisy chained receivers and/or if you want to connect daisy chained receivers in a network (see the following chapters):


- ▶ Connect the receivers in the same order in which you connected the **RF** N-type sockets. Always connect the network sockets from **LAN DOWN** to **LAN UP**.

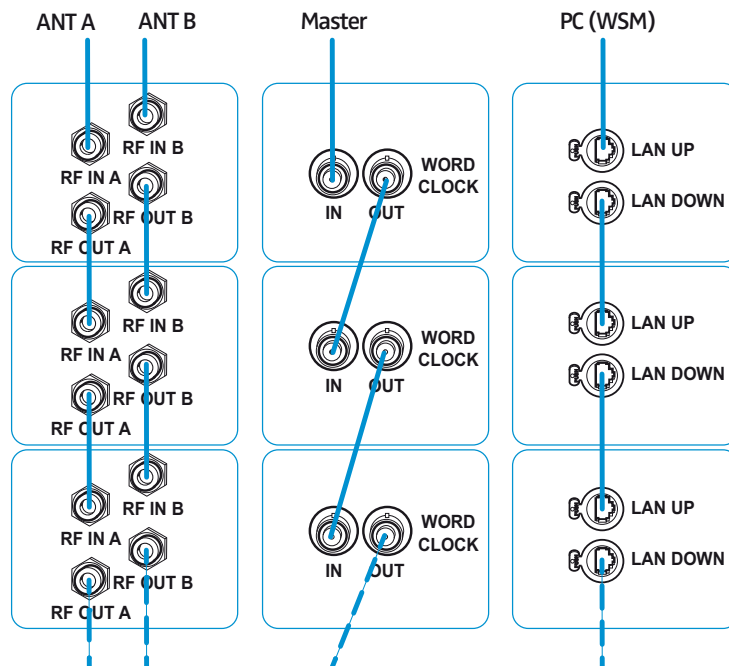

Connecting external word clock signals

The EM 9046 receiver supports external word clock sampling rates of 44.1 kHz, 48 kHz, 88.2 kHz and 96 kHz.

- ▶ Use a shielded 75 Ω coaxial BNC cable to connect the word clock output of an external word clock generator to the BNC socket ⑨ of the EM 9046.

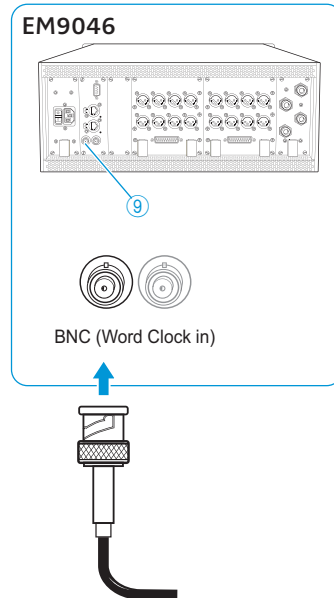

- ▶ Connect the BNC sockets of the receivers.

If you have daisy chained your receivers (see page 29):

- ▶ Connect the BNC sockets of the receivers in the order shown on page 30.

i For an overview of the states of the **clock** LED, refer to page 17.


Connecting receivers in a network

The EM 9046 has two network sockets **LAN UP** ③ and **LAN DOWN** ④, allowing you to connect additional EM 9046 or other network-compatible Sennheiser receivers in a network. All receivers in the network can be controlled via the Wireless Systems Manager (WSM) software.

- ▶ Connect the first EM 9046 to a PC/laptop. We recommend using a CAT5 Ethernet cable with crush-resistant Neutrik EtherCon connectors.
- ▶ Connect the receivers to one another using the CAT5 Ethernet cables from the EM 9046 CAB cable set. Always connect the network sockets from **LAN DOWN** to **LAN UP**.

If you have daisy chained your receivers (see page 29):

- ▶ Connect the network sockets of the receivers in the order shown on page 30.

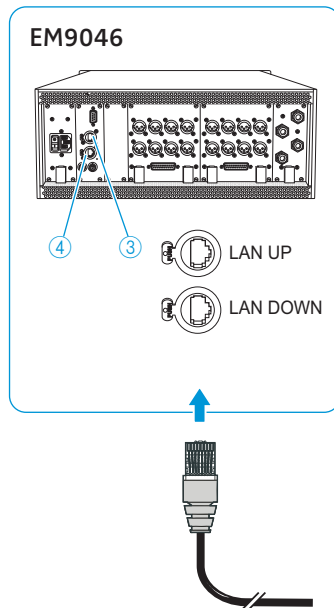

Connecting the receiver to the mains



CAUTION!

Damage to the device due to electric current!

If you connect the receiver to an unsuitable power supply, this can cause damage to the device.


- ▶ Use the supplied mains cable to connect the receiver to the mains (100 to 240 V AC, 50 or 60 Hz).
- ▶ Ensure a reliable mains ground connection of the receiver – especially when you are using multi-outlet power strips or extension cables.


To connect the receiver to the mains:

- ▶ Set the ON/OFF switch ① to position "0".
- ▶ Connect the supplied mains cable to the 3-pin mains socket ②.
- ▶ Plug the mains connector into the wall socket.
- ▶ Set the ON/OFF switch ① to position "1".

To disconnect the receiver from the mains:

- ▶ Set the ON/OFF switch ① to position "0".
All daisy chained signals are interrupted, i.e.:
 - the antenna signals at the daisy chain outputs ⑰ and ⑱,
 - the booster supply voltage,
 - the signal of the external word clock generator.
- ▶ Pull out the mains connector from the wall socket to completely disconnect the receiver from the mains.

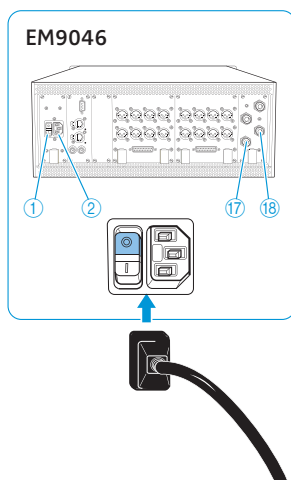

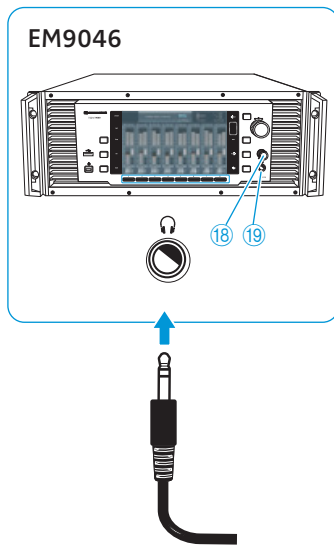

Connecting headphones



CAUTION

Danger of hearing damage due to high sound pressure levels!

The headphones connected to the headphone socket are capable of producing very high sound pressure levels, which can cause permanent hearing damage.

- ▶ Always turn the headphone volume control (18) counterclockwise to the minimum
 - before connecting headphones and putting them on;
 - before you change to a different channel.

- ▶ First turn the headphone volume control (18) counterclockwise to the minimum.
- ▶ Connect headphones with a 1/4" (6.3 mm) stereo jack plug to the headphone socket (19).



For information on headphone monitoring of channels, refer to page 74.

Preparing the A/AB/AD 9000 antennas and/or antenna boosters for use

Antennas and antenna boosters of the Digital 9000 series are available in two variants: A1–A8 and B1–B8.

- ▶ Select the booster variant (A1–A8 or B1–B8) whose frequency range matches that of your transmitters:

Booster variant	A1–A8 470–638MHz								B1–B8 630–798MHz							
Booster frequency ranges	A1	A2	A3	A4	A5	A6	A7	A8	B1	B2	B3	B4	B5	B6	B7	B8
Bandwidth MHz	470–494	494–518	510–534	534–558	550–574	574–598	590–614	614–638	630–654	654–678	670–694	694–718	710–734	734–758	750–774	774–798
Transmitter	type A1–A4 470–558 MHz				type A5–A8 550–638 MHz				type B1–B4 630–718 MHz				type B5–B8 710–798 MHz			

- ▶ Use two A 9000 receiving antennas **or** two AD 9000 receiving antennas **or** two passive antennas together with AB 9000 antenna boosters:

Product name	Type	Radiation pattern
A 9000	active, intelligent	omni-directional
AD 9000	active, intelligent	directional
AB 9000	antenna booster	depending on the passive antenna used

Positioning the receiving antennas



CAUTION

Material damage and personal injury due to tipping/dropping of the antennas!

If you do not protect the antennas against tipping/dropping, they can cause material damage and personal injury.

- ▶ Use safety wires to protect the receiving antennas against tipping/dropping. The safety wires, rope terminations and coupling links must comply in their dimensioning and condition with the regulations and standards of the country in which they are used!
-
- ▶ Position the receiving antennas in the same room in which the transmission takes place! Maintain a minimum distance of 1 m between the two receiving antennas/antenna boosters and a minimum distance of 50 cm between the antennas/antenna boosters and metal objects (including reinforced concrete walls).

Connecting the receiving antennas/antenna boosters

- ▶ Use GZL 9000 antenna cables.

i Sennheiser GZL 9000 antenna cables are available in lengths of 5 m, 10 m and 20 m.

A/AB/AD 9000:

- ▶ Connect the **RF out** sockets ④ of the antennas/antenna boosters used to the N-type sockets **RF IN A** ⑮ and **RF IN B** ⑯ of your EM 9046.

AB 9000:

- ▶ Connect the **RF IN** socket ⑥ of the two antenna boosters to one antenna each.
- ▶ Use short cables to keep the cable attenuation as low as possible.

Adjusting the receiving antennas/antenna boosters

The EM 9046 receiver controls the preselection of the booster frequency ranges. No further settings need to be made on the A/AB/AD 9000 antennas/antenna boosters.

You can also use the antennas/antenna boosters with other receivers if the following conditions are met:

- ▶ Use a receiver with booster supply voltage (e.g. EM 3732-II).
- ▶ Use a cable whose length and attenuation match the amplification of 17 dB of the A/AB/AD 9000 antennas and antenna boosters.
- ▶ Use the "Filter" rotary switch ⑧ to manually set the booster frequency range (see table on page 34).


Preparing the SKM 9000 radio microphone for use

Selecting the accupack/battery pack

For powering the SKM 9000 radio microphone, you can use:

- the **BA 60** accupack
- the **B 60** battery pack for 2 AA size batteries (1.5 V)

i Charge the **BA 60** accupack before using it for the first time (see page 89).

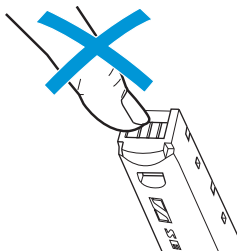

CAUTION!


Damage to the radio microphone and/or the accupack/battery pack!

If you touch the following contacts, they can become dirty or damaged:

- charging and data contacts ① of the BA 60 accupack
- data contacts ④ of the B 60 battery pack
- ▶ Do not touch the contacts of the BA 60 accupack nor the contacts of the B 60 battery pack.

Inserting batteries into the B 60 battery pack

- ▶ Insert the batteries (see diagram). Observe correct polarity when inserting the batteries.

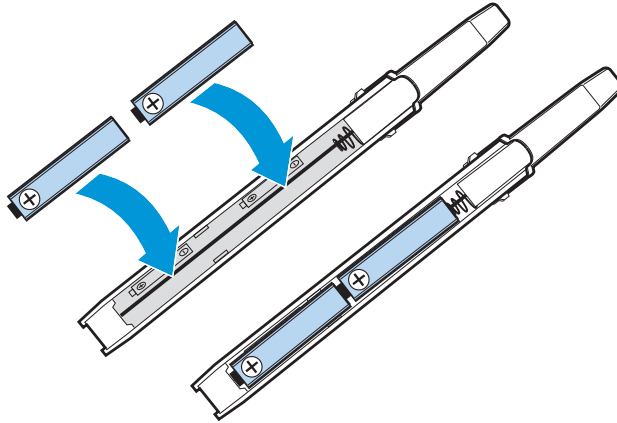

- i** Only insert high-quality AA size batteries (e.g. lithium or alkaline batteries) into the B 60 battery pack. Do not insert individual rechargeable batteries such as NiMH cells. If you insert individual rechargeable batteries, the charge status display ① will show a wrong value.

Removing and inserting the accupack/battery pack


To **remove** the accupack/battery pack:


- ▶ Push the two catches for accupack/battery pack ⑭ and pull the accupack/battery pack out of the radio microphone's body (see diagram 1).

- i** When removing the accupack/battery pack, the settings of the radio microphone are retained.

To **attach** the accupack/battery pack:

- ▶ Push the accupack/battery pack into the radio microphone's body until it locks into place with an audible click (see diagram 2).

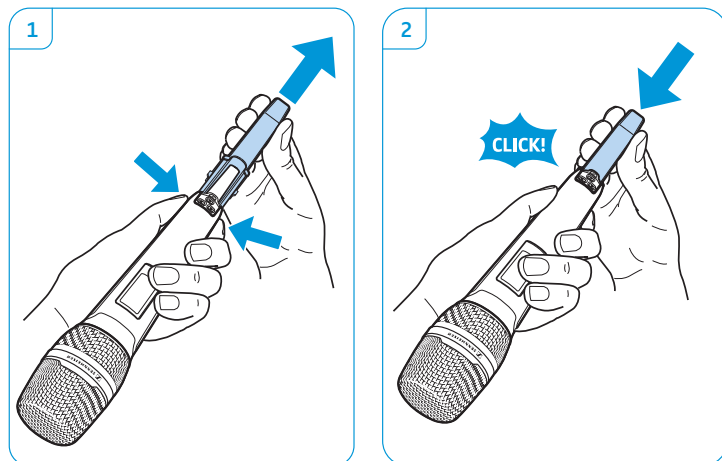

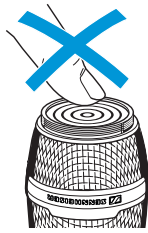

Changing the microphone head


CAUTION!

Damage to the microphone head!

If you touch contacts, they can become dirty or damaged.

- ▶ Do not touch the contacts of the radio microphone nor the contacts of the microphone head.


- ▶ Unscrew the microphone head ①.

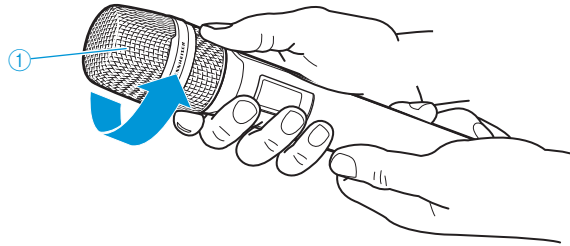

- i** With some microphone heads, the upper part of the sound inlet basket can be unscrewed. To fully unscrew the microphone head, always hold it as shown.

For an overview of suitable microphone heads, refer to the product overview on page 20.

- ▶ Screw the desired microphone head to the radio microphone. The radio microphone is operational again.

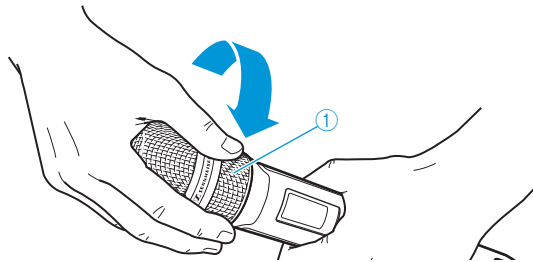

- i** When unscrewing the microphone head ① during operation, the muting function is automatically activated.


Preparing the SK 9000 bodypack transmitter for use

Selecting the accupack/battery pack

For powering the SK 9000 bodypack transmitter, you can use:

- the BA 61 accupack
- the B 61 battery pack for 3 AA size batteries (1.5 V)

- i** Charge the BA 61 accupack before using it for the first time (see page 89).

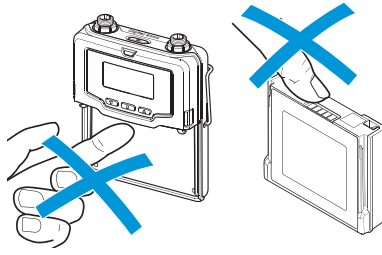

CAUTION!


Damage to the bodypack transmitter and/or the accupack/battery pack!

If you touch the following contacts, they can become dirty or damaged:

- Contacts for supply voltage and data contacts of the bodypack transmitter
 - Charging and data contacts of the BA 61 accupack
 - Data contacts of the B 61 battery pack
- ▶ Do not touch the contacts of the bodypack transmitter nor the contacts of the BA 61 accupack/B 61 battery pack.

Inserting batteries into the B 61 battery pack

- ▶ Insert the batteries (see diagram). Observe correct polarity when inserting the batteries.


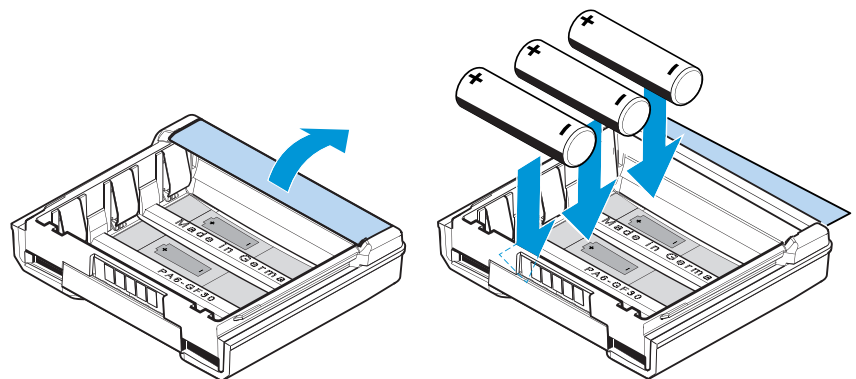


i Only insert high-quality AA size batteries (e.g. lithium or alkaline batteries) into the B 61 battery pack. Do not insert individual rechargeable batteries such as NiMH cells. If you insert individual rechargeable batteries, the charge status display ① will show a wrong value.

Removing and inserting the accupack/battery pack


To **remove** the accupack/battery pack:

- ▶ Push the two catches and pull the accupack/battery pack away from the bodypack transmitter as shown in diagram 2.

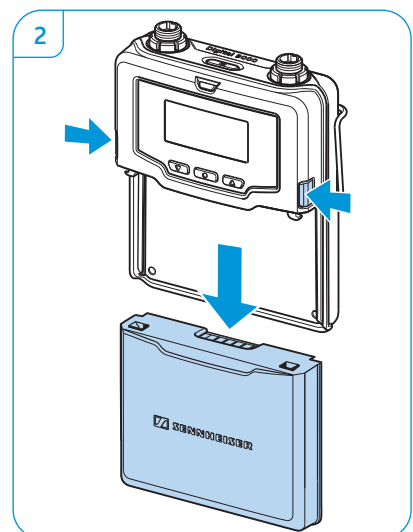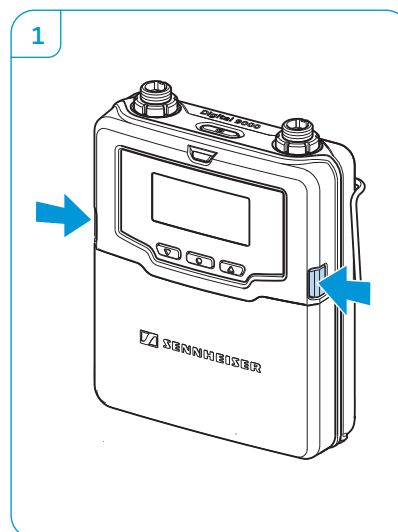

To **attach** the accupack/battery pack:


- ▶ Slide the accupack/battery pack onto the guide rails of the bodypack transmitter until it locks into place with an audible click. The bodypack transmitter is then ready for operation.

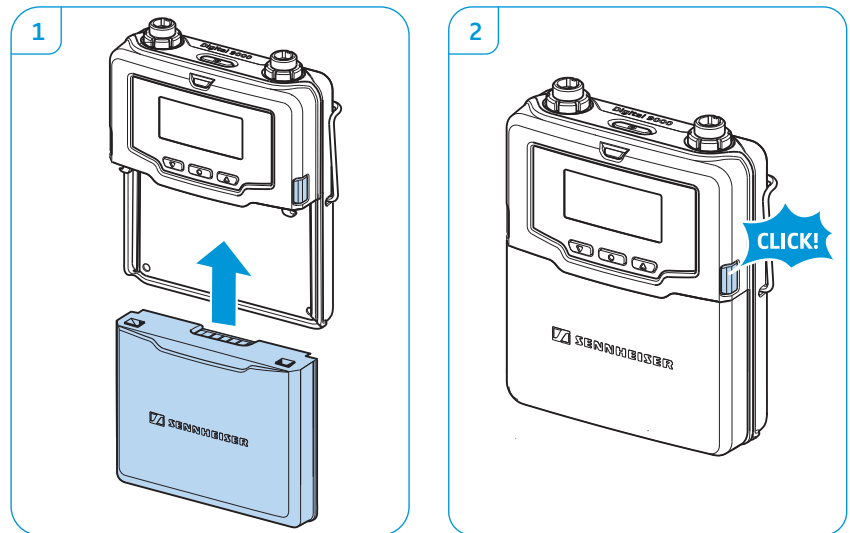

Connecting microphones and audio sources


The audio input is designed for the connection of both pre-polarized condenser microphones and other audio sources. DC powering of the condenser microphones is via the 3-pin special audio socket ①.

- ▶ Use one of the recommended Sennheiser microphones or the Sennheiser CI 1-4 line/instrument cable.
- i** For an overview of suitable microphones, refer to the product overview on page 22.
- ▶ Connect the 3-pin special audio connector of the Sennheiser microphone or the Sennheiser CI 1-4 line/instrument cable to the 3-pin special audio socket ①.
- ▶ Lock the connector by screwing down the coupling ring.

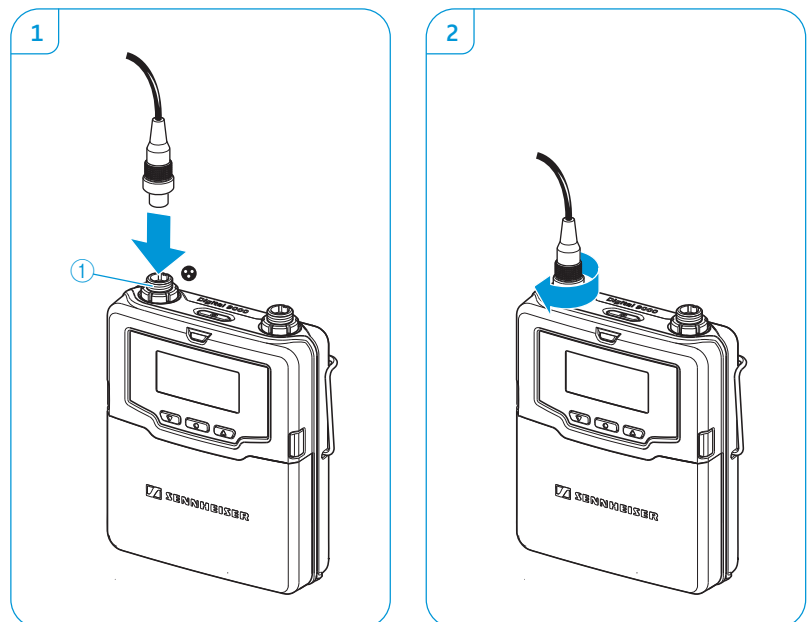

Connecting the antenna

- ▶ Only use the supplied antenna.
- ▶ Connect the antenna as shown:

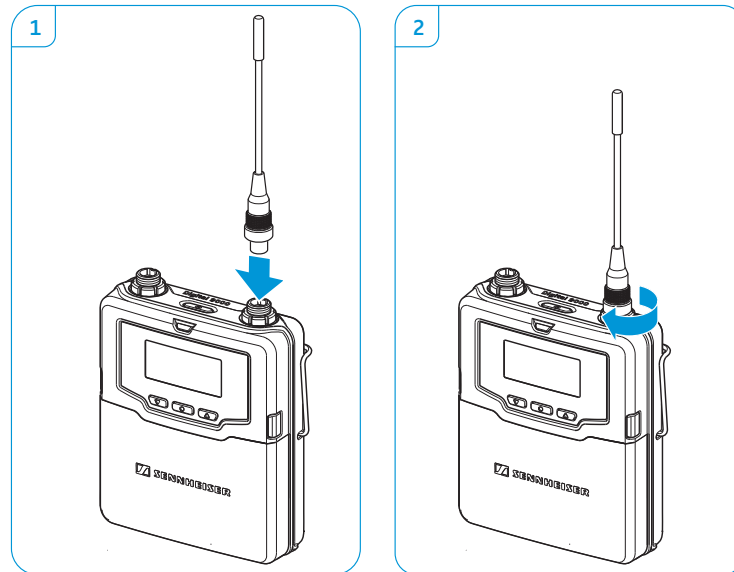

Connecting the KA 9000 COM command adapter

Using the KA 9000 COM command adapter, you can change the audio channel on the EM 9046 receiver via remote control, e.g. for stage directions.


- ▶ Connect the 3-pin special audio connector ① of the KA 9000 COM to the 3-pin special audio socket ① of the SK 9000.
- ▶ Connect the 3-pin special audio connector of the Sennheiser microphone or the Sennheiser CI 1-4 line/instrument cable to the 3-pin special audio socket ③ of the KA 9000 COM.

Preparing the L 60 charger for use

Cascading several chargers

Up to 4 L 60 charger can be cascaded together and can be powered by the NT 3-1 mains unit.

- ▶ Prepare the L 60 chargers:
 - Make sure that the chargers are **disconnected** from the mains.
 - Unscrew the two screws ⑥ at the bottom of one charger.
 - Tilt the charger to the side and slide out the rails ⑤ completely.
 - Tighten the two screws ⑥.

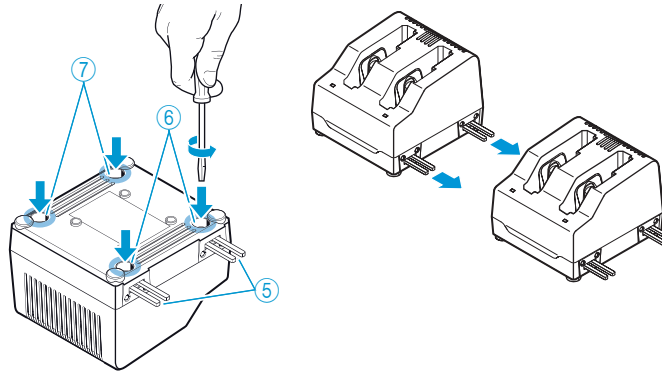

- ▶ Unscrew the two screws ⑦ at the bottom of a second charger.
- ▶ Slide the second charger onto the rails ⑤ of the first charger and tighten the two screws ⑦.
- ▶ Repeat for the other chargers.

Setting up or mounting the charger

CAUTION!


Risk of staining of surfaces!

Surfaces can be treated with varnish, polish or synthetics which might cause stains when they come into contact with other materials. Despite a thorough testing of the materials used by us, we cannot rule out the possibility of staining.

- ▶ Do not place the L 60 charger on delicate surfaces.

To fix the charger securely in place:

- ▶ Fix the charger by screwing screws (fillister head self-tapping screws as per DIN 7049, ST 3.5 x 32) through the four holes ⑧ at the bottom of the charger.

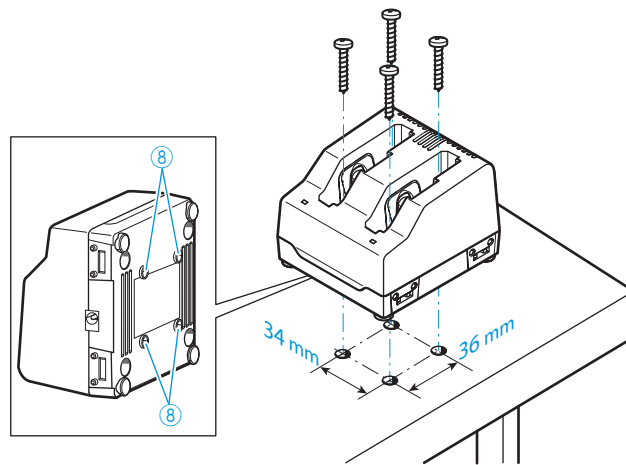

To ensure reliable operation of the L 60 and efficient charging of the BA 60/61:

- ▶ Make sure that the ambient temperature of the charger is within the operating temperature range (see page 105).
- ▶ Do not place the charger in direct sunlight or near any heat sources such as radiators, stoves, or other devices (including amplifiers) that produce heat.
- ▶ Ensure sufficient ventilation; if necessary, provide additional ventilation.


Digital 9000 Using the EM 9046



Using the EM 9046	43	Main menu "System setup"	50
Using the EM 9046 receiver	44	Extended menu "Service setup"	57
Switching the receiver on/off	44	"ch" operating mode – Configuring channels	65
"sys", "ch", "live" – operating modes at a glance	45	Overview of the "ch" menu	65
Basic functions of the Sennheiser operating menu	45	Main menu "Channel setup"	67
Displays of the Sennheiser operating menu	46	Extended menu "Transmitter setup"	71
Error and warning messages	48	"live" operating mode –	
"sys" operating mode – Configuring the system	49	Using a configured system	74
Overview of the "sys" menu	49		

Using the EM 9046 receiver

Switching the receiver on/off

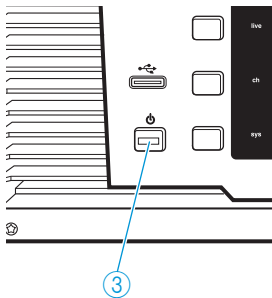

To switch the receiver on:

- ▶ Make sure the **ON/OFF** switch ① is set to position “1”.
- ▶ Press the standby button ③.
The receiver’s operating system is loaded. During loading, the LED of the standby button ③ flashes red and the display panel shows the Sennheiser start screen.
Once the operating system is fully loaded, the receiver is in “live” operating mode.

To switch the receiver to standby mode:

- ▶ Keep the standby button ③ pressed for approx. 4 seconds until the display panel goes completely off. The receiver is in standby mode.

To completely switch the receiver off and disconnect it from the mains:

- ▶ Set the **ON/OFF** switch ① to position “0”.
All daisy chained signals are interrupted, i.e.:
 - the antenna signals at the daisy chain outputs ⑮ and ⑱,
 - the booster supply voltage,
 - the signal of the external word clock generator.
- ▶ Pull out the mains plug from the wall socket to completely disconnect the receiver from the mains.

“sys”, “ch”, “live” – operating modes at a glance

“live” operating mode – Live transmission



In this mode, you can check, among other things, the following parameters during transmission:

- RF level
- True bit diversity evaluation
- Audio level
- Charge status of the BA/B 60/61 accupack/battery pack
- Remaining operating time of the BA 60/61 accupack

More information on the “live” operating mode can be found from page 74 onwards.

“ch” operating mode – Setting up channels



In this mode, you can configure channels on the receiver and then synchronize the transmitters and the receiver. More information on the “ch” operating mode can be found from page 65 onwards.

“sys” operating mode – Configuring the system



In this mode, you can configure transmitters and the receiver. More information on the “sys” operating mode can be found from page 49 onwards.

Basic functions of the Sennheiser operating menu

A special feature of the Sennheiser 9000 series is the straightforward, intuitive operating concept. As a result, you can act quickly and precisely – even in stressful situations, for example on stage or during a live show or presentation.

Selecting the operating mode

- ▶ Press the respective button to select the desired operating mode.



Calling up and selecting menu items, changing and storing settings, cancelling an entry

In “ch” and “sys” operating mode, the following operating elements are available:

Jog dial



- ▶ Turn the jog dial to select a different menu item or a different setting.



- ▶ Press the jog dial to call up a menu item or to confirm a selection.

save button





- ▶ Press the save button  to store settings.


esc button







- ▶ Press the esc button to cancel entries.

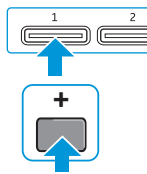In addition, in “ch” operating mode, the channel 1–8 button  and the multiple channel selection button +  are available:

Channel 1–8 button and multiple channel selection button +




Select a channel or press the multiple channel selection button +  and then select several channels simultaneously.


 The channel 1–8 button  and the multiple channel selection button +  are also available in “live” operating mode.

Displays of the Sennheiser operating menu


The Sennheiser operating menu consists of the **menu selection** in the upper part, where you can select and call up menu items, and the **main screen** in the lower part:


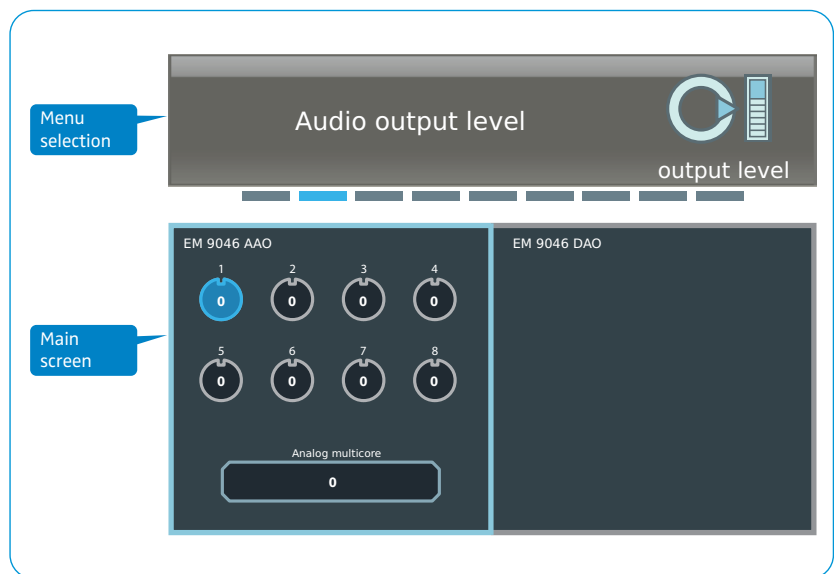


Menu selection

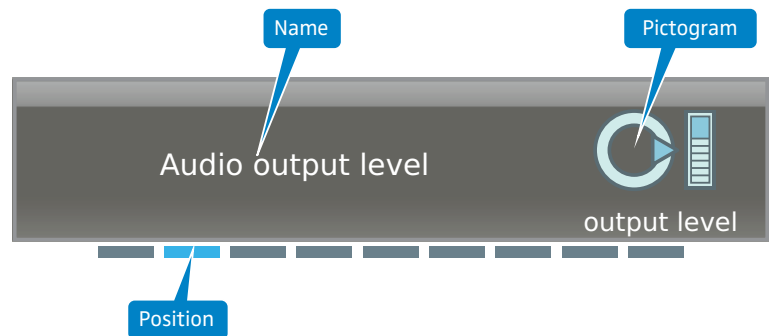

The name of the menu item, a pictogram and the position of the menu item in the current operating menu are displayed in the menu selection.

If you call up a menu item by pressing the jog dial , the menu selection is framed in blue:

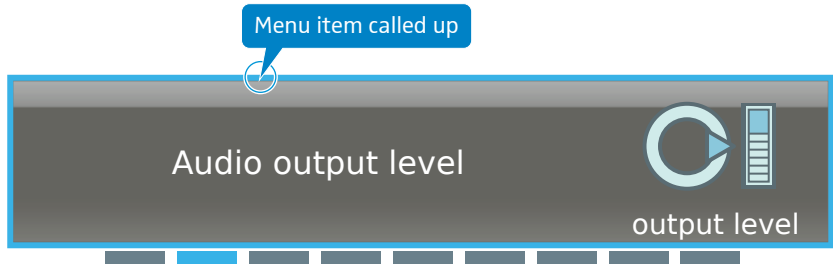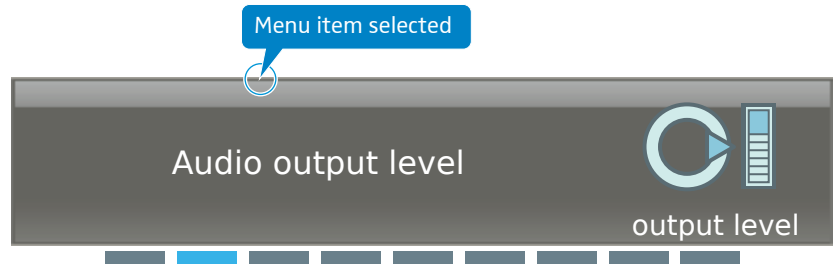

When a menu item has only a few options to choose from, this can be done directly via the menu selection (see for example the "word clock" menu item on page 55).

When a menu item has extended options, the settings are adjusted on the main screen (here by way of example of the "Audio output level" menu item):


Main screen




Error and warning messages

Error and warning messages are displayed in white letters. The display panel is highlighted in orange.

Example: "Frequency out of booster range" warning message

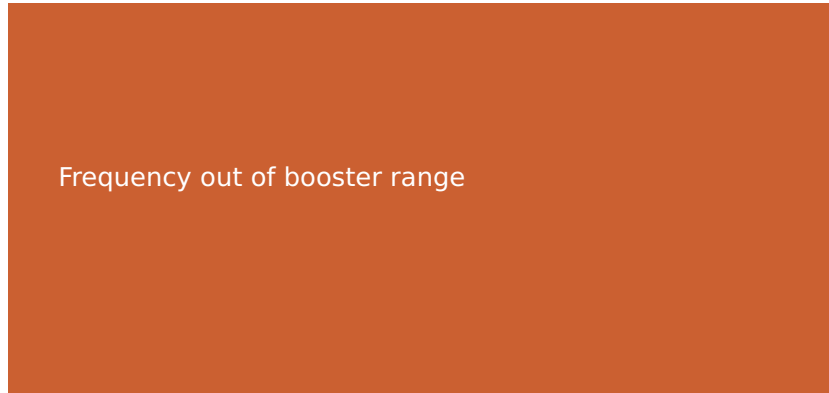


















You can hide error/warning messages by pressing the `esc` button . In order to check if errors or warnings are still present, you can call up the "System check" menu item in the extended menu "Service setup" of the system menu. For more information, refer to page 60.

“sys” operating mode – Configuring the system

In “sys” operating mode, you can configure the transmitters and the receiver.

Overview of the “sys” menu

Main menu “System setup”			Page
	Frequency scan	Performs a frequency scan	50
	Audio output level	Adjusts the output level	54
	Word clock	Configures the word clock	55
	Cable attn	Displays the cable attenuation between booster output and RF input of the EM 9046	55
	Load config	Loads a configuration	56
	Save config	Saves a configuration	56
	Network	Configures the network	57
	Brightness	Adjusts the brightness	57
	Service setup	Calls up the extended menu “Service setup”	–

Extended menu “Service setup”			Page
	System setup	Calls up the main menu “System setup”	–
	Factory reset	Loads the factory default settings	58
	Date & time	Adjusts the date and time	59
	Op hours	Displays the operating hours	59
	Log	Displays the event logs	60
	System check	Displays the system status	60
	HW setup	Displays the hardware configuration and status	60
	Firmware	Displays the firmware versions and updates the firmware of the transmitters and boosters	63


Main menu “System setup”

To get into the main menu:

- ▶ Select the “sys” operating mode.

In the main menu, you can adjust the following settings:

“Frequency scan” – Performing a frequency scan

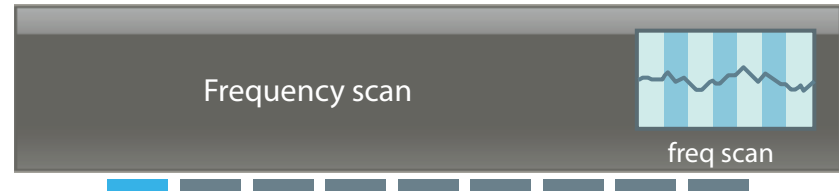

During the frequency scan, the interference levels received by the antennas are recorded and displayed for the booster frequency ranges 1 to 8.


- i** Once you have performed a frequency scan, you can activate a booster frequency range, assign frequency presets to channels, adjust the settings to be transferred to your transmitters and synchronize the transmitters and the receiver via infra-red. This chapter provides explanations about all the steps mentioned and, where necessary, cross-reference to other chapters.

Before performing a frequency scan, carry out the following steps:

- ▶ Switch **off** all transmitters that you want to wirelessly connect to the EM 9046.
- ▶ Switch **on** all possible sources of interference (e.g. light sources, intercom links, video walls) and all other transmission links.

To perform a frequency scan:

- ▶ Call up the “Frequency scan” menu item. The last activated frequency range is highlighted in blue.
- ▶ Turn the jog dial **17** until the text “start scan” at the bottom margin of the screen is highlighted in blue:

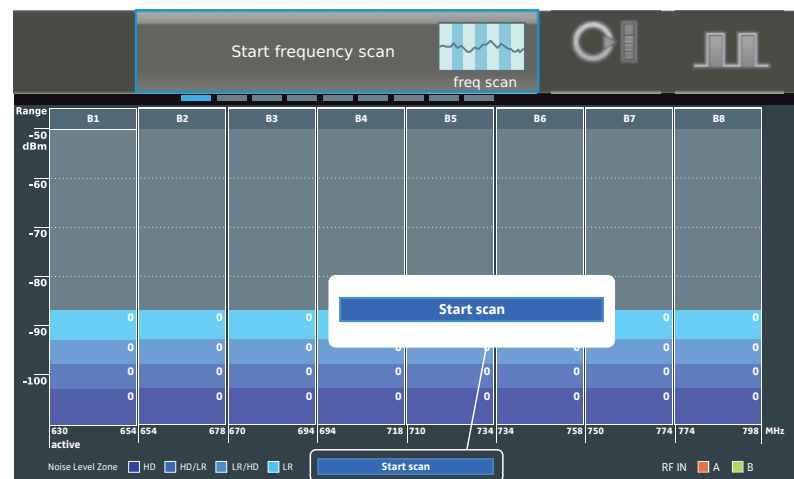


- ▶ Start the frequency scan by pressing the jog dial **17**.
Please note: All audio outputs will be muted!

- i** The duration of the frequency scan depends on the number of the built-in EM 9046 DRX receiver modules. The more modules you use, the faster the frequency scan is performed.

The interference levels received by the antennas are recorded and displayed. The interference levels are divided into four interference zones: "HD", "HD/LR", "LR/HD" and "LR". The lower the zone, the lower the received interference level.

In addition, the number of unused frequency presets is displayed per booster frequency range and per interference zone. The number of unused frequency presets depends on the number, the height and the frequency of the received interference levels.

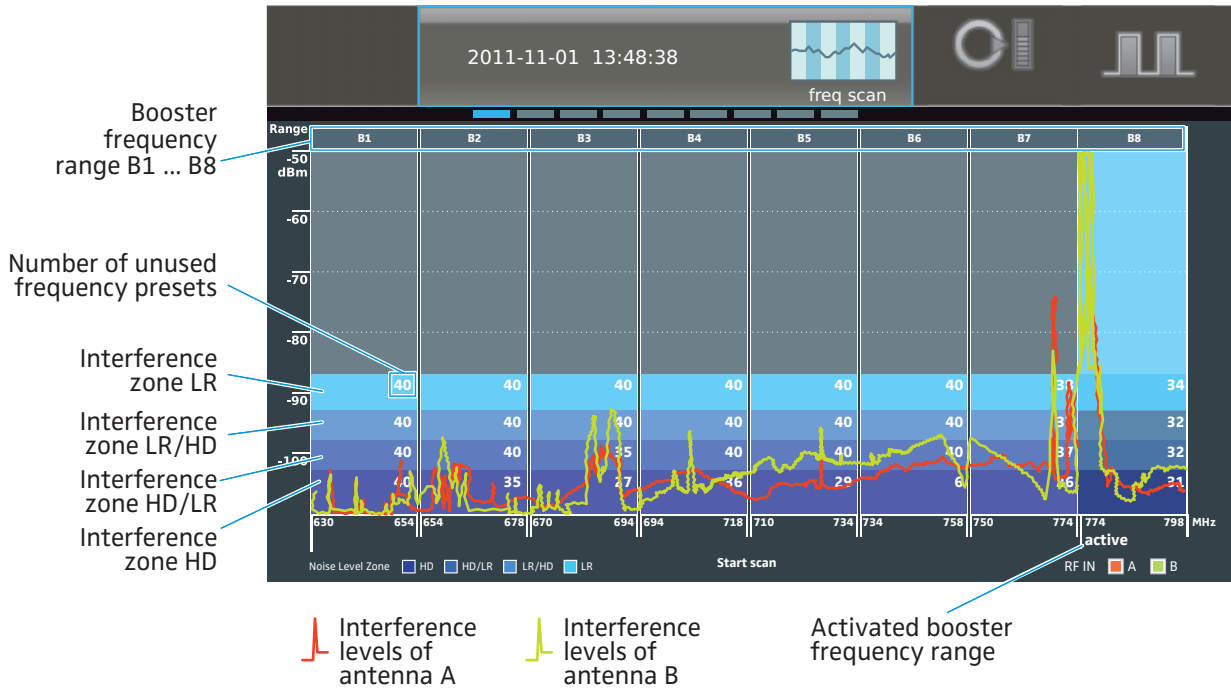

The selection of a suitable booster frequency range depends on several factors:

- Required number of transmission links
- Sufficient number of unused frequency presets
- Sufficient number of transmitters of the correct type (in this example, transmitters of type B1–B4 or B5–B8, see page 34)
- Recommended transmission mode "HD" or "LR":

"HD (High Definition)": Transmission of an audio signal without audio data compression. As a result, the audio signal remains pure and unadulterated. In "HD" transmission mode, the range can be restricted compared to "LR" transmission mode.

"LR (Long Range)": Transmission of an audio signal whose bit rate is reduced – before transmission – by an audio data compression technique (SeDAC, Sennheiser Digital Audio Codec). This compression technique provides excellent audio quality and a large transmission range. The sensitivity to interference is reduced compared to "HD" transmission mode.

Interference levels of antenna A/B in interference zone	"HD"	"HD/LR"	"LR/HD"	"LR"
Recommended transmission mode	"HD"	"HD"* or "LR"	"LR" or "HD"**	"LR"*

* Transmission mode can be used with a restricted range

** It might be that the transmission mode can only be used with a severely restricted range

Let us assume that you want to set up 8 transmission links and transmit in "HD" transmission mode with the maximum possible transmission range.

Have a look at interference zone "HD" (see also above diagram): All booster frequency ranges except for B6 provide a sufficient number of unused frequency presets.

Booster frequency ranges	B1	B2	B3	B4	B5	B6	B7	B8
Number of unused frequency presets in interference zone "HD"	40	35	27	36	29	6	26	31
Can the booster frequency range be used?	✓	✓	✓	✓	✓	–	✓	✓

Example 1:
8 transmitters of type B1–B4

Let us assume that you have 8 transmitters of type B1–B4:

Is there a sufficient number of transmitters of the correct type?	B1	B2	B3	B4	B5	B6	B7	B8
	✓	✓	✓	✓	–	–	–	–

You can use any of the booster frequency ranges B1–B4 but you should select the booster frequency range with the highest number of unused frequency presets: B1.

Example 2:
6 transmitters of type B1–B4,
8 transmitters of type B5–B8



Let us assume that you have only 6 transmitters of type B1–B4 but 8 transmitters of type B5–B8.



Is there a sufficient number of transmitters of the correct type?	B1	B2	B3	B4	B5	B6	B7	B8
	–	–	–	–	✓	✓	✓	✓

The number of transmitters is sufficient but the booster frequency range B6 does not provide a sufficient number of unused frequency presets in interference zone "HD". You could therefore use the booster frequency ranges B5, B7 or B8 but you should select the booster frequency range with the highest number of unused frequency presets: B8.


In this example, there was a sufficient number of unused frequency presets available for interference zone "HD", allowing you to adjust the "HD" transmission mode for all channels. If this is not the case, you can, in a later step, also adjust the "LR" transmission mode for individual channels.

To activate the booster frequency range:

- ▶ Select a suitable booster frequency range by turning the jog dial . The frequency range is highlighted in blue.
- ▶ Activate the booster frequency range by pressing the jog dial . "active" appears below the activated booster frequency range (see above diagram).

You can now finish the frequency scan and store the previously activated range by pressing the  save button  or you can switch to the enlarged view of the activated booster frequency range and assign frequency presets to the channels. More information can be found on the following pages.

- ▶ Switch to the enlarged view of the activated booster frequency range by pressing the jog dial again after activation:

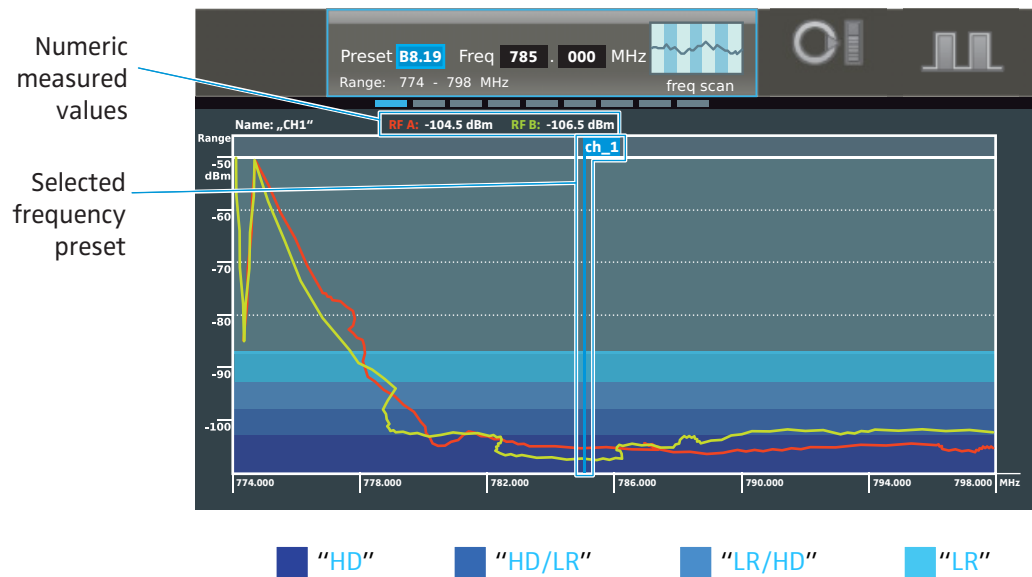

- ▶ Select one of the channels 1–8 by pressing its channel button 23. A mark with a flag and a channel number appears.
- ▶ Move the mark by turning the jog dial 17. The mark snaps into position on the frequency presets.
- ▶ Select a frequency preset.
 - The numeric values of the measured interference levels for antenna A and antenna B are additionally displayed at the top margin of the screen.
 - The interference levels of both antennas should be within or below the interference zone that is required or useful for this channel (see page 50 and 52) and should be as low as possible.

i If you do not want to use a frequency preset but you want to set a frequency yourself, proceed as follows:

- ▶ Press the jog dial.
 - Each time you press the jog dial, you switch between the "Preset" settings and direct frequency setting in MHz and kHz steps.
- ▶ Set the frequency.
 - Maintain a frequency spacing of at least 600 kHz in order to avoid intermodulation interference.
 - Please observe the flag position of the selected frequency preset: If the flag appears on the left or right margin and is pointing outwards, the frequency is outside the selected booster frequency range.
- ▶ Select the next channel 1 ... 8 and proceed as described above.
- ▶ Once you have selected a frequency preset for all desired channels, press the Save button 16. Your settings are stored and the receiver switches to the main menu "System setup".

To switch to the main menu without storing your settings:


- ▶ Press the esc button 22.

To configure your transmitters:

- ▶ Change to the “ch” operating mode on the EM 9046 (see page 65).
- ▶ Select one of the channels for which you have stored frequency presets.
- ▶ Call up the extended menu “Transmitter setup” and then call up the “RF mode” menu item.
- ▶ Adjust the transmission mode (“HD” or “LR”) depending on the interference zone of the channel (see also table on page 52).
- ▶ Configure your channels as described from page 65 onwards.
- ▶ Synchronize the transmitters and the receiver as described on page 66.
- ▶ Repeat for the other channels.
- ▶ Perform a walk test to check the reliability of your transmission links (see page 70).
- ▶ Change the transmission mode for the channels with reception problems and then synchronize the transmitters and the receiver again.

If the reception problems persist, select a different booster frequency range.

“Audio output level” – Adjusting the analog output levels

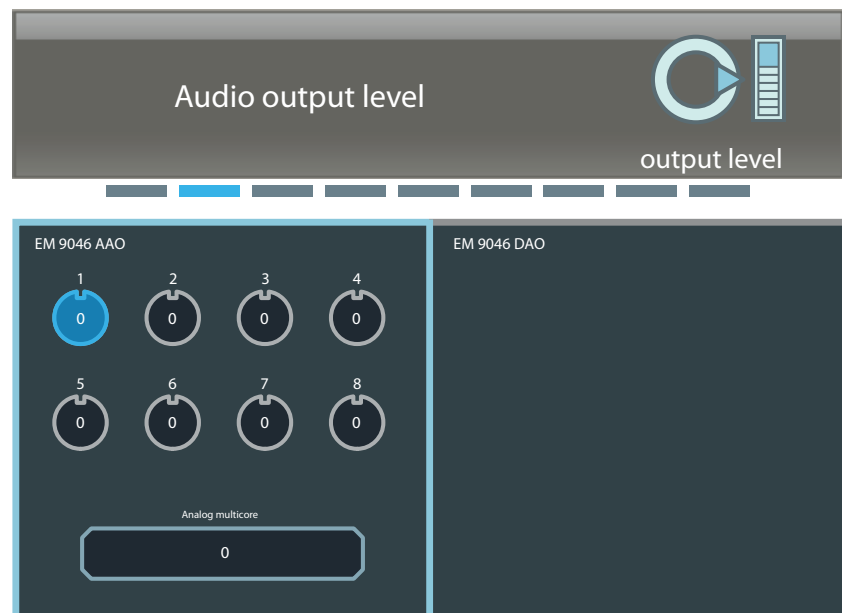

Via the “Audio output level” menu item, you can adjust the level of all or individual channels of the Analog Audio Out (AAO) module.

- ▶ Call up the “Audio output level” menu item.
The installed audio modules are displayed as follows:
 - digital audio modules: “Slot digital”;
 - analog audio modules: “Slot analog”;
 - not installed audio modules: “Slot not available”.
- ▶ Select individual or all channels of the AAO module by turning the jog dial to the left/right. Selected channels are highlighted in blue.
- ▶ Call up the level adjustment by pressing the jog dial. The outer ring of the channel is highlighted in blue.


i If you call up the level adjustment of all channels, the smallest value adjusted for a channel is displayed in the menu selection. By turning the jog dial, you can adjust the level of all channels to the value displayed in the menu selection.

- ▶ Adjust the level.
The setting becomes effective immediately.
- ▶ Press the jog dial to confirm your setting and to return to the channel selection.
- ▶ Adjust the level of further channels.
- ▶ Press the **save** button (16). Your settings are stored and the receiver then switches to the main menu.

To change to the main menu without storing your settings:

- ▶ Press the **esc** button (22).


“Word clock” – Configuring the word clock

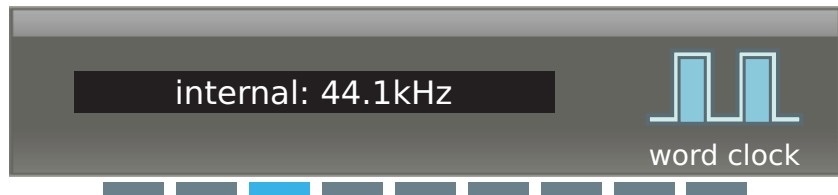

Via the “word clock” menu item, you can ...

- switch between an internally generated and an external word clock signal;
- adjust the sampling rate (44.1 kHz, 48.0 kHz, 88.2 kHz or 96.0 kHz) with which – with an internally generated word clock signal – analog signals are digitalized and output at the XLR-3 sockets (11).

“Cable attn” – Displaying the cable attenuation

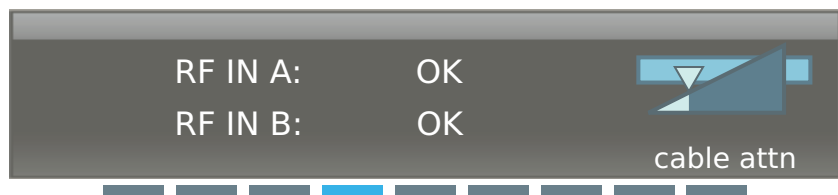

The EM 9046 receiver measures the cable attenuation between the antenna boosters and the antenna inputs (18) and (16) and automatically compensates for it:


- during the boot routine;
- when an antenna booster is connected.

The “Cable attn” menu item displays the status of the cable attenuation.

i Always use GZL 9000 system cables to obtain optimum attenuation values.

If “Too high” is displayed, check and optimize the installation between the EM 9046 and the antenna boosters.

“Load config” – Loading a configuration

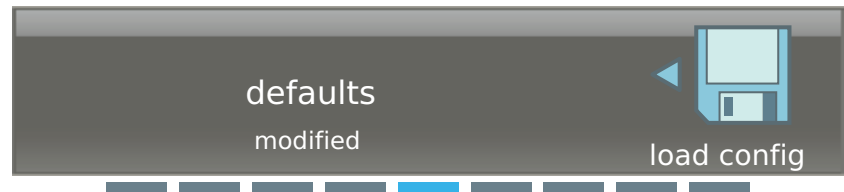

The “load config” menu item allows you to load up to 10 saved settings of your system configuration (see also the “save config” menu item).

In addition, you can ...

- load the last configuration saved (“last”).
- load the default configuration (“defaults”). In this case, the settings of the menu items mentioned in the section “save config” are reset to their factory defaults.

“Save config” – Saving a configuration

Via the “save config” menu item, you can save your system configuration on up to 10 storage memories.



The settings of the following menu items are saved:

Menu	Menu item	Page
Main menu “System setup”	Output level	54
	Word clock	55
	Network name of the network	57
	Network IP settings	57
	Brightness	57
Extended menu “Service setup”	Date & time selected time zone	59
Main menu “Channel setup”	Frequency	67
	Name	68
	Cmd mode	68
	Encryption	70
	Gain	72
	Low cut	72
	Display	73
	Lock	73
	Cable	73

The following settings/values are **not** saved:

- time and date settings of the “Date & time” menu item (see page 59) and
- operating hours (displayable via the “op hours” menu item, see page 59).

“Network” – Configuring the network

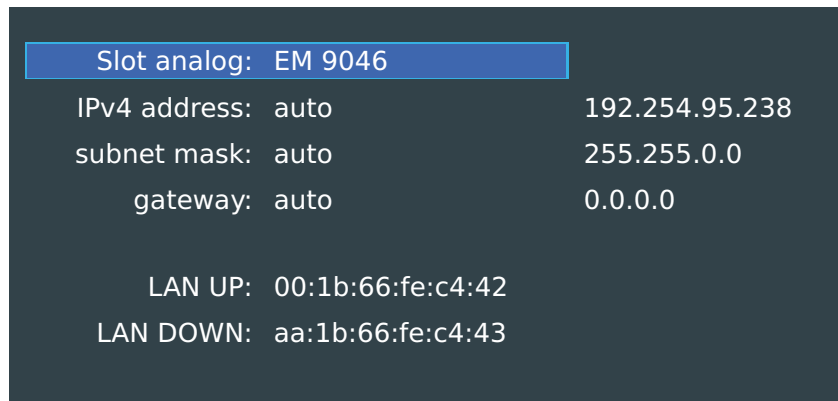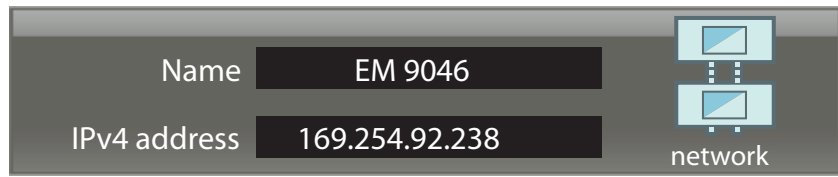

Via the “Network” menu item, you can assign the receiver a network name and select whether to obtain an IP address automatically or to enter the IP address manually. In addition, this menu item displays the unchangeable MAC addresses of the network interfaces of your receiver.

“Brightness” – Adjusting the brightness



Via the “Brightness” menu item, you can adjust the brightness in 8 steps. This also adjusts the brightness of the LED lighting.

Extended menu “Service setup”

To get into the extended menu “Service setup”:


- ▶ In “sys” operating mode, turn the jog dial until “Service setup” appears.
- ▶ Press the jog dial.
The extended menu “Service setup” appears.

To change from the extended menu back to the main menu:

- ▶ Turn the jog dial until “System setup” appears.
- ▶ Press the jog dial.
You are back to the main menu “System setup” of the “sys” operating mode.

In the extended menu, you can adjust the following settings:

“Factory reset” – Resetting the receiver to the factory defaults

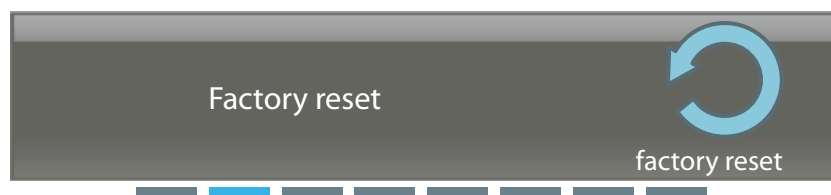

Via the “factory reset” menu item, you can reset your receiver to the factory default settings. To do so, follow the prompt on the main screen to press the **Save** button **16** for 5 seconds.

The following menu items are reset to their factory default settings:


Menu	Menu item	Factory default setting	Page
Main menu “System setup”	Output level	0 dB	54
	Word clock	96 kHz	55
	Network name of the network	EM9046_1	57
	Network IP settings	Auto	57
	Brightness	Medium level	57
Extended menu “Service setup”	Date & time selected time zone	Amsterdam, Berlin, Bern, Rome, Stockholm, Vienna	59
Main menu “Channel setup”	Frequency	Without connected boosters: 470.000 MHz With connected boosters: A1.1–A1.8 or B1.1–B1.8, allocated to the channels 1–8	67
	Name	Ch1–Ch6	68
	Cmd mode	Toggle	68
	Encryption	Off	70
	Gain	0 dB	72
	Low cut	30 Hz	72
	Display	Name	73
	Lock	Off	73
	Cable	Line	73

- In addition, all configurations saved in the “save config” menu item are deleted.
- The event log is deleted and then the deleting itself is logged.


The following settings/values are **not** deleted:

- time and date settings of the “Date & time” menu item (see page 59) and
- operating hours (displayable in the “op hours” menu item, see page 59).


“Date & time” – Adjusting the date and time

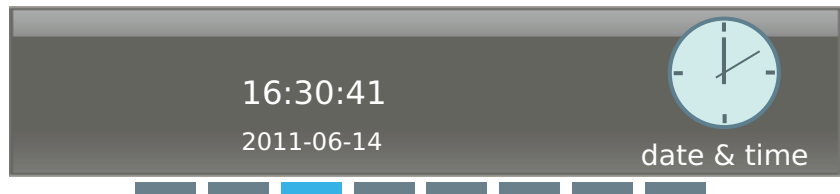

Via the “Date & time” menu item, you can select your time zone and then adjust the date and time:

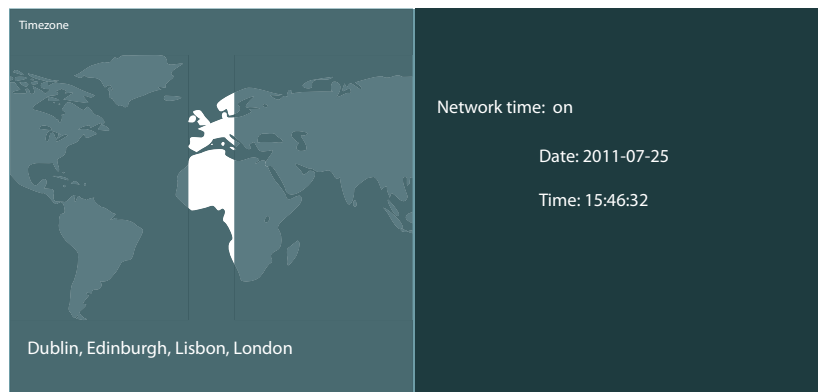


“OP hours” – Displaying the operating hours

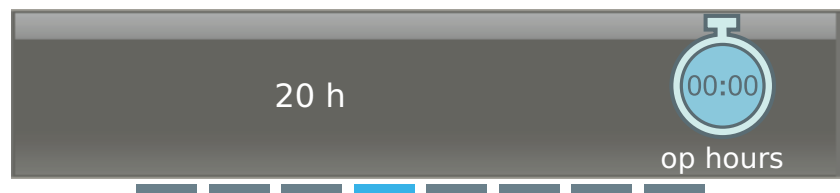

The “op hours” menu item displays the operating hours of the EM 9046.

“Logfile” – Displaying the event logs

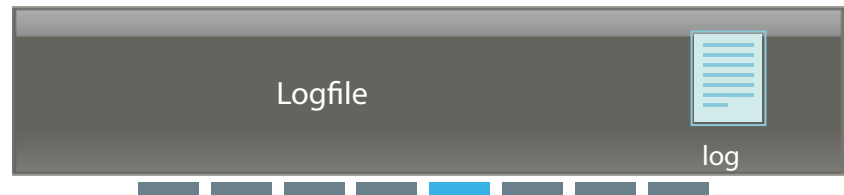

The EM 9046 receiver logs user actions and erroneous and suspicious system states. The log records the last 1000 events.

The log entries contain the following information:

- Time stamp (format “YYYY-MM-DD hh:mm:ss”)
- Degree of severity (“info”, “warning” or “error”)
- Message

The following events are logged:


- System starts and (controlled) stops
- System error messages (error screens)
- Channel warnings
- Each storing of settings with specification of the changed values
- Each modification of values via the WSM software
- Each synchronization with a transmitter
- Software updates


“System check” – Displaying current error and warning messages




Via the “[system check](#)” menu item, you can display current error and warning messages.

If, for example, a booster is removed during operation or if it is missing when the EM 9046 is started, the following warning message appears:

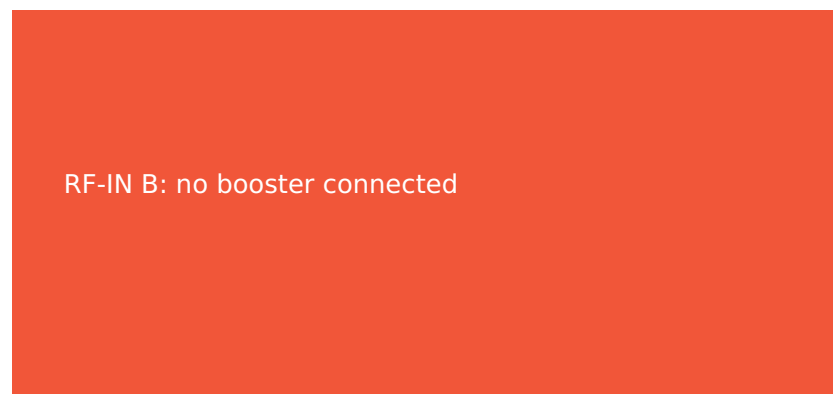


If you hide this warning message by pressing the [esc](#) button , the missing booster continues to be displayed in the “[system check](#)” menu item.

The menu selection changes its appearance when a warning message is present:

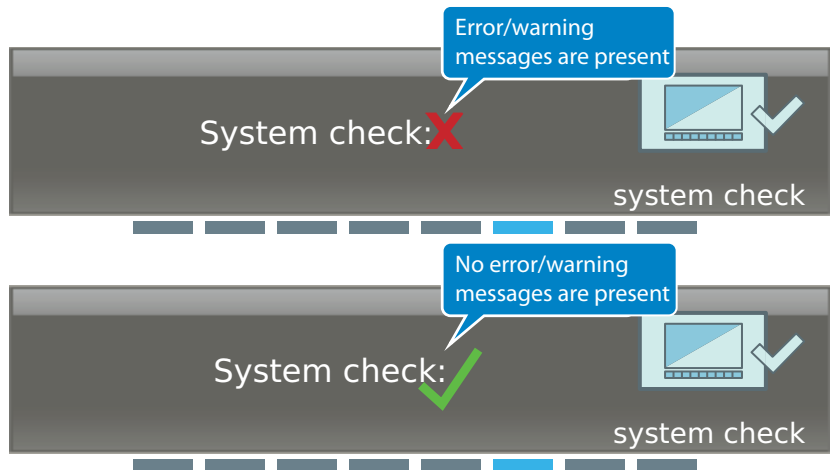


Call up this menu item to get detailed information on error and warning messages.

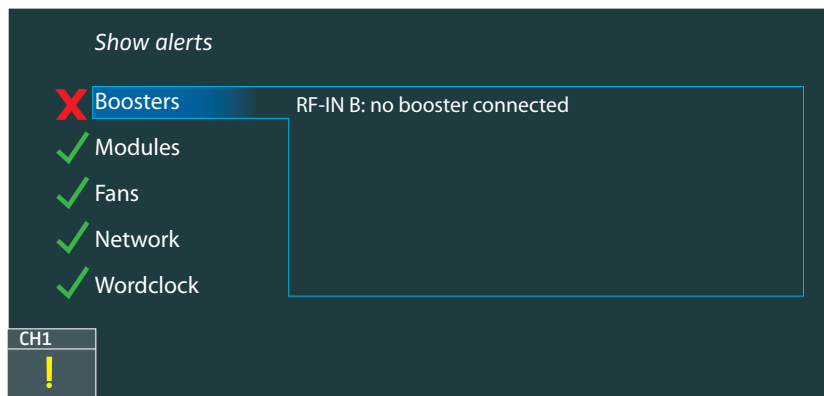


If you call up the first menu entry "Show alerts", the warning message is displayed again and the display panel is highlighted in orange.


"HW setup" – Displaying the EM 9046's hardware configuration and confirming a modified configuration

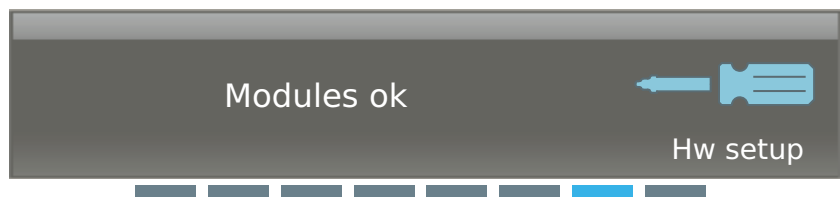

While the operating system of the EM 9046 starts up, it checks the receiver's hardware configuration for modifications. Modifications of the hardware configuration are indicated by warning messages.

If, for example, a DAO module has been removed, the following warning message appears:

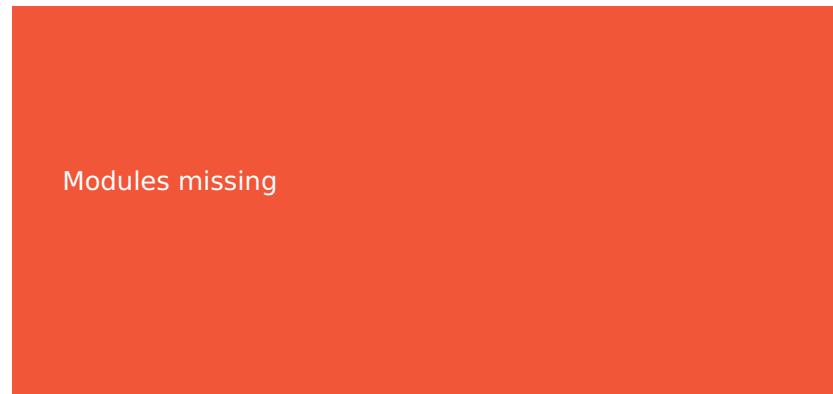

If you hide this warning message by pressing the **esc** button , the missing module is displayed in the “hw setup” menu item with the status “missing”:



Hardware setup			Press SET to confirm
Slot	Module type	State	
RX1	EM 9046 DRX	ok	
RX2	EM 9046 DRX	ok	
RX3	EM 9046 DRX	ok	
RX4	EM 9046 DRX	ok	
RX5	EM 9046 DRX	ok	
RX6	EM 9046 DRX	ok	
RX7	EM 9046 DRX	ok	
RX8	EM 9046 DRX	ok	
OUT1	EM 9046 AAO	ok	
OUT2	EM 9046 DAO	missing	

If you have extended the EM 9046’s hardware configuration, this is displayed in the “hw setup” menu item with the status “added”:


Hardware setup			Press SET to confirm
Slot	Module Type	State	
RX1	EM 9046 DRX	ok	
RX2	EM 9046 DRX	ok	
RX3	EM 9046 DRX	ok	
RX4	EM 9046 DRX	ok	
RX5	EM 9046 DRX	ok	
RX6	EM 9046 DRX	ok	
RX7	EM 9046 DRX	ok	
RX8	EM 9046 DRX	ok	
OUT1	EM 9046 AAO	ok	
OUT2	EM 9046 DAO	added	

In both cases, the “Press SET to confirm” button is highlighted in blue.

In the “hw setup” menu item, you confirm modifications as follows:

- ▶ First press the jog dial.
The “Press SET to confirm” button is framed in blue and “Press save to confirm hw setup” appears in the menu selection.
- ▶ Press the  button .

“Firmware” – Displaying the hardware versions/firmware versions and updating the firmware

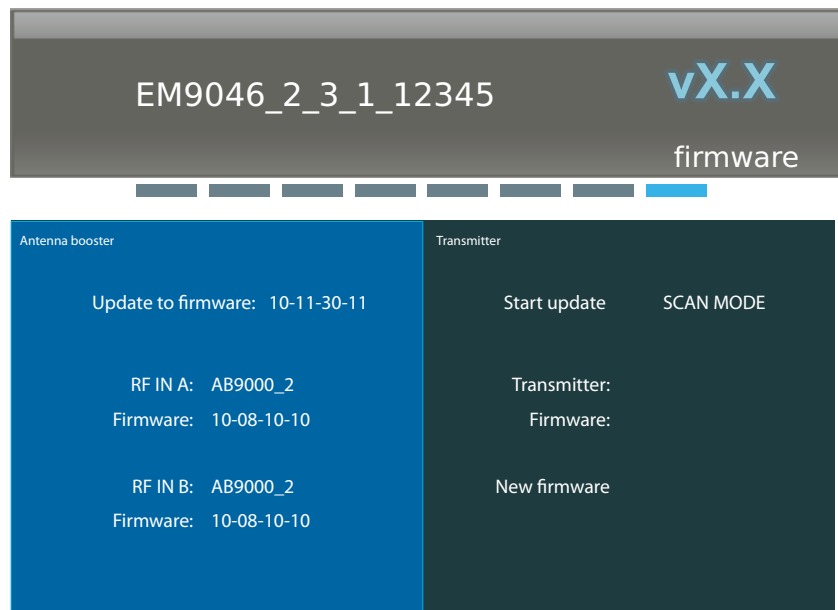

If you update the EM 9046 receiver’s firmware using the WSM software, the current firmware versions of the 9000 series boosters and transmitters are also stored on the receiver.

Via the “[Firmware](#)” menu item, you can display the firmware versions of the receiver, the boosters and the transmitters and update the firmware of the boosters and the transmitters.

The currently installed firmware version of the EM 9046 is displayed in the menu selection (see above).

The currently installed firmware version and the installable firmware (“[Update to Firmware](#)”) of connected boosters/transmitters are displayed in the “[Antenna Booster](#)” area of the main screen.

To update the firmware of the boosters:


- ▶ Using the jog dial, select the “[Antenna Booster](#)” area of the main screen. The “[Antenna Booster](#)” area is highlighted in blue.
- ▶ Press the jog dial. The firmware is updated. The update process can take up to 40 seconds. Do not interrupt the infra-red transmission during the update process.

To read out and, if necessary, update the firmware of your transmitters:

- ▶ Make sure the accupacks of your transmitters are fully charged.
- ▶ Using the jog dial, select the “[Transmitter](#)” area of the main screen. The “[Transmitter](#)” area is highlighted in blue.

- ▶ Press the jog dial.

The infra-red interface ⑭ is activated and flashes blue, the “Start update” menu entry is highlighted in blue:

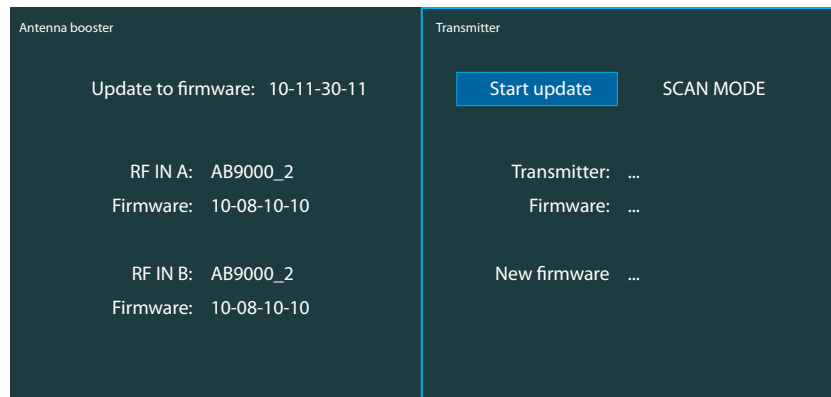

- ▶ Place the infra-red interface of a transmitter in front of the infra-red interface ⑭ of the EM 9046.

The currently installed firmware version of the transmitter and the installable firmware are displayed.

- ▶ Press the jog dial.

First, the transmitter is read out and “Scanning transmitter ...” appears in the menu selection of the receiver’s display panel. Then, the transmitter firmware is updated: the infra-red interface flashes faster, “Updating transmitter ... (ca. xx s)” appears in the menu selection of the receiver’s display panel together with a time specification in seconds. Do not interrupt the infra-red transmission during the update process.

- i** During the update, the following icon appears on the display panel of your transmitter:



If the firmware update was successful, this icon disappears and “Transmitter fw update successful” appears in the menu selection of the receiver’s display panel.

If the update fails, the following icon appears on the display panel of your transmitter:



In addition, the error message “Error: Transmitter fw update failed” briefly appears in the menu selection of the receiver’s display panel.

In this case, place the infra-red interface of the transmitter in front of the infra-red interface ⑭ of the EM 9046 and update the transmitter firmware without interrupting the infra-red transmission.

To read out and, if necessary, update the firmware of additional transmitters:

- ▶ Place the infra-red interface of the transmitters in front of the infra-red interface ⑭ of the EM 9046, one after the other, and proceed as described above.

To return to the main menu:





 


- ▶ Press the `esc` button ②.









“ch” operating mode – Configuring channels

In “ch” operating mode, you can configure channels. Some of the settings that can be made can be synchronized via infra-red between the receiver and the transmitters. These settings are marked with a ✓ in the **sync** column (see also next page).

In “ch” operating mode, you can also select channels for the headphone monitoring. To do so, proceed as described on page 74.

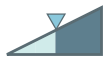Overview of the “ch” menu

Main menu “Channel setup”			sync	Page
	Frequency	Selects a frequency preset or sets the frequency manually	✓	67
	Name	Enters a channel name	✓	68
	CMD mode	Configures audio and command outputs		68
	CH standby	Mutes the channels		69
	Encryption	Binds the audio signal to the receiver and protects against eavesdropping	✓	70
	RF level rec	Records the antenna signals and the diversity evaluation		70
	Transmitter setup	Calls up the extended menu “Transmitter setup”		–

Extended menu “Transmitter setup”			sync	Page
	Channel setup	Calls up the main menu “Channel setup”		–
	Rf mode	Adjusts the transmission mode	✓	72
	Gain	Adjusts the transmitter’s input gain	✓	72
	Low cut	Sets the transmitter’s low-cut filter	✓	72
	Display	Selects the transmitter’s standard display	✓	73
	Lock	Activates/deactivates the transmitter’s lock mode	✓	73
	AF source	Displays the microphone head (SKM)/audio source and cable emulation (SK)		73
	Cable	Emulates different instrument cable lengths (SK)	✓	73

To synchronize the settings with your transmitters via infra-red:

- ▶ Select one of the channels 1–8.
- ▶ Switch on the transmitter to which you want to assign this channel.
- ▶ Press the **syn** button ⑳ on the EM 9046.
The receiver switches to synchronization mode and the **syn** LED ⑫ flashes.
- ▶ Place the transmitter's infra-red interface in front of the infra-red interface ⑭ of the receiver. Maintain a distance of approx. 10–20 cm between the infra-red interfaces.
The transmitter and receiver are synchronized:
 - After pressing the **syn** button ⑳, the receiver's infra-red interface searches for a suitable transmitter infra-red signal for 12 seconds.
 - You can interrupt the synchronization at any time by pressing the **syn** button ⑳ again.
 - If a problem occurs during the synchronization process, read the chapter "If a problem occurs ..." on page 95.
- ▶ Repeat the above steps for the remaining transmitters.

Main menu “Channel setup”

To get into the main menu:


- ▶ Select the “ch” operating mode.
- ▶ Select one or several channels (see page 46).
- ▶ Call up the menu items described in the following and adjust your settings.



If no channel is selected, “Please select Channel” is displayed in the menu selection.

- ▶ Press the save button to store your settings.
- ▶ Synchronize your settings via infra-red (see page 66).

“Frequency” – Selecting a frequency preset or setting a frequency manually

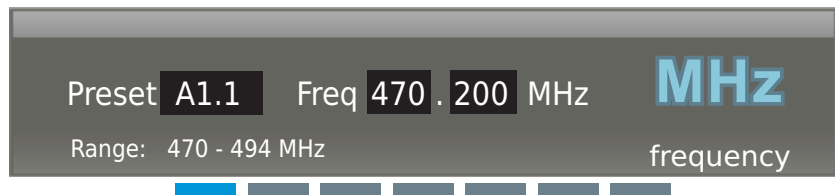

Via the “Frequency” menu item, you can select a frequency preset for the active booster frequency range or set the frequency manually. In the above diagram, range “A1” is active. The frequency range is from “470-494 MHz”. For information on how to activate a booster frequency range, refer to page 52.

- ▶ Either select a frequency preset (“A1.1” ... “A1.40” in the above diagram) or set the frequency manually (“U”). If you set the frequency manually, make sure to set a frequency within the current 24 MHz booster frequency range and maintain a frequency spacing of 600 kHz to avoid intermodulation interference.

If you manually set the frequency to a value outside the current 24 MHz booster frequency range and confirm your setting by pressing the save button 16, the following error message appears:

Frequency out of booster range




“Name” – Entering a channel name



Via the “Name” menu item, you can enter freely selectable names. The channel name can consist of up to 8 characters from the following character set:

```
`+`,`-`,`|`,`/`,`0`,`1`,`2`,`3`,`4`,`5`,`6`,`7`,`8`,`9`,`*`,`;`,`<`,`=`,`>`
`space`,`#`,`A`,`B`,`C`,`D`,`E`,`F`,`G`,`H`,`I`,`J`,`K`,`L`,`M`,`N`,`O`,`P`
`Q`,`R`,`S`,`T`,`U`,`V`,`W`,`X`,`Y`,`Z`
```

“Cmd mode” – Configuring the audio and command outputs

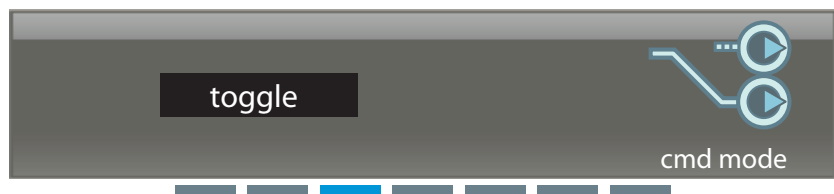

You can use the command function e.g. for stage directions.


For this, you require the SKM 9000 COM radio microphone or the SK 9000 bodypack transmitter together with the KA 9000 COM command adapter.

By pressing the COMMAND button on the SKM 9000 COM or KA 9000 COM, you can influence the routing of the audio signal of the receiver’s XLR-3 sockets [13](#) and sub-D socket [14](#).

The following settings are possible:

Setting	Effect
"on"	The transmitter's audio signal is output via both its audio channel (XLR-3 sockets 13 1 ... 8) and the corresponding channel of the sub-D socket 14. Pressing the COMMAND button on the SKM 9000 COM or KA 9000 COM has no effect.
"add"	The transmitter's audio signal is output via its audio channel (XLR-3 sockets 13 1 ... 8). Pressing the COMMAND button on the SKM 9000 COM or KA 9000 COM has the effect that the audio signal is additionally output via the corresponding channel of the sub-D socket 14.
"mute"	The transmitter's audio signal is output via both its audio channel (XLR-3 sockets 13 1 ... 8) and the corresponding channel of the sub-D socket 14. Pressing the COMMAND button on the SKM 9000 COM or KA 9000 COM mutes both the audio channel (XLR-3 sockets 13 1 ... 8) and the corresponding channel of the sub-D socket 14.
"toggle"	The transmitter's audio signal is output via either its audio channel (XLR-3 socket 13 1 ... 8) or the corresponding channel of the sub-D socket 14. Pressing the COMMAND button on the SKM 9000 COM or KA 9000 COM switches between the two channels.


"CH standby" – Muting channels

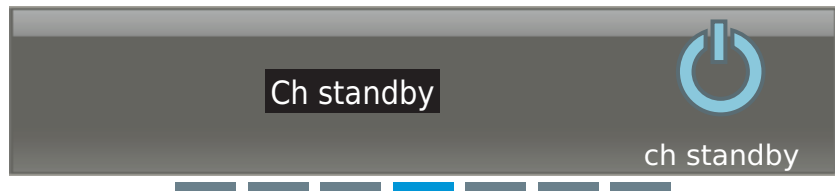

The "CH standby" menu item allows you to mute selected channels. When muted, the channels do not output any audio signal, neither via the Analog Audio Out (AAO)/Digital Audio Out (DAO) modules, nor via headphones.


“Encryption” – Binding the audio signal to the EM 9046 receiver

sync

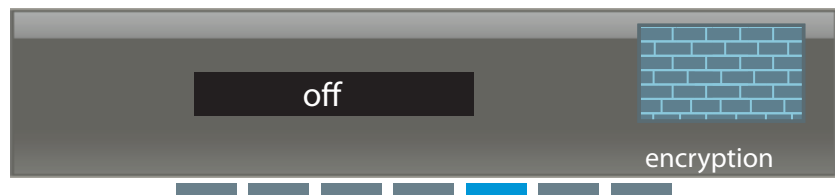


Via the “Encryption” menu item, you can protect the audio signal against eavesdropping from other receivers by binding the transmitters to the EM 9046 receiver. In this case, other receivers can receive the RF signal of the transmitters but cannot evaluate the audio signal.




 
 
To protect the audio signal against eavesdropping from other receivers:

- ▶ In the “Encryption” menu item, select “On” and press the  save button to store your setting.
- ▶ Synchronize the setting via infra-red (see page 66).

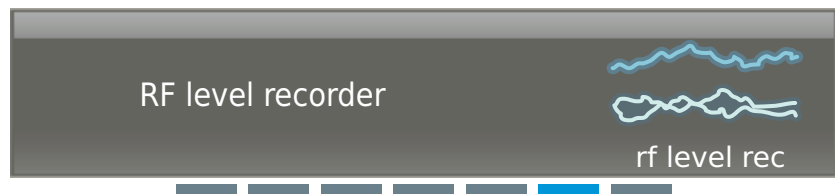
“RF level recorder” – Recording the antenna signals and the diversity evaluation (walk test)



The “RF level recorder” menu item allows you to record the antenna signals and the diversity evaluation (walk test) in order to check the reception quality of your transmission link within the operating environment.

- ▶ Before performing the walk test, switch on all possible sources of interference (e.g. light sources, intercom links, video walls) and all other transmission links.
- ▶ Switch on all transmitters that you want to use for the walk test.
- ▶ Change to the “ch” operating mode on the EM 9046.
- ▶ Establish transmission links between the channels of the EM 9046 and the transmitters.
- ▶ Select a channel and call up the “RF level recorder” menu item.
- ▶ Start the walk test by pressing the jog dial.
 - You can cancel the walk test at any time by pressing the  save button  or the  esc button  on the EM 9046. In doing so, the recorded data is deleted.
 - Use one or several transmitters to walk the operating environment. While performing the walk test, the diversity evaluation and the antenna signals for all channels are recorded. You can switch between the channels by pressing one of the channel 1 to 8 buttons .
 - If you are using an SKM 9000 COM or an SK 9000 together with the KA 9000 COM command adapter, you can set markers by pressing the COMMAND button at critical locations.
 - You can additionally activate the 1 kHz test tone on your transmitter (see page 80 and page 87) and monitor the signal quality of the test tone via loudspeakers while walking the operating environment.
 - If you perform the walk test as a pair, the second person can monitor the signal quality of the test tone by means of headphones connected to the EM 9046.

► Assess the result of the walk test:

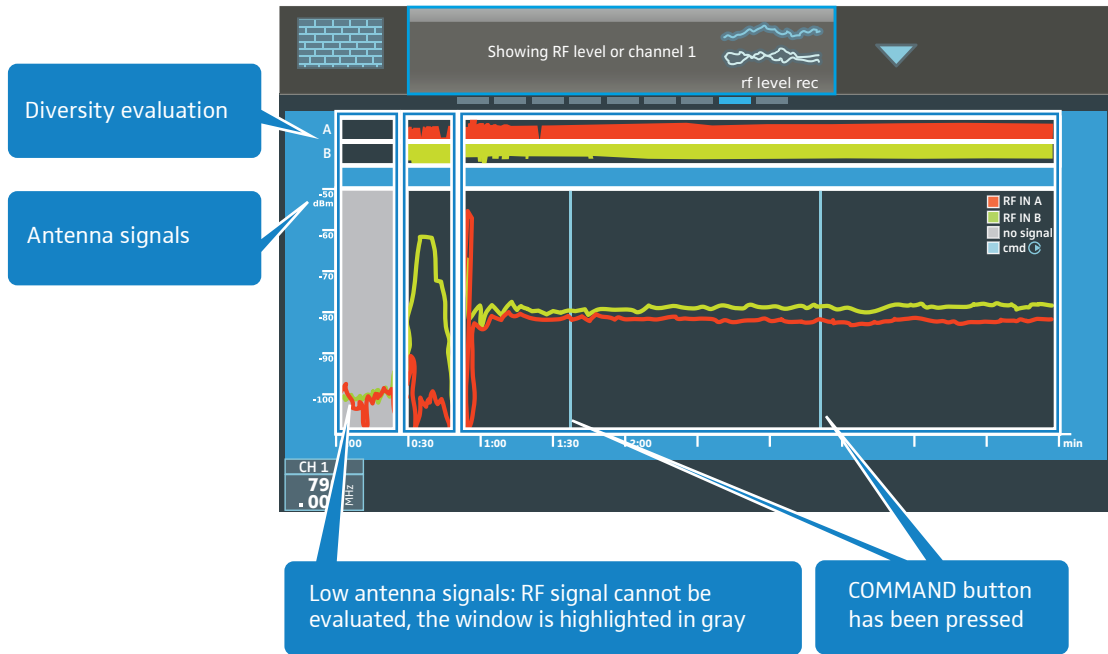

Interference due to extraneous RF signals and low antenna signals can impede the evaluation of a transmitter's RF signal. In this case, the window displaying the recorded antenna signals is highlighted in light gray.

- Reposition the antennas to minimize interference and to optimize the reception of transmission signals.
- Call up the "RF level recorder" menu item again and repeat the walk test.

Extended menu "Transmitter setup"

Via the extended menu "Transmitter setup", you can adjust the transmitter settings and then synchronize them via infra-red.

The menu items allow you to adjust settings over the entire value range of the Digital 9000 transmitters. Please note, however, that the actual values are determined by the hardware configuration of your transmitters (frequency range, type of microphone head being used (SKM), type of Sennheiser microphone or cable being used (SK), etc.).


If you adjust settings that are not supported by the transmitters' current hardware configuration, the value actually adopted by the transmitter is written back to the menu item of the extended menu "Transmitter setup".

If you transfer a frequency range that is not supported by your transmitter, "Sync Fail" is displayed in the menu selection of the receiver's display panel.

Modifications made via the "Transmitter setup" menu item of the EM 9046 must be synchronized via infra-red.

Modifications made directly on the transmitters have direct effect on the menu items of the extended menu "Transmitter setup" of the EM 9046.

For details on the adjustment ranges of your transmitters, refer to the description of the transmitters' operating menu.

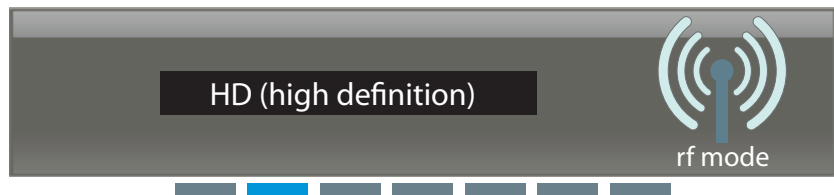
“RF mode” – Adjusting the transmission mode 

The “RF mode” menu item allows you to adjust the transmission mode:

“HD (High Definition)”: Transmission of an audio signal without audio data compression. As a result, the audio signal remains pure and unadulterated. In “HD” transmission mode, the range can be restricted compared to “LR” transmission mode.

“LR (Long Range)”: Transmission of an audio signal whose bit rate is reduced – before transmission – by an audio data compression technique (SeDAC, Sennheiser Digital Audio Codec). This compression technique provides excellent audio quality and a large transmission range. The sensitivity to interference is reduced compared to “HD” transmission mode.

The selection of the transmission mode depends on the result of the frequency scan. For more information, refer to the chapter “Frequency scan” – Performing a frequency scan from page 50 onwards.

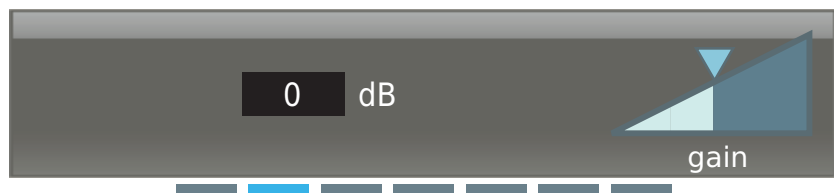
“Gain” – Adjusting the input gain 

The “Gain” menu item allows you to adjust the input gain of selected channels, independent of whether the transmitter to be synchronized supports the adjusted value. The factory preset is –6 dB. The adjustment range is from –6 dB to +60 dB.

After synchronization with the transmitter, the value actually adopted by the transmitter is written back to the menu item.



If you select “line” in the “Cable” menu item (see page 73), the input gain in the “Gain” menu item is set to the fixed value of –6 dB.

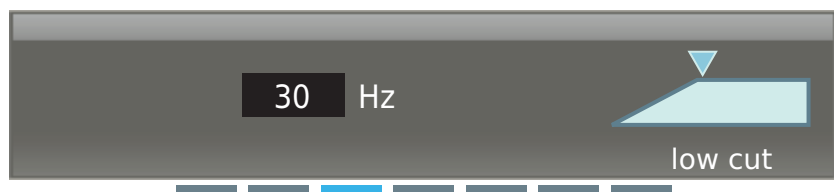“Low cut” – Setting the low-cut filter 


Via the “Low cut” menu item, you can set the transmitter’s low-cut filter. Possible settings: 30 Hz to 120 Hz.

You can adjust this setting independent of whether the transmitter to be synchronized supports the adjusted value.


After synchronization with the transmitter, the value actually adopted by the transmitter is written back to the menu item.

“Display” – Selecting the standard display for the transmitters


syn▶

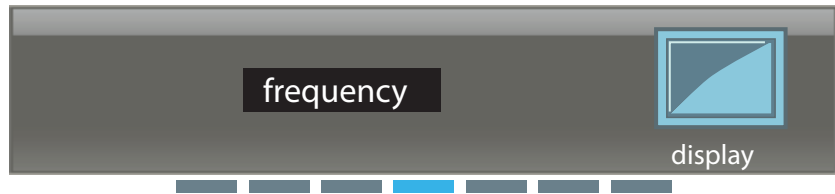

The “Display” menu item allows you to activate one out of 3 standard displays: “Name”, “Preset” or “Frequency”. The “Name” standard display is factory preset.

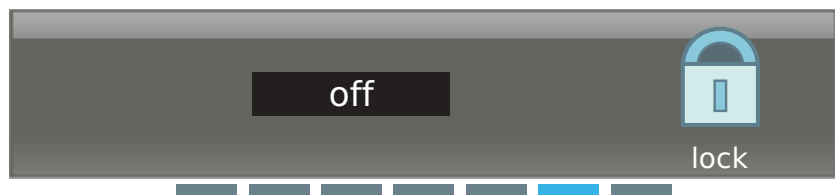“Lock” – Activating/deactivating the lock mode syn▶


Via the “Lock” menu item, you can activate or deactivate the lock mode for your transmitters.

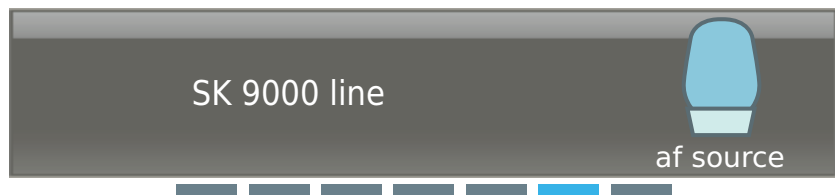“AF source” – Displaying the audio source

The “AF source” menu item allows you to display the type of microphone head being used (SKM), the type of audio source being used (SK: “micro”, “line”) and the emulation of instrument cables (SK: “type1”, “type2”, “type3”). This information is transmitted along with the SKM/SK 9000’s RF signal to the receiver.

The information is displayed until the transmitter is switched off or the carrier frequency is changed. When the SKM/SK transmits again on the carrier frequency, the corresponding microphone head/audio source is displayed once again in the menu item.

If a transmitter is switched off or transmits on a different carrier frequency, “No TX detected” is displayed.

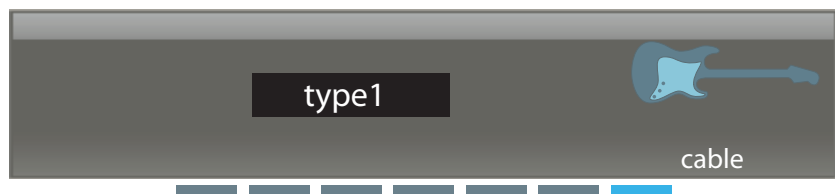“Cable” – Emulating different instrument cable lengths syn▶

Via the “Cable” menu item, you can emulate the lengths of instrument cables in 3 steps: “type1”, “type2” and “type3”. If you select “line”, no emulation takes place. The input gain in the “Gain” menu item is set to the fixed value of –6 dB.

“live” operating mode – Using a configured system


In “live” operating mode, you can select channels for headphone monitoring and synchronize the transmitters and the receiver.

To prepare headphone monitoring:

- ▶ Connect headphones as described on page 33.
- ▶ Observe the warnings given there.

To select channels for headphone monitoring:

Channel 1–8 button
and
multiple channel
selection button +

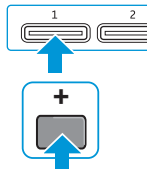


- ▶ Select a channel by pressing the channel 1–8 button or press the multiple channel selection button + and then select several channels simultaneously.

In “live” operating mode, you can also activate channels for synchronization:

- ▶ Select a channel by pressing the channel 1–8 button.
- ▶ Proceed as described on page 66.

Digital 9000 Using the SKM 9000

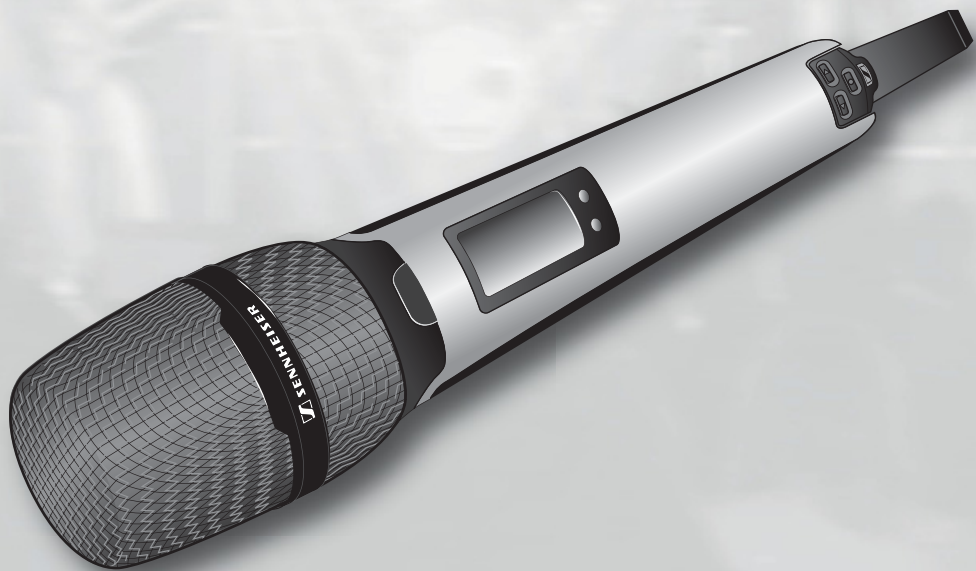

Using the SKM 9000	75
Switching the SKM 9000 on/off	76
Activating/deactivating the automatic lock mode (Autolock)	77

Basic functions of the Sennheiser operating menu	78
Overview of the status displays	78
Overview of the menu items	79

Using the SKM 9000

i Before using your radio microphone, ask the relevant wireless regulatory authority for the exact frequency allocations and apply for an individual license if necessary.


The supplied supplement "Framework requirements and restrictions on frequency usage in Europe" provides an overview of the different European framework requirements and restrictions on frequency usage. If there is no entry in the supplement, ask the relevant wireless regulatory authority for the current rules governing frequency usage.


 
Switching the SKM 9000 on/off


i When the SKM 9000 is switched on for the first time, it contains the first frequency preset of the transmitter frequency range (e.g. A1.1: 470.200 MHz). Via the "ch" menu of the EM 9046 receiver, set the desired frequency preset and adjust the settings of other menu items and then synchronize the transmitter and the receiver (see page 66). In doing so, all frequency presets of the transmitter frequency range will be transferred to the SKM 9000.

We recommend you to always adjust the transmitter settings via the EM 9046 receiver and then to synchronize the transmitter and the receiver.


To switch the SKM 9000 on:

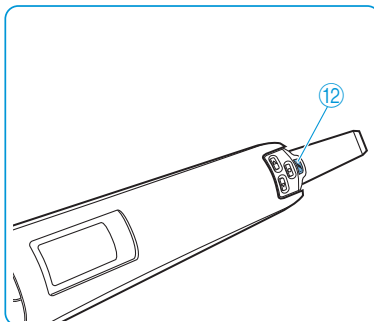

- ▶ Keep the ON/OFF button  12 pressed until the Sennheiser logo appears on the display panel 5. The ON/OFF button  12 is backlit in blue and the standard display (here: "Frequency", see page 80) appears on the display panel 5. The radio microphone transmits an RF signal and the transmission mode display "HD"/"LR" lights up constantly:

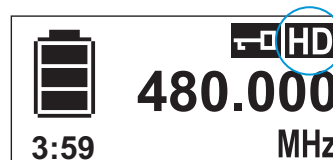


To switch the SKM 9000 off:

- ▶ Keep the ON/OFF button  12 pressed until the display panel goes off.
- ▶ Remove the accupack/battery pack when the radio microphone will not be used for extended periods of time (see page 35).



i The radio microphone can only be switched off when the lock mode is deactivated (see page 77).

Switching on the SKM 9000 on and checking the set frequency before the RF signal is activated

- ▶ Switch on the SKM 9000 by keeping the ON/OFF button  12 pressed until the "Name" standard display appears. The RF signal is not activated and the transmission mode display "HD"/"LR" flashes.

If you call up the "Tune" or "Preset" menu item within the next 10 seconds, the RF signal remains deactivated until you exit the menu item. If you do not call up one of the mentioned menu items, the RF signal is automatically activated after 10 seconds.

To check the set frequency/the selected frequency preset:

- ▶ Call up the operating menu and press the **UP** button /DOWN button  until the "Tune" or "Preset" menu item appears.
The set frequency/the selected frequency preset is displayed.

If the displayed value is the desired one:

- ▶ Wait for 10 seconds to pass.
The RF signal is automatically activated and the transmission mode display "HD"/"LR" lights up constantly.



If the displayed value is **not** the desired one:



- ▶ Call up the "Tune" or "Preset" menu item.
The RF signal remains deactivated until you exit the menu item.
The RF signal remains deactivated until you exit the menu item.
- ▶ Set the frequency ("Tune" menu item) or select a frequency preset ("Preset" menu item) and store your setting.
The RF signal is activated and the radio microphone transmits an RF signal on the set frequency.

Activating/deactivating the automatic lock mode (Autolock)

The radio microphone has an automatic lock mode that can be activated or deactivated via the "LOCK" menu item (see page 77).



To **permanently** activate the automatic lock mode:

- ▶ Call up the "LOCK" menu item and select "On".
- ▶ Store your setting by pressing the **SET** button .
The automatic lock mode is activated and the lock mode icon  appears on the standard display.


When the automatic lock mode is activated, you can still call up the operating menu, use the **UP** button /DOWN button  to select menu items and call up the "LOCK" menu item in order to deactivate the automatic lock mode. If, however, you try to call up any other menu item, the following display appears on the display panel:



While this display is shown (about 4 seconds), you can **temporarily** deactivate the lock mode:


- ▶ Press the **UP** button  or the **DOWN** button .
- The following display appears on the display panel:



- ▶ Press the **SET** button .
The lock mode is temporarily deactivated:
 - If you do not press a button within the next 10 seconds, the lock mode is activated again.
 - If you continue navigating the operating menu or if you call up a menu item, the lock mode is activated 10 seconds after the last button press.

- If you exit a called up menu item, the lock mode is activated immediately after exiting the menu item.

To **permanently** deactivate the automatic lock mode:


- ▶ Call up the "LOCK" menu item and select "Off".
- ▶ Store your setting by pressing the SET button .



Basic functions of the Sennheiser operating menu

A special feature of the Sennheiser 9000 series is the straightforward, intuitive operating concept. As a result, you can act quickly and precisely – even in stressful situations, for example on stage or during a live show or presentation.


Calling up and selecting menu items, changing and storing settings, cancelling an entry




UP /DOWN 
SET 

- ▶ Press the SET button  to call up the operating menu or a menu item, to switch between the selection areas of a menu item and to store your settings.








- ▶ Press the UP button /DOWN button  to select menu items and to change the settings of a menu item.

ON/OFF 












- ▶ Press the ON/OFF button  to exit a menu item without storing your settings or to change from the operating menu to the standard display.

 When keeping the UP button /DOWN button  pressed within a menu item, you continuously adjust the next/previous setting of the menu item. Keep the buttons pressed for a longer time to accelerate the speed.

Overview of the status displays

Status display	Meaning
	SKM 9000 switches on
	SKM 9000 switches off
	BA/B 60 accupack/battery pack: charge status $\leq 100\%$ $\leq 70\%$ $\leq 30\%$ BA 60 accupack: remaining operating time in h:mm
	Accupack/battery pack is completely discharged, transmitter is not operational
	Setting is being stored
	Firmware is being updated
	Firmware update has failed

Overview of the menu items

Icon	Name	Function	Page
	Tune	Sets a frequency	79
	Preset	Selects a frequency preset	79
	Name	Enters a name	80
	Gain	Adjusts the input gain	80
	Low cut	Sets the low-cut filter	80
	RF mode	Adjusts the transmission mode	80
	Display	Selects a standard display	80
	Lock	Activates/deactivates the lock mode	80
	Test tone	Activates the test tone for level matching the system and for the walk test	80
	Reset	Resets the factory default settings	80
	Information	Displays the firmware version and frequency range	80



“Tune” – Setting a frequency

Via the “Tune” menu item, you can set a frequency. The frequencies are tuneable in 25 kHz steps. If you store your setting, the set frequency is automatically assigned to the user-defined frequency preset “U”. The radio microphone then changes from the currently set frequency preset to the frequency preset “U” and transmits on the set frequency.



“Preset” – Selecting a frequency preset

Via the “Preset” menu item, you can select a frequency preset from the active booster frequency range or the frequency preset “U” (see also the “Tune” menu item).



To activate a different booster frequency range:

- ▶ Proceed as described from page 50 onwards. You first activate the booster frequency range on the EM 9046. If you then synchronize the transmitter and the receiver, the booster frequency range on the transmitter will also be activated.



“Name” – Entering a name

Via the “Name” menu item, you can enter a freely selectable name for the radio microphone. The name can consist of up to 6 characters from the following character set:

`+``,`-`,`|`,`/`,`0`,`1`,`2`,`3`,`4`,`5`,`6`,`7`,`8`,`9`,`*`,`;`,`<`,`=`,`>`,`space`,`#`,`A`,`B`,`C`,`D`,`E`,`F`,`G`,`H`,`I`,`J`,`K`,`L`,`M`,`N`,`O`,`P`,`Q`,`R`,`S`,`T`,`U`,`V`,`W`,`X`,`Y`,`Z`



“Gain” – Adjusting the input gain

Via the “Gain” menu item, you can adjust the input gain in 3 dB steps.

i The radio microphone automatically detects the type of microphone head being used and changes the adjustment range of the “Gain” menu item accordingly.



“Low cut” – Setting the low-cut filter

Via the “Low cut” menu item, you can set the low-cut filter. Settings: “80 Hz”, “100 Hz”, “120 Hz”.



“RF mode” - Adjusting the transmission mode

The “RF mode” menu item allows you to adjust the transmission mode. Settings: “HD”, “LR”.




“Display” – Selecting a standard display

The “Display” menu item allows you to select one out of 3 standard displays.



“Frequency”

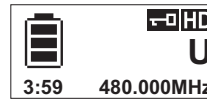

“Preset”



“Name”



“Lock” – Activating/deactivating the lock mode

Via the “Lock” menu item, you can activate or deactivate the lock mode. For more information on how to activate or deactivate the lock mode, refer to page 77.



“Test tone” – Activating the 1 kHz test tone

Via the “Test tone” menu item, you can activate a 1 kHz test tone. This test tone is transmitted instead of the input signal. You can use this function for level matching your system or for the walk test.



“Reset” – Resetting the factory default settings

Via the “Reset” menu item, you can reset the radio microphone to its factory default settings.



“Information” – Displaying the firmware version and frequency range

Via the “Information” menu item, you can display the firmware version and the transmitter’s frequency range.

Digital 9000 Using the SK 9000



Using the SK 9000	81
Switching the SK 9000 on/off	82
Activating/deactivating the automatic lock mode (Autolock)	83

Basic functions of the Sennheiser operating menu	84
Overview of the status displays	84
Overview of the menu items	85

Using the SK 9000

i Before using your bodypack transmitter, ask the relevant wireless regulatory authority for the exact frequency allocations and apply for an individual license if necessary.


The supplied supplement "Framework requirements and restrictions on frequency usage in Europe" provides an overview of the different European framework requirements and restrictions on frequency usage. If there is no entry in the supplement, ask the relevant wireless regulatory authority for the current rules governing frequency usage.


Switching the SK 9000 on/off


i When the SK 9000 is switched on for the first time, it contains the first frequency preset of the transmitter frequency range (e.g. A1.1: 470.200 MHz). Via the "ch" menu of the EM 9046 receiver, set the desired frequency preset and adjust the settings of other menu items and then synchronize the transmitter and the receiver (see page 66). In doing so, all frequency presets of the transmitter frequency range will be transferred to the SK 9000.

We recommend you to always adjust the transmitter settings via the EM 9046 receiver and then to synchronize the transmitter and the receiver.


To switch the SK 9000 on:

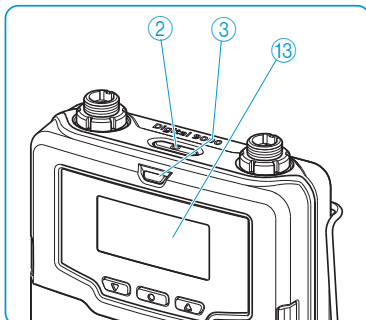

► Keep the ON/OFF button  (2) pressed until the Sennheiser logo appears on the display panel (13). The ON LED (3) lights up and the standard display (here: "Frequency", see page 86) appears on the display panel (13). The bodypack transmitter transmits an RF signal and the transmission mode display "HD"/"LR" lights up constantly:

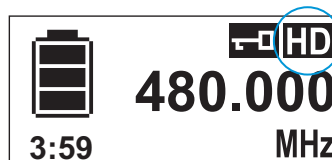


To switch the SK 9000 off:

► Keep the ON/OFF button  (2) pressed until the display panel goes off.
 ► Remove the accupack/battery pack when the transmitter will not be used for extended periods of time (see page 40).



i The bodypack transmitter can only be switched off when the lock mode is deactivated (see page 83).

Switching on the SK 9000 on and checking the set frequency before the RF signal is activated

► Switch on the SK 9000 by keeping the ON/OFF button  (2) pressed until the "Name" standard display appears. The RF signal is not activated and the transmission mode display "HD"/"LR" flashes.

If you call up the "Tune" or "Preset" menu item within the next 10 seconds, the RF signal remains deactivated until you exit the menu item. If you do not call up one of the mentioned menu items, the RF signal is automatically activated after 10 seconds.

To check the set frequency/the selected frequency preset:

- ▶ Call up the operating menu and press the **UP** button  / **DOWN** button  until the “Tune” or “Preset” menu item appears.
The set frequency/the selected frequency preset is displayed.

If the displayed value is the desired one:

- ▶ Wait for 10 seconds to pass.
The RF signal is automatically activated and the transmission mode display “HD”/“LR” lights up constantly.


If the displayed value is **not** the desired one:



- ▶ Call up the “Tune” or “Preset” menu item.
The RF signal remains deactivated until you exit the menu item.
- ▶ Set the frequency (“Tune” menu item) or select a frequency preset (“Preset” menu item) and store your setting.
The RF signal is activated and the bodypack transmitter transmits an RF signal on the set frequency.

Activating/deactivating the automatic lock mode (Autolock)

The bodypack transmitter has an automatic lock mode that can be activated or deactivated via the “LOCK” menu item (see page 83).



To **permanently** activate the automatic lock mode:

- ▶ Call up the “LOCK” menu item and select “On”.
- ▶ Store your setting by pressing the **SET** button .
The automatic lock mode is activated and the lock mode icon appears on the standard display.


When the automatic lock mode is activated, you can still call up the operating menu, use the **UP** button  / **DOWN** button  to select menu items and call up the “LOCK” menu item in order to deactivate the automatic lock mode. If, however, you try to call up any other menu item, the following display appears on the display panel:



While this display is shown (about 4 seconds), you can **temporarily** deactivate the lock mode:


- ▶ Press the **UP** button  or the **DOWN** button .
- The following display appears on the display panel:



- ▶ Press the **SET** button .
The lock mode is temporarily deactivated:
 - If you do not press a button within the next 10 seconds, the lock mode is activated again.
 - If you continue navigating the operating menu or if you call up a menu item, the lock mode is activated 10 seconds after the last button press.

- If you exit a called up menu item, the lock mode is activated immediately after exiting the menu item.

To **permanently** deactivate the automatic lock mode:


- ▶ Call up the "LOCK" menu item and select "Off".
- ▶ Store your setting by pressing the **SET** button .



Basic functions of the Sennheiser operating menu

A special feature of the Sennheiser 9000 series is the straightforward, intuitive operating concept. As a result, you can act quickly and precisely – even in stressful situations, for example on stage or during a live show or presentation.


Calling up and selecting menu items, changing and storing settings, cancelling an entry


 

UP  /DOWN  /
SET 

- ▶ Press the **SET** button  to call up the operating menu or a menu item, to switch between the selection areas of a menu item and to store your settings.








- ▶ Press the **UP** button  /**DOWN** button  to select menu items and to change the settings of a menu item.

ON/OFF 













- ▶ Press the **ON/OFF** button  to exit a menu item without storing your settings or to change from the operating menu to the standard display.

 When keeping the **UP** button  /**DOWN** button  pressed within a menu item, you continuously adjust the next/previous setting of the menu item. Keep the buttons pressed for a longer time to accelerate the speed.

Overview of the status displays

Status display	Meaning
	SK 9000 switches on
	SK 9000 switches off
	BA/B 61 accupack/battery pack: charge status ≤ 100% ≤ 70% ≤ 30% BA 61 accupack: remaining operating time in h:mm
	Accupack/battery pack is completely discharged, transmitter is not operational
	Setting is being stored
	Firmware is being updated
	Firmware update has failed

Overview of the menu items

Icon	Name	Function	Page
	Tune	Sets a frequency	85
	Preset	Selects a frequency preset	85
	Name	Enters a name	86
	Gain	Adjusts the input gain	86
	Low cut ^a	Sets the low-cut filter	86
	Cable ^b	Emulates different instrument cable lengths	86
	RF mode	Adjusts the transmission mode	86
	Display	Selects a standard display	86
	Lock	Activates/deactivates the lock mode	87
	Test tone	Activates the test tone for level matching the system and for the walk test	87
	Reset	Resets the factory default settings	87
	Information	Displays the firmware version and frequency range	87

a. If you are using the Sennheiser CI 1-4 line/instrument cable, this menu item is hidden

b. If you are using the Sennheiser CI 1-4 line/instrument cable, this menu item is shown



“Tune” – Setting a frequency

Via the “Tune” menu item, you can set a frequency. The frequencies are tuneable in 25 kHz steps. If you store your setting, the set frequency is automatically assigned to the user-defined frequency preset “U”. The bodypack transmitter then changes from the currently set frequency preset to the frequency preset “U” and transmits on the set frequency.



“Preset” – Selecting a frequency preset

Via the “Preset” menu item, you can select a frequency preset from the active booster frequency range or the frequency preset “U” (see also the “Tune” menu item).



To activate a different booster frequency range:

- ▶ Proceed as described from page 50 onwards. You first activate the booster frequency range on the EM 9046. If you then synchronize the transmitter and the receiver, the booster frequency range on the transmitter will also be activated.



“Name” – Entering a name

Via the “Name” menu item, you can enter a freely selectable name for the bodypack transmitter. The name can consist of up to 6 characters from the following character set:

`+``,`-`,`|`,`/`,`0`,`1`,`2`,`3`,`4`,`5`,`6`,`7`,`8`,`9`,`*`,`;`,`<`,`=`,`>`,`space`,`#`,`A`,`B`,`C`,`D`,`E`,`F`,`G`,`H`,`I`,`J`,`K`,`L`,`M`,`N`,`O`,`P`,`Q`,`R`,`S`,`T`,`U`,`V`,`W`,`X`,`Y`,`Z`



“Gain” – Adjusting the input gain

Via the “Gain” menu item, you can adjust the input gain in 3 dB steps from -6 to +42 dB.

i When you are using Sennheiser microphones or the Sennheiser CI 1-4 line/instrument cable, the bodypack transmitter automatically detects the type of input signal present and changes the adjustment range of the “Gain” menu item accordingly.

Cable type	Adjustment range
Sennheiser microphone cable	“0 dB” to “+42 dB”
Sennheiser CI 1-4 line/instrument cable	“-6 dB” to “+ 9 dB”



“Low cut” – Setting the low-cut filter

Via the “Low cut” menu item, you can set the low-cut filter. The bodypack transmitter automatically detects the type of input signal present and changes the settings of the “Low cut” menu item accordingly. If you are using the Sennheiser CI 1-4 line/instrument cable, the “Low cut” menu item is hidden.

Cable type	Settings
Sennheiser microphone cable	“60 Hz”, “80 Hz”, “100 Hz”, “120 Hz”
Sennheiser CI 1-4 line/instrument cable	“30 Hz”, the “Low cut” menu item is hidden



“Cable” – Emulating different instrument cable lengths

Via the “Cable” menu item, you can emulate the lengths of instrument cables in 3 steps. If you are using the Sennheiser CI 1-4 line/Instrument cable, the “Cable” menu item is shown.



“RF mode” - Adjusting the transmission mode

The “RF mode” menu item allows you to adjust the transmission mode. Settings: “HD”, “LR”.




“Display” – Selecting a standard display

The “Display” menu item allows you to select one out of 3 standard displays.



“Frequency”

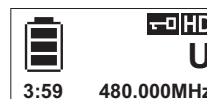

“Preset”



“Name”



“Lock” – Activating/deactivating the lock mode

Via the “Lock” menu item, you can activate or deactivate the lock mode. For more information on how to activate or deactivate the lock mode, refer to page 83.



“Test tone” – Activating the 1 kHz test tone

Via the “Test tone” menu item, you can activate a 1 kHz test tone. This test tone is transmitted instead of the input signal. You can use this function for level matching your system or for the walk test.



“Reset” – Resetting the factory default settings


Via the “Reset” menu item, you can reset the bodypack transmitter to its factory default settings.



“Information” – Displaying the firmware version and frequency range

Via the “Information” menu item, you can display the firmware version and the transmitter frequency range.


Digital 9000 Using the L 60

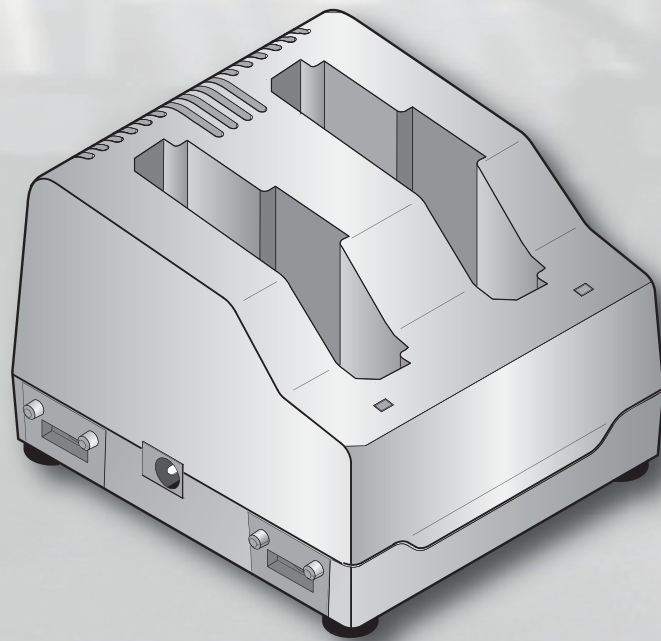

Using the L 60

Connecting the mains unit and switching on the L 60

- ▶ Connect the DC connector of the NT 3-1 mains unit to the DC input socket ② of the L 60 charger.
- ▶ Connect the mains plug (EU, UK or US version) of the mains unit to the mains.
The charger switches on and goes to standby mode.

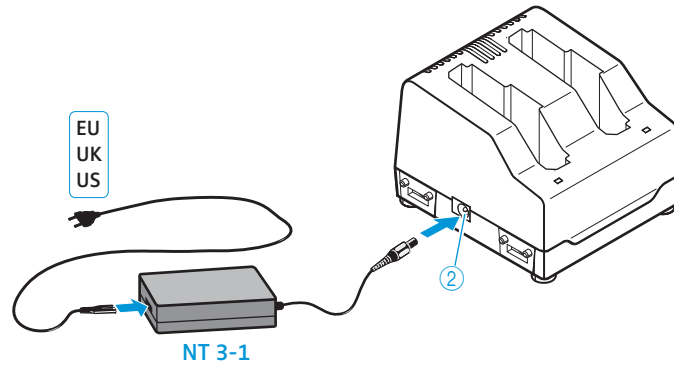

Switching off the L 60 and disconnecting it from the mains

If no accupacks are inserted into the L 60, the charger is in standby mode. To switch off the charger and the NT 3-1 mains unit and to disconnect them from the mains:

- ▶ Unplug the mains plug of the mains unit.

Charging the BA 60/BA 61 accupack

- ▶ Charge the BA 60/BA 61 accupack fully before using it for the first time or if you have not used it for an extended period of time.


The L 60 charger allows you to simultaneously charge ...

... 2 BA 60 or

... 2 BA 61 or

... 1 BA 60 and 1 BA 61.

- ▶ Insert the accupack into one of the charging compartments ③ and make sure that it locks into place with an audible click.

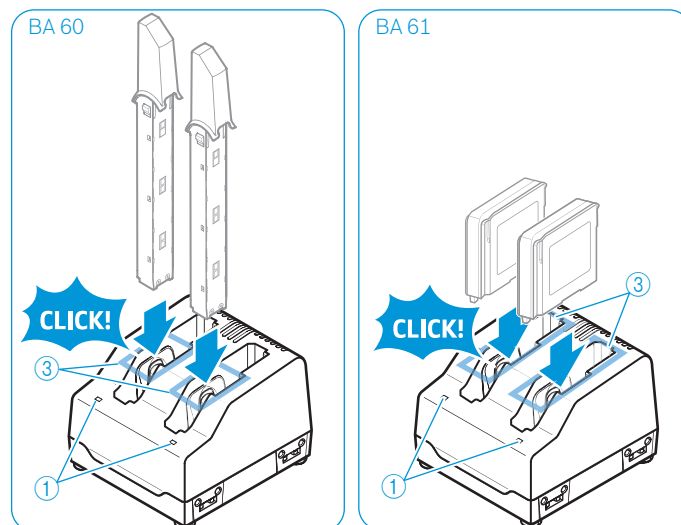

The accupack is being charged. The status LED ① lights up. It is normal for the accupack to get warm during charging.



For an overview of the indications of the status LED ①, refer to page 25.

Charging times

With a completely discharged accupack and at room temperature (approx. 20°C/68°F), the charging times are as follows:

Capacity obtained	Charging time
approx. 100%	approx. 180 min
approx. 70%	approx. 60 min

However, charging may take longer under the following circumstances:

- The accupack is deep-discharged and first has to be reconditioned by a deep discharge recovery charge.
- The ambient temperature is close to or over 35°C/95°F; in order to protect the accupack, the charging power will be reduced until the accupack temperature has dropped to an admissible value.

Charging will be aborted and the status LED ① will start flashing red under the following circumstances:

- The accupack temperature is too low or too high (see page 105); charging starts automatically when the accupack temperature is within the charging temperature range.
- The accupack cannot be fully charged within approx. 8 hours, e.g. due to overaged cells.

Digital 9000
Cleaning and maintenance

Cleaning and maintaining the Digital 9000 system

CAUTION

Liquids can damage the electronics of the products!


Liquids entering the housing of the products can cause a short-circuit and damage the electronics.

- ▶ Keep all liquids away from the products.
- ▶ Do not use any solvents or cleansing agents.

- ▶ Disconnect the products from the mains. Remove the rechargeable batteries or batteries before cleaning.
- ▶ Only use a soft, dry cloth to clean the products.

Cleaning the sound inlet basket of the microphone head

- ▶ Unscrew the upper sound inlet basket from the microphone head by turning it counterclockwise (see diagram).

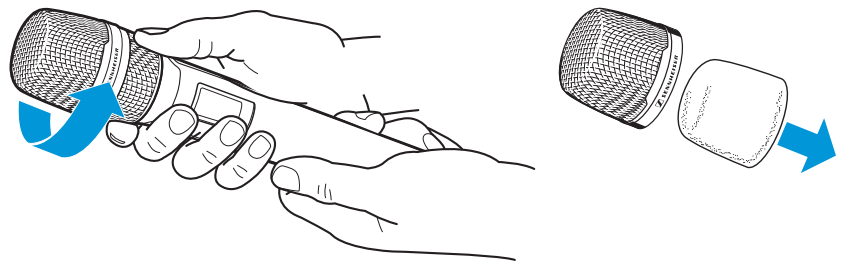

- ▶ Remove the foam insert.

There are two ways to clean the sound inlet basket:

- Use a slightly damp cloth to clean the upper sound inlet basket from the inside and outside
- Scrub with a brush and rinse with clear water.
- ▶ If necessary, clean the foam insert with a mild detergent or replace the foam insert.
- ▶ Dry the upper sound inlet basket and the foam insert.
- ▶ Reinsert the foam insert.
- ▶ Replace the sound inlet basket on the microphone head and screw it tight.

You should also clean the contacts of the microphone head from time to time:

- ▶ Wipe the contacts of the microphone head with a soft and dry cloth.

Cleaning the contacts of the SK 9000 bodypack transmitter

- ▶ Wipe the contacts with a dry cloth.

Cleaning the L 60 charger

- ▶ Remove all accupacks from the charging compartments.
- ▶ Before cleaning, disconnect the NT 3-1 mains unit from the mains.
- ▶ Use a dry cloth for cleaning.
- ▶ Use a brush or similar to remove dust from the charging compartments.
- ▶ Clean the charging contacts from time to time using e.g. a cotton swab.

Digital 9000
If a problem occurs ...

If a problem occurs ...

EM 9046 receiver

Problem	Possible cause	Possible solution
No operation indication	No mains connection, the ON/OFF ① switch is set to position "0"	Check the connections of the mains cable. Set the ON/OFF ① switch to position "1".
No RF signal	Transmitter and receiver operate in different frequency ranges	Perform a frequency scan (see page 50) and then synchronize transmitter and receiver.
	The transmission range is exceeded	Reduce the distance between transmitter and receiver.
Frequency cannot be transferred to the transmitter	The transmitter is not within the range of the infra-red interface	Place the transmitter at a distance of approx. 10–20 cm in front of the infra-red interface.
	The infra-red interface of the receiver is not yet ready for transferring the frequency, the receiver is still in scan mode	Keep placing the transmitter in front of the infra-red interface.
	The transmitter is from a different frequency range	Use a transmitter that matches the frequency range of the receiver.
Audio signal has a high level of background noise	Input gain of the transmitter/audio output level of the receiver is adjusted too low.	Adjust the input gain of the transmitter/audio output level of the receiver correctly.
Audio signal is distorted	Input gain of the transmitter/audio output level of the receiver is adjusted too high.	Adjust the input gain of the transmitter/audio output level of the receiver correctly.
The display does not switch on	The receiver is in standby mode	Press the jog dial ⑰.
syn▶ button does not seem to function	Wrong operating mode	Call up the "live" or "ch" operating mode before pressing the syn▶ button.

SKM 9000 radio microphone

Problem	Possible cause	Possible solution
Transmitter cannot be operated, "LOCK" appears on the display panel	Lock mode is activated	Deactivate the lock mode (see page 80)
No operation indication	Batteries are flat or accupack is flat	Replace the batteries or recharge the accupack (see page 89)
No RF signal at the receiver	Transmitter and receiver are not on the same frequency	Perform a frequency scan (see page 50) and then synchronize the transmitter and receiver.
	Transmission range is exceeded	Reduce the distance between transmitter and receiving antennas.
	Transmitter's RF signal is deactivated ("RF Mute")	Activate the RF signal (see page 76)
Audio signal has a high level of background noise or is distorted	Transmitter input gain is too low/too high	Adjust the input gain (see page 80)

SK 9000 bodypack transmitter

Problem	Possible cause	Possible solution
Transmitter cannot be operated, "LOCK" appears on the display panel	Lock mode is activated	Deactivate the lock mode (see page 80)
No operation indication	Batteries are flat or accupack is flat	Replace the batteries or recharge the accupack (see page 89)
No RF signal at the receiver	Transmitter and receiver are not on the same frequency	Perform a frequency scan (see page 50) and then synchronize the transmitter and receiver.
	Transmission range is exceeded	Reduce the distance between transmitter and receiving antennas.
	Transmitter's RF signal is deactivated ("RF Mute")	Activate the RF signal (see page 76)
Audio signal has a high level of background noise or is distorted	Transmitter input gain is too low/too high	Adjust the input gain (see page 80)

L 60 charger

Problem	Possible cause	Possible solution
The LED ① does not light up	Charger is not connected to the mains	Check if the L 60 is connected to the NT 3-1 mains unit and if the mains unit is connected to the mains (see page 89).
	Cascaded L 60 chargers are not correctly connected to one another	Check if a maximum of four L 60 are correctly connected to one another (see page 41).
	More than four chargers are cascaded	
	Unstable voltage of the mains unit	Replace the defective mains unit or mains cable with a new one.
	Mains unit or mains cable is defective	
	No contact with the accupack	Insert the accupack correctly into the charging compartment (see page 89).
The LED ① does not light up	Contacts of the accupack or contacts of the charging compartments are dirty	Clean the charging contacts of the accupack and of the charging compartments (see page 93).
	Accupack is defective (overaged or defective rechargeable battery cells)	Replace the defective accupack with a new one.
The LED ① flashes red	Wrong accupack/ individual rechargeable batteries/batteries (primary cells) have been inserted	Only charge BA 60 or BA 61 accupacks with the L 60 charger.
	Accupack temperature is too low or too high/ air humidity too high	Always recharge the accupack within the operating temperature range and the air humidity range stated in the specifications (see page 105).
	Accupack is defective (overaged or defective rechargeable battery cells)	Replace the defective accupack with a new one.

If a problem occurs that is not listed in the above table or if the problem cannot be solved with the proposed solutions, please contact your local Sennheiser partner for assistance.

To find a Sennheiser partner in your country, search at www.sennheiser.com under "Service & Support".

Digital 9000 Specifications

Specifications

System characteristics

Frequency ranges	470 to 798 MHz, expandable to 934 MHz, divided into 24 MHz booster frequency ranges (see page 35)		
	EM 9046 DRX	TX variant	Booster variant A1–A8
	A1–B8 470–798 MHz (expandable to 934 MHz)	A1–A4 470–558 MHz	A1 470–494 MHz A2 494–518 MHz A3 510–534 MHz A4 534–558 MHz
		A5–A8 550–638 MHz	A5 550–574 MHz A6 574–598 MHz A7 590–614 MHz A8 614–638 MHz
		B1–B4 630–718 MHz	B1 630–654 MHz B2 654–678 MHz B3 670–694 MHz B4 694–718 MHz
		B5–B8 710–798 MHz	B5 710–734 MHz B6 734–758 MHz B7 750–774 MHz B8 774–798 MHz
Transmission method	digital modulation "HD" mode: without audio data compression "LR" mode: SeDAC (Sennheiser Digital Audio Codec)		
Audio frequency response	30 Hz to 20 kHz (3 dB) with SK 9000 line-in 60 Hz to 20 kHz (3 dB) with SK 9000 mic 80 Hz to 20 kHz (3 dB) with SKM 9000		
Dynamic range	"HD" mode: 112 dB(A) "LR" mode: 101 dB(A)		
Latency	Analog Audio Out: 3.2 ms Digital Audio Out: 3 ms (AES-EBU)		
THD	"HD" mode: < 0.01% (at 1 kHz) "LR" mode: < 0.03% (at 1 kHz)		

Operating conditions

Ambient temperature	-10°C to +50°C
Relative humidity	max. 85% at 40°C (non-condensing)
Protection against dripping and light splashing of liquids	the product must not be exposed to dripping and splashing (IP2X)

Storage and transport conditions

Ambient temperature	-25°C to +70°C
Relative humidity	max. 90% at 40°C
Protection against dripping and light splashing of liquids	the product must not be exposed to dripping and splashing (IP2X)
Shock resistance	as per IEC 68 or EN 60068, T2-27

EM 9046 characteristics

RF characteristics

Frequency range	470 to 934 MHz
Receiving channels	up to 8
Receiver principle	double superheterodyne
Diversity	true bit diversity
Sensitivity	"HD" mode: -86 dBm "LR" mode: -100 dBm
Antenna inputs	2 N-type sockets (50 Ω)
Daisy chain outputs	2 N-type sockets (50 Ω), amplification: 11 dB ±0.5 dB (related to booster input)
Daisy chainable receivers (HF)	max. 4 EM 9046 (32 channels)

Audio characteristics



Audio output voltage	XLR balanced, -10 dBu to +18 dBu in 1 dB steps (2 kΩ)
Headphone output	2 x 100 mW at 32 Ω, short-circuit proof
Digital audio output	AES3-2003, XLR-3, 44.1 kHz; 48 kHz; 88.2 kHz or 96 kHz, 24 bit, externally synchronizable 8 XLR-3 sockets and 1 multicore/sub-D socket (25-pin)
Audio output sockets	can be equipped with 2 audio modules, analog (AAO), digital (DAO) or mixed 8 XLR-3 sockets and 1 multicore/sub-D socket (25-pin) per audio module

Other characteristics

Power consumption	max. 250 W
Power supply	100 to 240 V~, 50/60 Hz
Mains connector	3-pin, protection class I as per IEC/EN 60320-1
Dimensions	177 x 449 x 496 mm (H x W x D, without handles)
Weight	approx. 17 kg (fully equipped with 1 AAO, 1 DAO, 8 DRX)

Booster supply	12 V DC via antenna socket max. 200 mA each, short-circuit proof
LAN	IEEE 802.3-2002 (10/100 Mbit/s), shielded RJ 45 socket
Word clock input	BNC, 75 Ω, transformer balanced, AC-coupled input voltage range: 200 mV ... 5 Vpp max. input voltage: 15 V (DC + AC)
Word clock output	BNC, 75 Ω, AC-coupled output voltage: 3.0 Vpp ±500 mV at 75 Ω source impedance
Word clock sampling rates	44.1 kHz; 48 kHz; 88.2 kHz or 96 kHz

In compliance with

Europe	EMC: EN 301489-1/-9
	Radio: EN 300422-1/-2
	Safety: EN 60065
USA	 47 CFR 15 subpart B

Approved by

Canada	Industry Canada RSS-123, IC: 2099A-EM9000
--------	--

A/AB/AD 9000 characteristics



RF characteristics

Frequency ranges	470 MHz to 798 MHz, divided into 2 ranges: A1–A8: 470 MHz to 638 MHz B1–B8: 630 MHz to 798 MHz (see page 99)
Directivity	A 9000: omni-directional AD 9000: directional
Amplification	typ. 17 dB (constant)
Antenna input (AB 9000 only)	N-type socket (50 Ω)
Antenna output	N-type socket (50 Ω)
Antenna gain	A 9000: 3.2 dBi AD 9000: 4.6 dBi
Apex angle AD 9000	approx. 100° (–3 dB)
Front-to-back ratio AD 9000	≥ 14 dB
OIP3	≥ 35 dBm
Preselection 24 MHz	automatic or manual (without EM 9046) via rotary switch

Other characteristics

Current consumption	max. 160 mA at 12 V
Voltage range	9 to 18 V
	DC feed via antenna cable from EM 9046
Mounting connection	3/7" or 5/7" thread
Dimensions	A 9000: 250 x 165 x 23 mm (H x W x D) AB 9000: 80 x 64 x 24 mm (H x W x D) AD 9000: 329 x 322 x 23 mm (H x W x D)
Weight	A 9000: approx. 390 g AB 9000: approx. 265 g AD 9000: approx. 625 g

In compliance with

Europe	EMC: EN 301489-1/-9
	Radio: EN 300422-1/-2
	Safety: EN 60065
USA	 47 CFR 15 subpart B

Approved by

Canada	Industry Canada RSS-123, IC: 2099A-EM9000
--------	--

SK 9000 characteristics

RF characteristics

Frequency ranges	470 MHz to 798 MHz, divided into 4 ranges: SK 9000 A1–A4: 470–558 MHz SK 9000 A5–A8: 550–638 MHz SK 9000 B1–B4: 630–718 MHz SK 9000 B5–B8: 710–798 MHz (see page 99)
Switching bandwidth	88 MHz
RF output power	"HD" mode: 10 mW rms, 50 mW peak "LR" mode: 25 mW rms, 50 mW peak
Frequency stability	< 5 ppm
Tuneability	in steps of 25 kHz
Antenna output	coax socket

Audio characteristics


Mic/line input	3-pin special audio socket
Audio gain	mic: adjustable in 3 dB steps from 0 dB to +42 dB instruments: adjustable in 3 dB steps from –6 dB to +9 dB line: –6 dB

Input impedance	mic: 22 k Ω instruments/line: 1 M Ω
Lower cut-off frequency (–3 dB)	mic: adjustable 60 Hz, 80 Hz, 100 Hz, 120 Hz instruments/line: 30 Hz
Instrument cable emulation	cable length adjustable in 3 steps

Other characteristics

Operating time	6.5 hrs (with BA 61 accupack)
Power consumption	max. 960 mW
Dimensions	76 x 62 x 20 mm (H x W x D, with BA 61 accupack)
Weight	approx. 147 g (with BA 61 accupack and belt clip)

In compliance with

Europe 	EMC: EN 301489-1/-9 Radio: EN 300422-1/-2 Safety: EN 60065 EN 62311 (SAR)
---	--

Approved by

USA	 Part 74 FCC-ID: DMOSK9000 limited to 698 MHz
Canada	Industry Canada RSS-123, IC: 2099A-SK9000 limited to 698 MHz

SKM 9000 characteristics

RF characteristics

Frequency ranges	470 MHz to 798 MHz, divided into 4 ranges: SKM 9000 A1–A4: 470–558 MHz SKM 9000 A5–A8: 550–638 MHz SKM 9000 B1–B4: 630–718 MHz SKM 9000 B5–B8: 710–798 MHz (see page 99)
Switching bandwidth	88 MHz
RF output power	“HD” mode: 10 mW rms, 50 mW peak “LR” mode: 25 mW rms, 50 mW peak
Frequency stability	< 5 ppm
Tuneability	in steps of 25 kHz


Audio characteristics

Audio gain	adjustable in 3 dB steps from 0 dB to +62 dB (depending on microphone head)
Lower cut-off frequency (−3 dB)	adjustable: 80 Hz, 100 Hz, 120 Hz


Other characteristics

Operating time	5.5 hrs (with BA 60 accupack)
Power consumption	max. 960 mW
Dimensions	270 x 40 mm (L x Ø)
Weight	approx. 350 g (with BA 60 accupack and ME 9005 microphone head)

In compliance with

Europe 	EMC:	EN 301489-1/-9
	Radio:	EN 300422-1/-2
	Safety:	EN 60065 EN 62311 (SAR)

Approved by


USA	 Part 74 FCC-ID: DMOSKM9000 limited to 698 MHz
Canada	Industry Canada RSS-123, IC: 2099A-SKM9000 limited to 698 MHz

BA 60/61 characteristics


Other characteristics

	BA 60	BA 61
Nominal voltage	3.7 V	3.7 V
Nominal capacity	1,600 mAh	2,030 mAh
Nominal energy	5.9 Wh	7.5 Wh

In compliance with

Europe 	EMC:	EN 301489-1/-9 EN 61000-6-2 EN 61000-6-3
	Safety:	IEC 60950 IEC 62133
	USA/Canada	Safety: UL 2054 UL listing MH 16707

L 60 characteristics

Input voltage	12 to 15 V ===
Input current	max. 900 mA
Pin assignment of DC input hollow jack socket	
Charging voltage	max. 4.2 V ===
Charging current	max. 2 x 1,000 mA
Charging principle	<ul style="list-style-type: none"> • CC CV method (Li-Ion charging method) • Deep discharge recovery charge • Capacity monitoring • Accupack temperature monitoring • Over/undercharge detection • Charging time limit (approx. 8 hours)
Compatible Sennheiser accupacks	<ul style="list-style-type: none"> • BA 60 (3.7 V, 1,600 mAh, Li-Ion) • BA 61 (3.7 V, 2,030 mAh, Li-Ion)
Charging time	with a completely discharged accupack and at room temperature (approx. 20°C/68°F): <ul style="list-style-type: none"> • 100% = approx. 180 min • 70% = approx. 60 min • automatic security switch-off after approx. 8 hours
Dimensions	approx. 80 x 87 x 62 mm (W x D x H)
Weight	approx. 160 g (without mains unit)


Operating conditions

Ambient temperature	0°C to +35°C with reduced charging power: 0°C to +45°C
Relative humidity	25% to 95% (non-condensing)
Protection against dripping and light splashing of liquids	the product must not be exposed to dripping and splashing (IP2X)


Storage and transport conditions

Ambient temperature	-20°C to +70°C
Relative humidity	5% to 95% (non-condensing)
Protection against dripping and light splashing of liquids	the product must not be exposed to dripping and splashing (IP2X)


In compliance with

Europe	EMC: EN 61000-6-2 EN 61000-6-3
	Safety: EN 60065
USA	FCC 47 CFR Part 15 B
Canada	Industry Canada ICES 003


Pin assignment of the sockets of the EM 9046

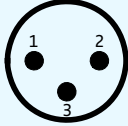XLR-3 socket (analog & digital)	Pin assignment
	<p>Pin 1: ground Pin 2: out + (P) Pin 3: out – (N)</p>


Sub-D socket (25-pin) multicore, digital, balanced

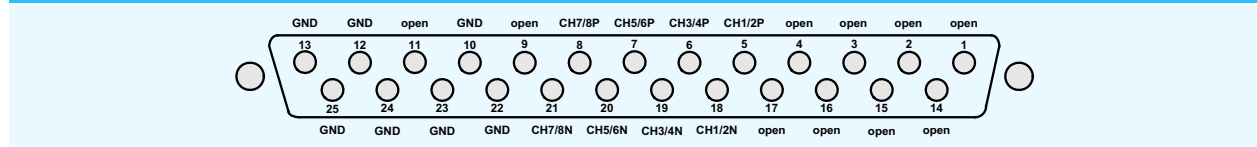

Sub-D socket (25-pin) multicore, analog, transformer balanced

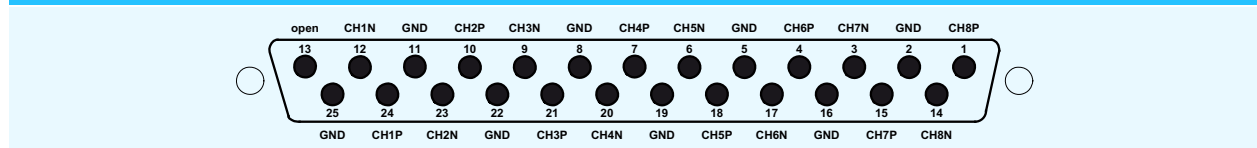

Pin assignment of the 3-pin special audio socket of the SK 9000

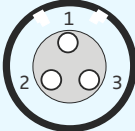Socket	Pin assignment
	<p>Pin 1 and thread: ground Pin 2: line/Instrument Pin 3: microphone</p>

Manufacturer Declarations

Warranty

Sennheiser electronic GmbH & Co. KG gives a warranty of 24 months on this product.

For the current warranty conditions, please visit our web site at www.sennheiser.com or contact your Sennheiser partner.

In compliance with the following requirements

- RoHS Directive (2002/95/EC)
- Battery Directive (2006/66/EC)

The supplied rechargeable batteries or batteries can be recycled. Please dispose of them as special waste or return them to your specialist dealer. In order to protect the environment, only dispose of exhausted batteries.



CE Declaration of Conformity **CE 0682** ⓘ

- R&TTE Directive (1999/5/EC)
- EMC Directive (2004/108/EC)
- Low Voltage Directive (2006/95/EC)

The declarations are available at www.sennheiser.com.

Before putting the products into operation, please observe the respective country-specific regulations.

Statements regarding FCC and Industry Canada

This device complies with Part 15 of the FCC Rules and with RSS-123 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This class B digital device complies with the Canadian ICES-003.

Changes or modifications made to this equipment not expressly approved by Sennheiser electronic Corp. may void the FCC authorization to operate this equipment.



Sennheiser electronic GmbH & Co. KG

Am Labor 1, 30900 Wedemark, Germany
www.sennheiser.com

Publ. 07/12