


Recessed Wash **150**

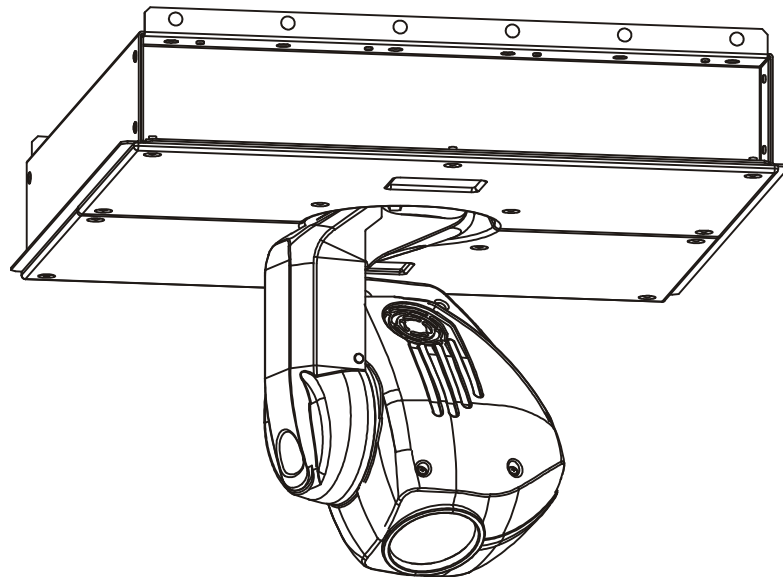

AT series

USER MANUAL

RECESSED WASH 150

Table of contents

1. Safety instructions	3
2. Operating determinations	4
3. Description of the device	5
Installation	6
4.1 Fitting/Exchanging the lamp	6
4.2 Lamp adjustment	6
4.3 Rigging	7
4.4 DMX-512 connection, master/slave connection	10
5. DMX Protocol 16-bit	11
6. DMX Protocol 8-bit	12
7. Controller mode	13
7.1 DMX addressing	13
7.2 Remotely controllable functions	13
8. Stand - alone mode	14
9. Functions of the control panel	15
9.1 Addressing	15
9.2 Slave control	16
9.3 Fixture informations	16
9.4 Personality options	17
9.5 Switching On/Off the lamp	21
9.6 Test sequences	22
9.7 Stand-alone setting	22
9.8 Reset function	24
9.9 Special functions	24
10. Error and information messages	26
11. Technical specifications	26
12. Maintenance and cleaning	29
13. Appendix 1 - Menu map	30
14. Appendix 2 - Changing the power supply settings	32
14. Appendix 3 - Box versions and dimensions	33

CAUTION!

***Keep this device away from rain and moisture!
Unplug mains lead before opening the housing!***

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY
BEFORE YOU INITIAL START - UP!**

1. Safety instructions

***Caution ! Be careful with your operations. With a dangerous voltage you can suffer
a dangerous electric shock when touching the wires***

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

Important:

Damages caused by the disregard of this user manual are not subject to warranty. The dealer will not accept liability for any resulting defects or problems.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

This device falls under protection-class I. The power plug must only be plugged into a protection class I outlet. Never let the power cord come into contact with other cables!

Make sure that the power cord is never crimped or damaged by sharp edges.

Always disconnect from the mains, when the device is not in use or before cleaning it.

During the initial start-up some smoke or smell may arise. This is a normal process and does not necessarily mean that the device is defective.

Caution: During the operation, the housing becomes very hot.

Do not switch the device on and off in short intervals as this would reduce the lamp's life.

HEALTH HAZARD!

***Never look directly into the light source, as sensitive persons may suffer
an epileptic shock
(especially meant for epileptics) !***

Please consider that damages caused by manual modifications to the device are not subject to warranty.

Keep away children and amateurs !

2. Operating determinations

This device is a moving head for creating decorative effects and was designed for indoor use only.

This device is suitable for ceiling mounting applications in discotheques, theatres etc.

Lighting effects are not designed for permanent operation. Consistent operation breaks will ensure that the device will serve you for a long time without defects.

Never run the device without lamp!

Do not shake the device. Avoid brute force when installing or operating the device.

Never lift the fixture by holding it at the projector-head, as the mechanics may be damaged. Always hold the fixture at the transport handles.

When choosing the installation-spot, please make sure that the device is not exposed to extreme heat, moisture or dust. There should not be any cables lying around. You endanger your own and the safety of others!

The minimum distance between light-output and the illuminated surface must be more than 0,8 meter.

Make sure that the area below the installation place is blocked when rigging, derigging or servicing the fixture.

Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.

The lamp must never be ignited if the objective-lens or any housing-cover is open, as discharge lamps may explode .

The maximum ambient temperature t_a must never be exceeded.

CAUTION!

The lens has to be replaced when it is obviously damaged, so that its function is impaired, e. g. due to cracks or deep scratches!

Operate the device only after having familiarized with its functions. Do not permit operation by persons not qualified for operating the device. Most damages are the result of unprofessional operation!

CAUTION!

The lamp has to be replaced when it is damaged or deformed due to the heat!

Please use the original packaging if the device is to be transported.


Please consider that unauthorized modifications on the device are forbidden due to safety reasons!

If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock, lamp explosion, crash etc.

DANGER TO LIFE!


For protection from dangerous electric shock, the fixture must be installed in ceiling box and covered with box covers before applying power!

3.Description of the device

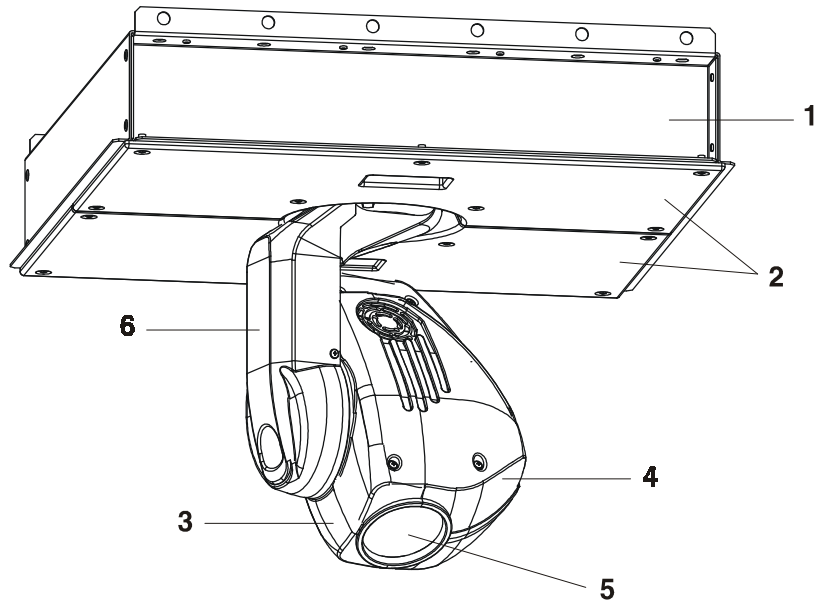


- | | |
|---------------------------|------------------------------|
| 1 - Ceiling box | 4 - Bottom cover of the head |
| 2 - Box covers | 5 - PC lens |
| 3 - Top cover of the head | 6 - Arm |

Moving head base

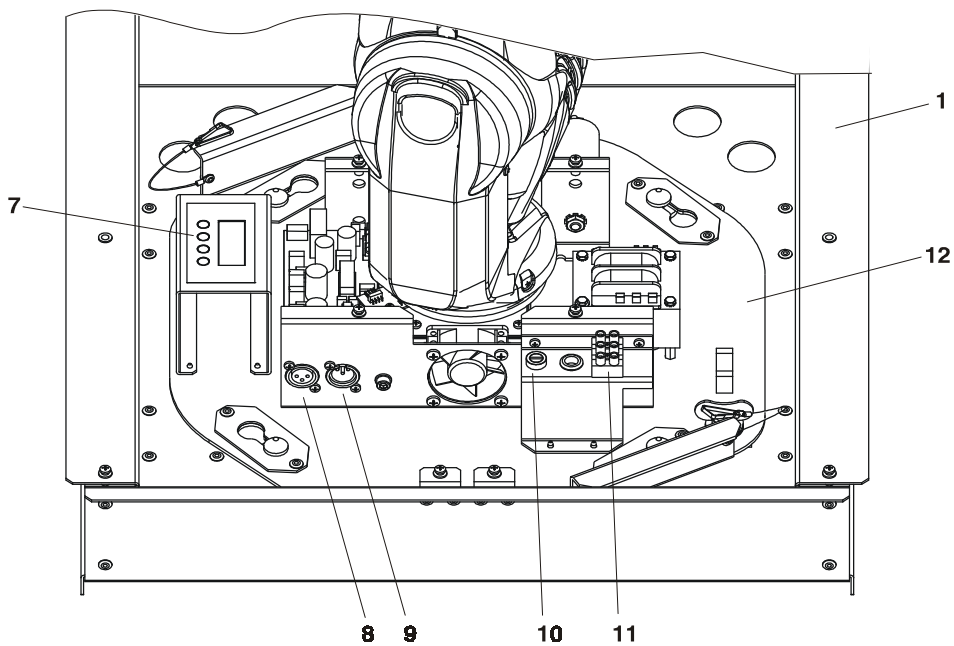

- | | |
|-------------------|-----------------------|
| 1 - Ceiling box | 10 - Fuse holder |
| 7 - Control panel | 11 - Power terminals |
| 8 - DMX output | 12 - Moving head base |
| 9 - DMX input | |

Control panel

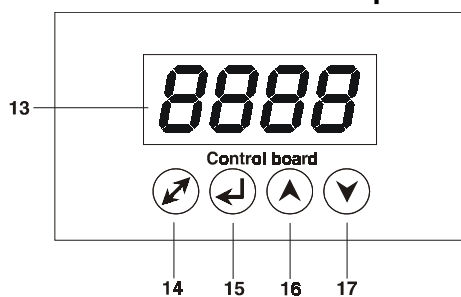


- | |
|-------------------|
| 13 - Display |
| 14 - Mode-button |
| 15 - Enter-button |
| 16 - Up-button |
| 17 - Down-button |

Installation

4.1 Fitting/Exchanging the lamp

DANGER !
Isolate the fixture from AC power before replacing the lamp.

Lamp cover:

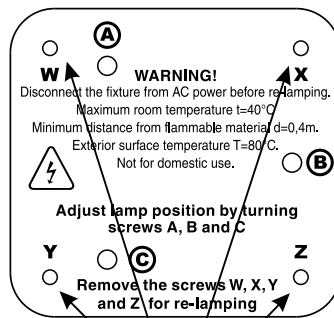

screws "X,Y,Z,W"

To insert the lamp (CDM-SA/T 150W/942):


1. Disconnect the fixture from power and allow it to cool.
 2. Loosen the 4 screws „X, Y, Z, W” on the lamp socket assembly at the back of the head.
 3. Gently pull the lamp socket assembly out of the head. Hold this assembly while replacing the lamp.
 4. Holding the lamp by its ceramic base, carefully pull the lamp straight out of the lamp socket.
 5. Holding the new lamp by its ceramic base, gently insert the lamp to the lamp socket. Make sure that the lamp is installed tightly into the lamp socket.
- Do not install a lamp with a higher wattage! A lamp like this generates temperatures the device is not designed for. Damages caused by non-observance are not subject to warranty. Please follow the lamp manufacturer's notes! Do not touch the glass bulb bare hand during the installation!
6. Reinsert the lamp socket assembly and tighten the 4 screws again.
 7. Align the new lamp (see instructions below)
 8. Reset the "LAti/rSEt" and "LAsT/rSEt" counters in the "InFO" menu on the control panel, by pressing the [Up] and [Down] buttons in one time and then confirming with the [Enter] button.

Do not operate this fixture with opened housing-cover!

4.2 Lamp adjustment

The lamp holder is aligned at the factory. Due to differences between lamps, fine adjustment may improve light performance. Strike the lamp, cancel all effects, open the shutter and set the dimmer intensity to maximum and focus the light on a flat surface (wall) or use function "LAA d" in the **Special functions** .

Center the hot-spot (the brightest part of the beam) using the 3 adjustment screws „A, B, C” . Turn one screw at a time to drag the hot-spot, diagonally across the projected image. If you cannot detect a hot -spot, adjust the lamp until the light is even.

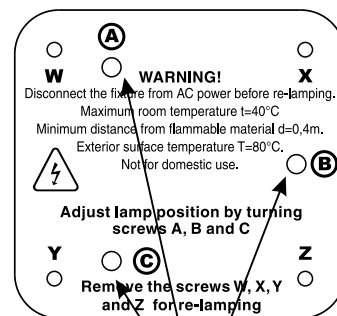

screws "A, B, C"

To reduce a hot-spot, pull the lamp in by turning all three screws „A, B, C” clockwise 1/4-turn at a time until the light is evenly distributed.

If the light is brighter around the edge than it is in the center, or if light output is low, the lamp is too far back in the reflector. „Push” the lamp out by turning the screws „A, B, C” counterclockwise 1/4-turn at a time the light is bright and evenly distributed.

4.3 Rigging

DANGER TO LIFE!
Please consider the respective national norms during the installation! The installation must only be carried out by an authorized dealer!

The moving head is designed for ceiling mounting.

The installation of the moving head has to be built and constructed in a way that it can hold 10 times the weight for 1 hour without any harming deformation.

When rigging, derigging or servicing the fixture staying in the area below the installation place, under high working places and other endangered areas is forbidden.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.

The operator has to make sure that safety-relating and machine-technical installations are approved by an expert after every four years in the course of an acceptance test.

The operator has to make sure that safety relating and machine-technical installations are approved by a skilled person once a year.

The moving head should be installed outside areas where persons may walk by or be seated.

IMPORTANT! OVERHEAD RIGGING REQUIRES EXTENSIVE EXPERIENCE, including (but not limited to) calculating working load limits, installation material being used, and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installation yourself. Improper installation can result in bodily injury and (or) damage to property.

The moving head has to be installed out of the reach of people.

Caution: Moving heads may cause severe injuries when crashing down! If you have doubts concerning the safety of a possible installation, do NOT install the moving head!

Before rigging make sure that the installation structure can hold a minimum point load of 10 times the moving head's weight.

Danger of fire !
When installing the device, make sure there is no highly inflammable material (decoration articles, etc.) in between a distance of min. 0,5 m.

CAUTION!
Make sure that the device is fixed properly! Ensure that the structure (truss) to which you are attaching the fixtures is secure.


The moving head do not have a power switch.
The AC mains supply must be fitted with a circuit breaker to isolate the fixture from the mains during service ,lamp replacement or when not in use.

The RECESSED WASH 150 includes a moving head and a ceiling box for mounting to the lower ceiling.

Installation:


1. Fix the recessed ceiling box (8) to the lower ceiling. Be careful the mounting grid can hold the moving head installation!

The ceiling box must be fixed properly, otherwise the vibration of the mounting structure can occur during the operation of the moving head. Pull the power cable and data cables through the apertures (1) on the bottom of the box.

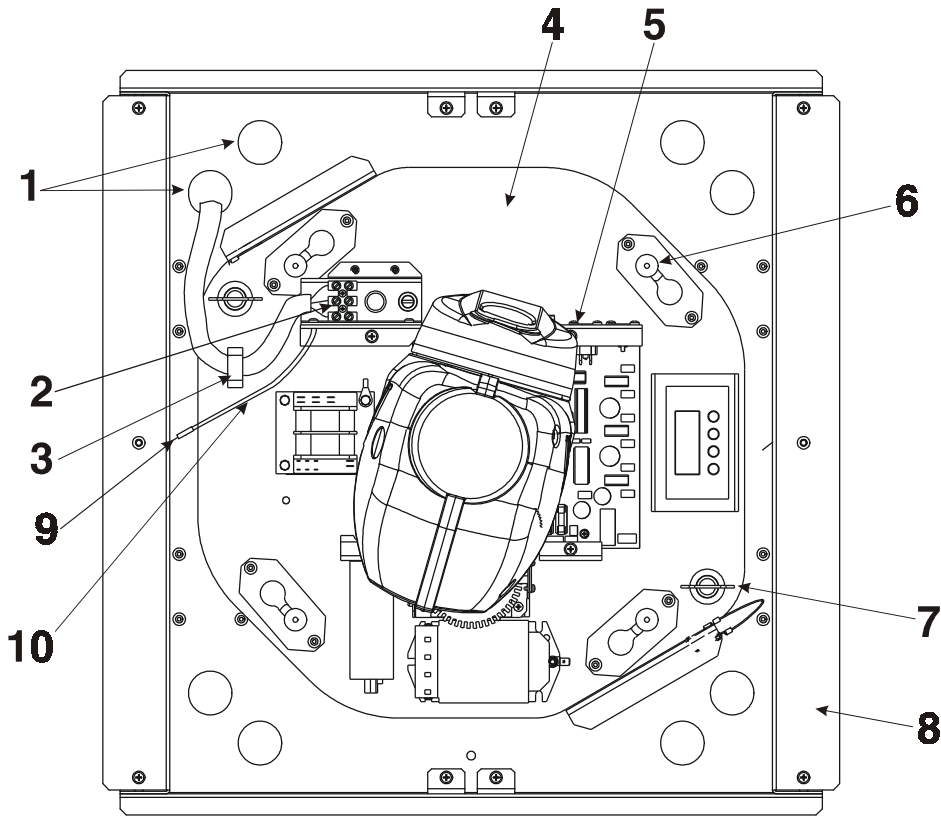


2. Put the moving head base (4) on the 4 fixative pins (6) in the bottom of the ceiling box (8) and turn the base gently to the right. Insert and tighten clockwise the 2 quick-lock fasteners (7) to secure the moving head in the ceiling box.

3. Use the 3-wired power cable (the wires with cross-sectional area of 1.5mm²) to connect the power. Verify that the voltage and frequency settings match the local AC supply. The settings are printed on the label on the bottom of the moving head base. If you wish to change the power supply settings, see the chapter Appendix. Pull the power cable through a cable holder (3) and connect it into the connection terminals (2) as follows:

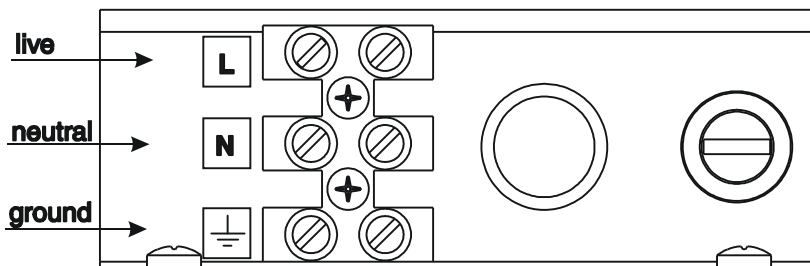

Possible pin identification schemes:

Cable (EU)	Cable (US)	Pin	International
Brown	Black	Live	L
Light blue	White	Neutral	N
Yellow/Green	Green	Earth	

Connect the earth-wire (10) with the earth-terminal (9) on the ceiling box (8).
If you have any doubts about proper installation, consult a qualified electrician!
Make sure the wires are securely connected. Tighten the 2 screws in the cable holder to secure the power cable in it.

***For protection from electric shock, the fixture must be grounded!
Verify the power supply settings before applying power!***

4. Connect the data cables to the fixture data input/output.

5. Fasten the 2 covers on the ceiling box by 14 screws.

DANGER TO LIFE!
***For protection from dangerous electric shock, the fixture must be installed in ceiling box and covered with box covers before applying power!
Before taking into operation for the first time, the installation has to be approved by an expert!***


***When installing fixtures side-by-side,
avoid illuminating one fixture with another!***

4.4 DMX-512 connection, master/slave connection


Use shielded, twisted-pair cable designed for RS-485 applications with low capacitance and characteristic impedance of 120 Ohm.

Occupation of the XLR-connection:

DMX - output
XLR mounting-socket:

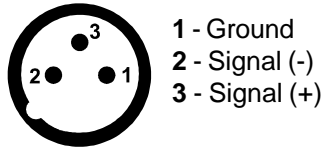

DMX-input
XLR mounting-plug:

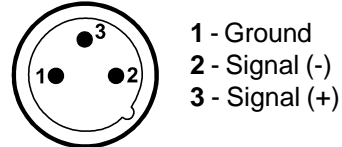

Building a serial DMX-chain:

If you are using the standard controllers, you can connect the DMX-output of the controller directly with the DMX-input of the first fixture in the DMX-chain. If you wish to connect DMX-controllers with other XLR-outputs, you need to use adapter-cables.

Connect the DMX-output of the first fixture in the DMX-chain with the DMX-input of the next fixture. Always connect output with the input of the next fixture until all fixtures are connected.

Caution: At the last fixture, the DMX-cable has to be terminated with a terminator. Solder a 120 Ohm resistor between Signal (-) and Signal (+) into a 3-pin XLR-plug and plug it in the DMX-output of the last fixture.

Building a master/slave-chain:

Connect the DMX-output of the master fixture in the data-chain with the DMX-input of the first slave. Always connect output with the input of the next slave until all slaves are connected (up to 9 fixtures).

Caution: It's necessary to insert the XLR termination plug (with 120 Ohm) into the input of the master fixture and into the output of the last slave fixture in the link in order to ensure proper transmission on the data link.

5. DMX Protocol 16-bit

Mode 1 Channel	Mode 2 Channel	Value	Function	Type of control
1	1	0-255	Pan Pan movement by 530°	proportional
2	3	0-255	Tilt Tilt movement by 280°	proportional
3	2	0-255	Pan fine Fine control of pan movement	proportional
4	4	0-255	Tilt fine Fine control of tilt movement	proportional
5	5	0 1-249 250-252 253-255	Speed of PAN/TILT movement Max. speed (tracking mode) From max. speed to min.speed (vector mode) Max. speed(track.mode),black-out while colour or gobo changes Max. speed(vector mode),black-out while PAN/TILT moving or colour or gobo changes	step proportional step step
6	6	0 10 21 32 42 53 64 74 85 96 106 117 128-189 190-193 194-255	Colours Open/white Turquoise Red Cyan Light green Magenta Light Blue Yellow Green Pink Blue Orange Forwards rainbow effect from fast to slow No rotation Backwards rainbow effect from slow to fast	proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional
7	7	0-255	Dimmer intensity Intensity from 0 to 100%	proportional
8	8	0 1-63 64-95 96-127 128-139 140-159 160-175 176-191 192-223 224-229 230-239 240-255	Lamp on/off,Shutter,Strobe,Reset Shutter closed Light intensity from 0 to 100% Shutter open Strobe-effect from slow to fast (max 8 flashes/s) Lamp on,reset,shutter closed Shutter closed Pulse-effect in sequences with increasing speed Pulse-effect in sequences with decreasing speed Random strobe effect with increasing speed Shutter open Lamp off after 3 s,shutter open Shutter open	step proportional step proportional step step proportional proportional proportional step step step step

6. DMX Protocol 8-bit

Mode 3 Channel	Mode 4 Channel	Value	Function	Type of control
1	1	0-255	Pan Pan movement by 530°	proportional
2	2	0-255	Tilt Tilt movement by 280°	proportional
3		0 1-249 250-252 253-255	Speed of PAN/TILT movement Max. speed (tracking mode) From max. speed to min.speed (vector mode) Max. speed(track.mode),black-out while colour or gobo changes Max. speed(vector mode),black-out while PAN/TILT moving or colour or gobo changes	step proportional step step
4	3	0 10 21 32 42 53 64 74 85 96 106 117 128-189 190-193 194-255	Colours Open/white Turquoise Red Cyan Light green Magenta Light Blue Yellow Green Pink Blue Orange Forwards rainbow effect from fast to slow No rotation Backwards rainbow effect from slow to fast	proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional proportional
5	4	0-255	Dimmer intensity Intensity from 0 to 100%	proportional
	5		No function	
6	6	0 1-63 64-95 96-127 128-139 140-159 160-175 176-191 192-223 224-229 230-239 240-255	Lamp on/off,Shutter,Strobe,Reset Shutter closed Light intensity from 0 to 100% Shutter open Strobe-effect from slow to fast (max 8 flashes/s) Lamp on,reset,shutter closed Shutter closed Pulse-effect in sequences with increasing speed Pulse-effect in sequences with decreasing speed Random strobe effect with increasing speed Shutter open Lamp off after 3 s,shutter open Shutter open	step proportional step proportional step step proportional proportional proportional proportional step step step

The RECESSED WASH 150 can be operated with a controller in **controller mode** or without the controller in **stand-alone mode**.

Both modes are described in the text below.

7. Controller mode

The fixtures are individually addressed (001-505) on a data link and connected to the controller. The fixtures respond to the DMX signal from the controller.

7.1 DMX addressing

The control panel on the front side of the base allows you to assign the DMX fixture address, which is defined as the first channel from which the RECESSED WASH 150 will respond to the controller.

If you set, for example, the address to channel 5, the RECESSED WASH 150 will use the channel 5 to 12 for control.

Please, be sure that you don't have any overlapping channels in order to control each RECESSED WASH 150 correctly and independently from any other fixture on the DMX data link.

If two, three or more RECESSED WASH 150 are addressed similarly, they will work similarly.

For address setting, please refer to the instructions under "Addressing" (menu "**A001**").

Controlling:

After having addressed all RECESSED WASH 150, you may now start operating these via your lighting controller.

Note: After switching on, the RECESSED WASH 150 will automatically detect whether DMX 512 data is received or not. If there is no data received at the DMX-input, the display will start to flash "**A001**" with actually set address.

This situation can occur if:

- the 3 PIN XLR plug (cable with DMX signal from controller) is not connected with the input of the RECESSED WASH 150
- the controller is switched off or defective, the cable or connector is defective or the signal wires are swapped in the input connector.

Note: It's necessary to insert the XLR termination plug (with 120 Ohm) to the last fixture in the link in order to ensure proper transmission on the DMX data link.

7.2 Remotely controllable functions

Lamp

The RECESSED WASH 150 is to be operated with a CDM-SA/T150W/942 lamp.

A relay inside of the RECESSED WASH 150 allows you to switch on and off the lamp via the control panel or via your DMX-controller without affecting the rest of the lighting.

To switch On/Off the lamp, use the menu "**LAMP**" - please refer to "Switching On/Off the lamp".

Note: It is also important to note, that the discharge lamp is cold restrike types, that means, that they have to be cold before re-striking. For this reason, you have to wait 5 minutes (after having switched Off the lamp before you can switch it back On again. If you try to switch On the lamp within 5 minutes after having switched it Off, the RECESSED WASH 150 will store this information and automatically ignite the lamp when the 5 minutes period has expired. The message "**HEAt**" will appear on the control board display of the RECESSED WASH 150. If the ignition of the lamp is seven times unsuccessful, on the display will appear "**LA.Er.**", meaning that the lamp could be damaged or even missed, or there could be a failure on the ignitor or ballast.

Colour - wheel

The RECESSED WASH 150 contains a colour wheel with 12 colour positions - 11 of these with dichroic colours and the last one white. The colour-wheel can be positioned between two adjacent colours in any position. It is also possible to rotate the colour-wheel continuously at different speeds ("Rainbow effect" in both directions).

Dimmer

The dimming (0-100%) is provided by the mechanical dimmer unit.

Shutter/Strobe

The shutter is executed by the mechanical shutter unit. This unit may also be used for strobe effect (1 - 8 flashes per second).

8. Stand - alone mode

The fixtures on a data link are not connected to the controller but can execute pre-set programs which can be different for every fixture. To set the program to be played, see the "Stand-alone setting" (menu "St.AL.").

"Stand-alone operation" can be applied to the single fixture (the fixture may be set to the master /slave mode or controller mode) or to multiple fixtures operating synchronously.

Synchronous operation of multiple fixtures requires that they must be connected on a data link and one of them is set as a master (master mode) and the rest as the slaves (slave mode). The slaves are assigned to SLA1-SLA9 and on the certain slave address can be connected only one fixture. To set the fixture as the master or slave , see the "Addressing" (menu "A001").

If the master fixture runs a reset or plays test(program) ,all slaves will execute these acts too.


You can't play or edit any programs on the slaves by their control panels if the master is switched on and connected to the master/slave chain.

The master fixture starts simultaneous program start in the other slave fixtures. All fixtures have a definite, synchronized starting point when playing back their programs. The number of running program is the same in all slaves and depends on the master's choice (menu "St.AL."). Every fixture runs its program repeatedly ,starting the program step No.1 when requested by the master .

For example:

If the slave fixture has a shorter program length, it will continuously repeat its program until the master fixture finishes its own program and restarts its program running (slave 1- prog. step 3 will not be finished).

If the slave fixture has a longer program length, it will restart at prog. step 1 before it completes all its prog.steps (slave 2 - prog. step 5 will not be played)- see the picture below.

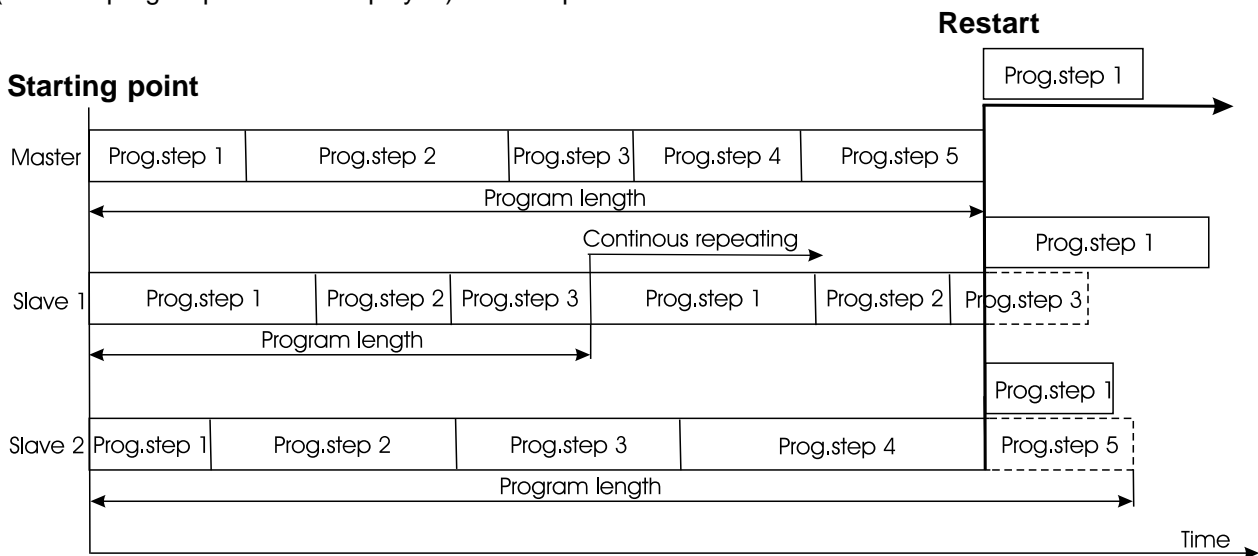

Note: Disconnect the fixtures from the DMX controller before master/slave operating ,otherwise data collisions can occur and the fixtures will not work properly!


It's necessary to insert the XLR termination plug (with 120 Ohm) into the input of the master fixture and into the output of the last slave fixture in the data link in order to ensure proper transmission on the data link.

From the master's control panel is possible to control any slave in a master/slave chain.

9. Functions of the control panel

The control panel situated on the front side of the base offers several features. You can simply set the DMX address, master/slave mode, read the number of lamp or unit hours, run test, make a reset and also use many functions for setting and service purposes.


The main menu of the control panel is accessed by pressing the [↗] button - press this one so many times until the display shows message "A001" (with actually stored address). Browse through the menu by the pressing [▲] or [▼] buttons - the display shows step by step these messages: **A001, SLct, InFO, PErS, LAMP, tESt, StAL, rESE, SPEC.** Press [↵] if you wish to select one of them. The functions are described in the following sections and the function hierarchy is shown below.

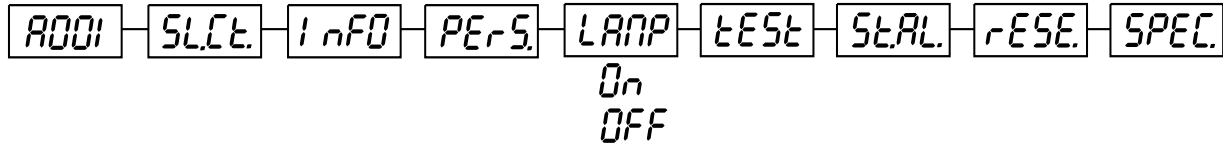

9.1 Addressing



By this menu you can set the DMX address or address the fixture as a master/slave.

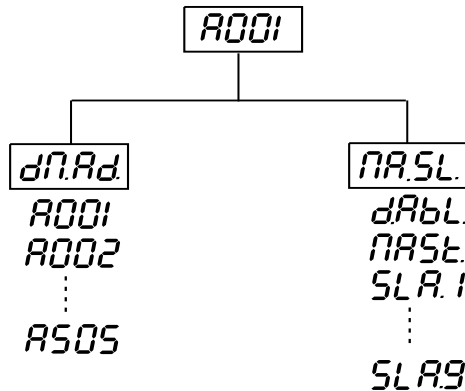

1. Press the [↗]- button so many times until the display shows message "A001" (with actually stored address).
 2. Press [↵]-button and use the [▲] and [▼] buttons to select "dM.Ad."-menu.
 3. Press [↵]-button(the letter "A" flashes) and by [▲] and [▼] buttons select required address (001 - 505), press [↵]-button to confirm.
 4. Select "M.ASL."-menu,press[↵]-button and use [▲] and [▼] buttons to select "d.AbL."(no master or slave),press [↵]-button to confirm.
 5. Press the [↗]- button.Choosen address is shown on the display.
- If message "A001" (with actually stored address) flashes-no DMX data received at the DMX-input.



1. Press the [↗]- button so many times until the display shows message "A001" (with actually stored address).
 2. Press [↵]-button and use the [▲] and [▼] buttons to select "MA.SL."-menu.
 3. Press [↵]-button(display flashes) and select "MASt"(to set the fixture as the master in a chain of multiple fixtures) or "SLA.1"- "SLA.9" (to set the fixture to be the slave in a chain of multiple fixtures) and press [↵] to confirm. If you want address no master or slave, select "d.AbL.".
 4. Press the [↗]- button.Choosen address is shown on the display.
- If message "MASt." fast flashes-DMX signal is received at the DMX-input- disconnect DMX controller!

Only one fixture may be the master. Up to the 9 slaves may be connected to the master and on the certain address can be connected only one slave fixture (SLA1-SLA9).

Note: Disconnect the fixtures from the DMX controller before master/slave operating, otherwise data collisions can occur and the fixtures will not work properly!

If the fixture is set as the master and DMX signal is connected to its input, the error message "MAEr" will appear on its display and the fixture's address will be set to its DMX address in order to respond to DMX signal from the controller.

For example:

The master fixture has this address setting: "dM.Ad."-menu.....**A009**

"MA.SL."-menu.....**MASt** (is displayed)

The DMX signal is connected to the master fixture. The message "**MASt**" starts fast flashing and after 20s error message "MA.Er" appears on its display and the fixture automatically will be switched to its DMX address (master address is disabled).

Now the fixture has the address setting: "dM.Ad."-menu.....**A009** ("A009"/" MA.Er"blinks)

"MA.SL."-menu.....**d.AbL.**

If the fixture is set as the slave and DMX signal is connected to its input, the fixture will respond to DMX signal from the controller (in dependence on the fixture's DMX address).

9.2 Slave control



This function allows you to control the slaves from the master's control panel in a master/slave operation. Select this function from the main menu and press [↵]-button. Browse the list of all connected slaves ("SL.C.1" - "SL.C.9") by pressing [▲] and [▼] buttons. Select the desired slave and press [↵]-button. The slave's control panel is available from the master's control panel.

If no slave is connected to the master, messages "SL.C.1", "SL.C.2", "SL.C.3"... "SL.C.9" still round repeat.


Note: This function is available from the master fixture only.

9.3 Fixture informations



The menu allows you to read a useful information about the fixture as the lamp life, lamp strikes, software version, etc.

Press [▲] or [▼] buttons to select the desired option and press [↵] to see the value or next submenu.

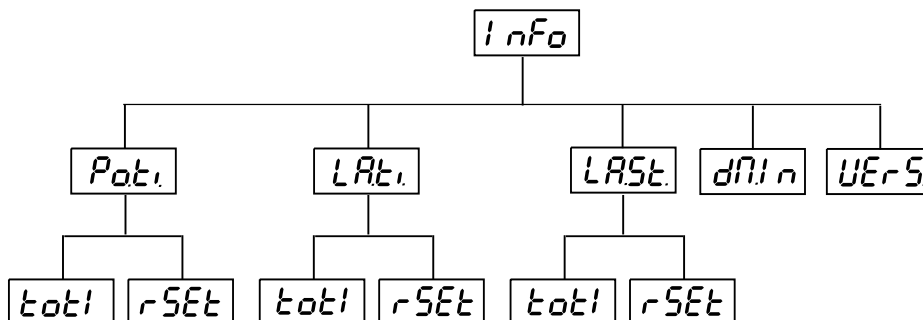

Power On time



-By this option you can read the total number of the operation hours since the

RECESSED WASH 150 has been fabricated. Press [↵] or [↶] to return to the menu.

rSEt - The number of the hours that the RECESSED WASH 150 has been powered On since the counter was last reset. Press [↵] or [↗] to return to the menu. In order to reset this counter to 0, you have to hold the [▲] and [▼]-button and press the [↵]-button.

LAt. **Lamp On time**

totl - This option enables you to read the total number of the operation hours with the lamp on since the RECESSED WASH 150 has been fabricated. Press [↵] or [↗] to return to the menu.

rSEt - The number of hours that the lamp has been powered On since the counter was last reset. Press [↵] or [↗] to return to the menu. In order to reset this counter to 0, you have to hold the [▲] and [▼]-button and press the [↵]-button.


LSt. **Lamp strikes**

totl - By this option you can read the total number of the lamp strikes since the RECESSED WASH 150 has been fabricated. Press [↵] or [↗] to return to the menu.

rSEt - The number of the lamp strikes since the counter was last reset. Press [↵] or [↗] to return to the menu. In order to reset the counter to 0, you have to hold the [▲] and [▼]-button and press the [↵]-button.

dMn. - **DMX values**

Readout DMX values of each channel received by the fixture. Use the [▲] and [▼] buttons to select desired channel and press [↵] to read its value coming to the fixture or [↗] to cancel and return to the menu.

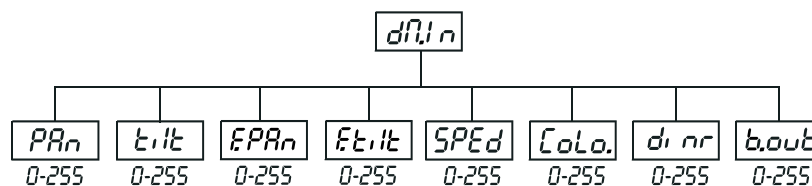


UErS. - **Software version**

By this function you can read the software version of the display module. Press [↵] to read its value or [↗] to return to the menu.

9.4 Personality options

PErS.

These options allow you to modify RECESSED WASH 150 operating behavior. Press [▲] and [▼] buttons to select the desired option and press [↵] to set the value or to see next submenu.

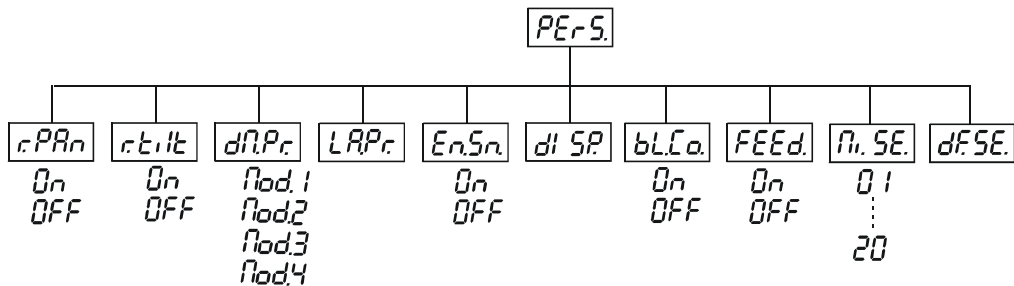

r.PAn - Pan reverse

This function allows you to invert the pan movement. Use the [▲] or [▼] buttons to select "On" if you wish this feature or "Off" if you don't wish this feature and press [↵] to confirm or [↻] to cancel and return to the menu.

r.tilt - Tilt reverse

This function allows you to invert the tilt movement. Use the [▲] or [▼] buttons to select "On" if you wish this feature or "Off" if you don't wish this feature and press [↵] to confirm or [↻] to cancel and return to the menu.

dN.Pr. - DMX presetting

The function makes possible to select from the 4 DMX- channels settings (including 8 or 16 bit movement resolution). Use the [▲] or [▼] buttons to select desired channel settings ("Mod.1,Mod.2,Mod.3,Mod.4") and press [↵] to confirm or [↻] to cancel and return to the menu.


List of the channels settings:

Channel	Mode 1 (default)	Mode 2	Mode 3	Mode 4
1	Pan	Pan	Pan	Pan
2	Tilt	Fine Pan	Tilt	Tilt
3	Fine Pan	Tilt	Speed	Colours
4	Fine Tilt	Fine Tilt	Colours	Dimmer
5	Speed	Speed	Dimmer	No function
6	Colours	Colours	Lamp on/off,stroke	Lamp on/off,stroke
7	Dimmer	Dimmer		
8	Lamp on/off,stroke	Lamp on/off,stroke		

Please refer to the chapter "DMX- protocol" for detail description.
If the Mode 4 is selected,the speed of pan/tilt movement is set onto maximum.

L.A.P.r. Lamp presetting

This function allows you to adjust the lamp settings:

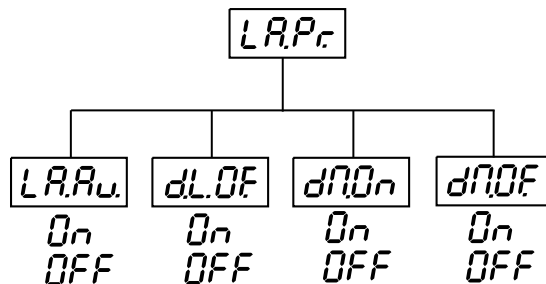

L.A.A.u. Lamp On after switching the fixture On

This function enables to turn the lamp on automatically after switching the fixture on. Use the [▲] and [▼] buttons to select "On" if you wish to turn the lamp on automatically after switching the

fixture on or "Off" if you wish the lamp off after switching on the fixture and press [↵] to confirm or [↶] to cancel and return to the menu.

dL.OF. Lamp Off via DMX

This function allows you to switch off the lamp by DMX. Use the [▲] and [▼] buttons to select "On" if you want to switch off the lamp by DMX or "Off" if you don't want to switch off the lamp by DMX and press [↵] to confirm or [↶] to cancel and return to the menu.

dN.On Lamp On if DMX is present

This function allows you to strike the lamp automatically after 26 seconds if DMX signal is present on the data link. If the ignition is unsuccessful (e.g. lamp is too hot), the fixture will try to ignite the lamp after next 26 s. This process will repeat until the lamp lights. Use the [▲] and [▼] buttons to select "On" if you want to strike the lamp or "Off" if you don't want to strike the lamp and press [↵] to confirm or [↶] to cancel and return to the menu.

dN.OF. Lamp Off if DMX is missing

This function allows you to switch Off the lamp automatically after 2 minutes if DMX signal is missing on the data link. Use the [▲] and [▼] buttons to select "On" if you want to switch Off the lamp or "Off" if you don't want to switch Off the lamp and press [↵] to confirm or [↶] to cancel and return to the menu.


En.Sn. Switch On/Off the lamp light sensor

Use the [▲] and [▼] buttons to select "On" if you wish to switch the lamp light sensor on and press [↵] to confirm or [↶] to cancel and return to the menu. **The option "On" is for the standard operation.** Use the [▲] and [▼] buttons to select "Off" if you wish to switch the lamp light sensor Off and press [↵] to confirm or [↶] to cancel and return to the menu.

Important: The option "Off" is for "emergency operation" only if the lamp light sensor is defective and you will wait for a service intervention! If the lamp light sensor is switched Off, the error messages "LAEr, SnEr, HEAt" will not appear on the display (only the message "HEAt" will appear if the lamp was turned off and on within 5 minutes) and at switching the lamp on the electronics will still try to ignite the lamp until it shines (even when the lamp is damaged or absent), on this account some electronics parts could be damaged!

di SP. - Display adjusting

This function allows you to adjust the display settings:

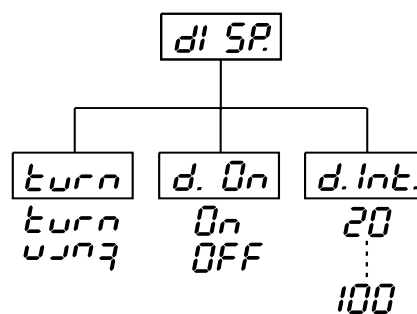

di. nt. - Display -intensity

With this function you can adjust the display intensity from 20% to 100%. Use the [▲] or [▼] buttons to select the level of the display intensity and press [↵] to confirm or [↶] to cancel and return to the menu.

turn - Display-reverse

With this function, you can rotate the display by 180°. Use the [▲] or [▼] buttons to select "normal display" or "display turned by 180°" and press [↵] to confirm or [↶] to cancel and return to the menu.

d.On - Display-On

This function allows you to keep the display on or to turn off automatically 2 minutes after last

pressing any button on the control panel. Use the [▲] or [▼] buttons to select "On" if you wish to keep the display on or "Off" if you wish to turn off automatically 2 minutes after last pressing any button on the control panel and press [↵] to confirm or [↶] to cancel and return to the menu.

blCo. - Blackout during movement correction

The function executes the blackout during the head movement correction (the moving head has lost its right pan/tilt-position for a short moment). Use the [▲] or [▼] buttons to select "On" if you want to execute the blackout or "Off" if you don't and press [↵] to confirm or [↶] to cancel and return to the menu.

FEEd. - PAN/TILT-feedback

This function allows to return the moving head to the required pan/tilt position after changing the position by external force (e.g. by stroke). Use the [▲] or [▼] buttons to select "On" if you wish to enable this function or "Off" if you wish not to return the moving head to the required position and press [↵] to confirm or [↶] to cancel and return to the menu.

Note: If the feedback was switched off, the pan/tilt-position is changed by an external force and the feedback is switched on again, the moving head might not be synchronized with the DMX signal. You have to make a reset in order to synchronize the moving head with the DMX signal.

n. SE. - Microphone -sensitivity

With this function you can adjust the microphone sensitivity from 1 (maximum) to 20 (minimum). Use the [▲] or [▼] buttons to select the level of the microphone sensitivity and press [↵] to confirm the chosen level or [↶] to cancel and return to the menu.

Example:



underexited



right level

(upper segment blinks by the bass rhythm)



overexited

df.se. - Default settings

Press [↵] to reset all fixture personalities (not the adjusting functions) to the default values. On the display will appear "rSt" meaning that the fixture makes the reset. See the table of personality setting and their default positions.

Personality	Display	Default values (SHADED)
Pan reverse	rPAN	On
		OFF
Tilt reverse	rtilt	On
		OFF
DMX presetting	dNPr	Mod 1
		Mod 2
		Mod 3
		Mod 4
Lamp On after switch. the fixture On	LAAU	On
		OFF
Lamp Off via DMX	dLOF	On
		OFF
Lamp On if DMX is present	dNOOn	On
		OFF
Lamp Off if DMX is missing	dNOF	On
		OFF
Blackout during mov. correction	bLCo	On
		OFF
Display-On	d On	On
		OFF
Display intensity	d Int	20 40 60 80 100
Display- reverse	turn	turn
		u3n3
PAN/TILT feedback	FEEd	On
		OFF
Switch On/Off the lamp light sensor	EnSn	On
		OFF
Music trigger	Audi	On
		OFF
Microphone sensitivity	m SE	01 02 03 04 05
		06 07 08 09 10
		11 12 13 14 15
		16 17 18 19 20

9.5 Switching On/Off the lamp



Press the [Mode] button in order to access the main menu. Browse through the menu by pressing the [▲] and [▼] buttons until the display shows "LAMP". Confirm by pressing [↵] button.


Use the [▲] and [▼] buttons to select "On" to switch On the lamp and "Off" to switch Off the lamp and press [↵] to confirm or [↶] to cancel.

9.6 Test sequences



This function allows you to run a special demo-test sequences without an external controller, which will show you some possibilities of using RECESSED WASH 150. Press [▲] or [▼] keys to select the "Mod1" or "Mod2" sequences. The "Mod1" is suitable for projections on the wall, ceiling or ground without any head-movement, the "Mod2" uses all RECESSED WASH 150 functions and therefore is good for a complete introduction of the fixture. Select "Mod1" or "Mod2" by [▲] or [▼] buttons and press [↵]-button to confirm the choice. If the test program is running, messages "run/test" blink on the display.


If you want to pause the running program in the required position, press the [↵]-button (messages "PAUS"/" test" blink). To continue the program running, press the [↵]-button again.

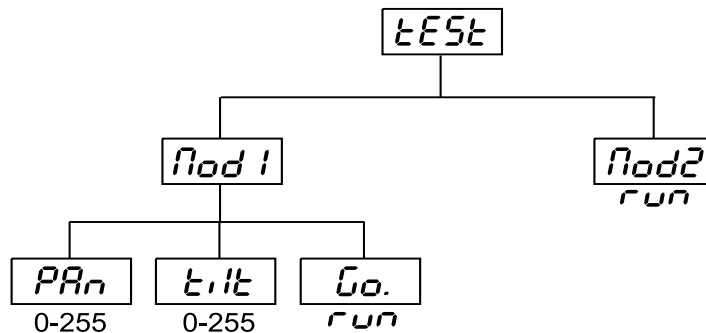

9.7 Stand-alone setting



This menu offers options for stand-alone mode as a selection of the playing program, programming and modifying current programs.

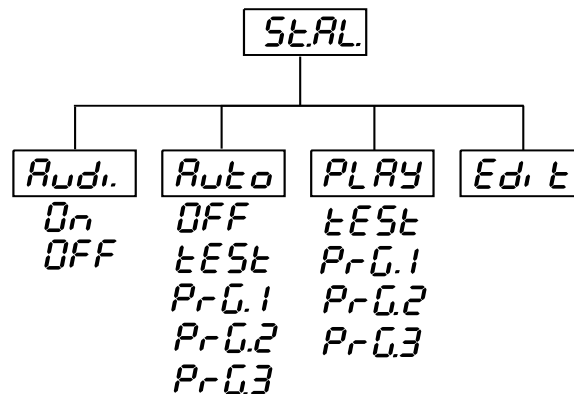

The RECESSED WASH 150 enables the sound control of the running programs via the built-in microphone. Use the [▲] or [▼] buttons to select "On" if you wish this feature or "Off" if you don't wish this feature and press [↵] to confirm or [↵] to cancel and return to the menu.

Auto -Presetting playback

This function allows you to select the the program which will be played in the stand-alone mode after switching the fixture On. Use the [▲] or [▼] buttons to select desired program ("tEst"- bilt-in program) or "OFF" if you don't want trigger any program after switching the fixture On and press [↵] to confirm or [↶] to cancel and return to the menu. Selected program will be played continuously in a loop as long as it appears on the display.

This option should be set "OFF" for all slaves in the master/slave chain by reason of the right program starts.

For example: You have selected program "PrG.3" in this menu and:

this fixture is set as a single fixture (master/slave or controller operating)- the fixture will run its program "PrG.3".

this fixture is set as a master in a data chain- the fixture will run its program "PrG.3".

this fixture is set as a slave in a data chain- the fixture will run its program according to the master(if the master runs its own program "PrG.1", the slave will run its own program "PrG.1"also).

Note:If the fixture operates in the controller mode (DMX controller is connected) and any program from this menu is selected ,in this case the fixture will not respond to the DMX controller after switching On and will play selected program.

PLAY - Playing program

This function allows you to run a bilt-in program "tEst" and the 3 freely-programmable programs "PrG.1,PrG.2,PrG.3" .Press [▲] or [▼] buttons to select the desired program and press [↵] to run the program which will be played continuously in a loop.

If you want to pause the runnig program in the required position, press the [↵]-button(messages"PAUS"/"program No."blink). To continue the program running,press the [↵]-button again.

Note:If the fixture operates in the controller mode (DMX controller is connected) and any program from this function is selected in this case the fixture will not respond to the DMX controller and will play selected program.

You can't play programs on the slave fixtures from their control panels if the master fixture is switched On and connected to the slaves (playing is forced by the master).

Edit. - Editing program

This menu item allows you to select a program to edit or create.The RECESSED WASH 150 has one built-in program ("tEst") and the 3 free programs,each up to 99 steps.Each program step has a dynamic part(fade time) and static part(step time).

Fade time-the time,during which effects move to the programmed position.

Step time-the time,during which effects last in the current step.

If the fixture is set as a master ,then you may edit any program in the slaves.You can't edit programs on the slave fixtures from their control panels if the master fixture is switched on and connected to the slaves (editing is possible by the master control panel only).

Procedure:

1. Press [▲] or [▼]-button to select the program you want to edit ("PrG.1" - "PrG.3") and press [↵].
2. Press [▲] or [▼]-button to select the desired fixture ("MASt." - "SLA.9") and press [↵]-button.
3. Press [▲] or [▼]-button to select the desired program step ("St.01" - "St.99") and press [↵]-button.
- 4 Press [▲] or [▼]-button to select the desired item and press [↵]-button.Now you can edit by [▲] or [▼] buttons the DMX value for selected item:

"P.End." - a total number of the program steps,value 1-99 .**This value you must set before start programming**(e.g. if you want to create program with the 10 steps,set P.End=10).

"PAn" - a pan,value 0-255

"tilt" - a tilt,value 0-255

"F.PAn" - a fine pan, value 0-255

"F.tilt" - a fine tilt,value 0-255

"SPEd" - a speed of PAN/TILT movement,value 0-255

"Colo." - a colour , value 0-255

"dimr" - a dimmer, value 0-255

"b.out." - a strobe,reset,lamp on/off ,value 0-255

"S.tim." - a step time,value 0,1-25,5 seconds

"COPY." - a copying the current prog. step to the next prog. step .If the last prog.step is copied to the next prog. step ,parameter "P.End" is increased about 1 automatically (except step 99).

5. Press [↵]-button to confirm adjusted value .

6. Press [↗]-button,select next prog. step and repeat this procedure (steps 4 and 6).
 The editing programs "PrG.1,PrG.2,PrG.3" are saved in the current modified fixture (master or slave1-9).
 Note:If you want to operate the programs in "Audio mode",set step time =0.25s or higher and speed=1 or higher to ensure the fluent pan/tilt movement.

9.8 Reset function




Press [↵] button to run a reset. This option enables the RECESSED WASH 150 to index all effects (functions) and return to their standard positions.


9.9 Special functions




Use the [▲] or [▼] buttons to browse through the special functions and select the one by pressing [↵]-button.

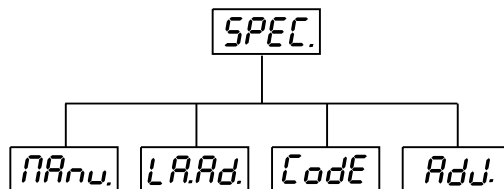

The function allows you to control manually the channel functions of the fixture. Use the [▲] or [▼] buttons to select desired function and press [↵] to adjust the effect or [↗] to cancel and return to the menu.

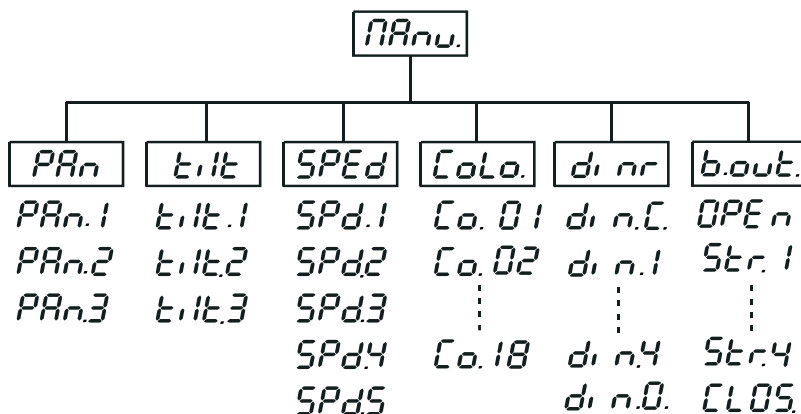

This function can be used when you make the fine adjustment of the lamp.If you select "LAAAd" pressing by [↵] button ,all effects will be canceled,shutter will be opened and the dimmer intensity will be set to maximum.By using the options "PAn,tilt," you can focus the light on a flat surface (wall) and perform the fine lamp adjustment.

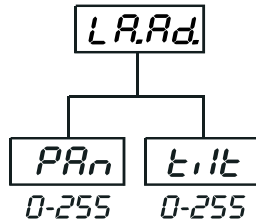


Code - Fixture code

The option contains identification code (1-9999) for the fixture, which is used for the master/slave operation.

Adj. - Adjusting the default position of the colour wheel

By this function you can calibrate and adjust the colour wheel to its standard/right positions. Use the [▲] and [▼] buttons to browse through the adjusting menu - the display shows step by step these messages: "PAn, tilt,FPAn,FTilt,SPEd,Colo,b.out,FCAL" by which you can adjust the fixture to the required/desired position (0-255) before the function calibration. Then when the positioning is finished use the last "F.CAL." function (Fixture calibration).

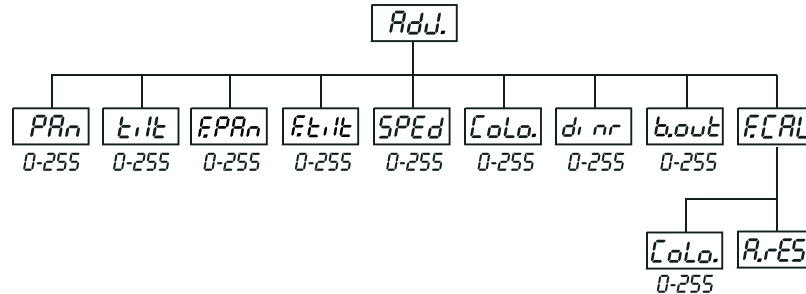

1. Calibration via the control panel

Press [↵] and the [▲] or [▼] buttons in order to display the message: "Colo" for very smooth function calibration. Press [↵] and use the [Up] and [Down] buttons in order to adjust its right value from 0 to 255. Then press [↵] to confirm or [↵] to cancel and return to the menu. When the calibration is finished, it is necessary to use the "A.rES." function in order to write the calibration value to the memory (EPROM) and to make a reset in order to check the newly adjusted position of the colour wheel. When the reset of the fixture is finished, the display will show the "F.CAL." message. Press [↵] to repeat the calibration or [↵] to return to the "Adj." menu.

2. Calibration via the external controller

Connect the DMX controller, press [↵] and the [▲] or [▼] buttons in order to display the following message "Colo" and press [↵].

Now you can calibrate the colour wheel by your controller. The DMX calibration protocol is described in the table mentioned below.

DMX Calibration protocol:

DMX chanel	Function		
1	Colour	S m i m o o t h e p	Calibration 0-255
2	No function		
3	No function		
4	No function		
5	No function		
6	Colours	Standard protocol	
7	Dimmer	Standard protocol	
8	Strobe,reset	Standard protocol	

After having calibrated required functions press [↵] to confirm (or [↶] to cancel and return to the menu without reset by the "A.rES." function) and use the "A.rES." function in order to write the calibration value to the memory (EEPROM) and to make a reset in order to check the new adjusted position of the colour wheel.

10. Error and information messages

M.b.Er.

This message informs you that the main PCB does not communicate correctly with the Control Panel.

Co.Er. (colour -wheel error)

This message will appear after the reset of the fixture if the magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping-motor is defective (or its driver circuit on the main PCB). The colour-wheel is not located in the default position after the reset.

Sn.Er.

This message appears if the lamp lighting sensor is failed.

HEAt

This message appears if you try to switch on the lamp within 5 minutes after having switched it off (the lamp is too hot). The message will appear on the display if the lamp doesn't ignite within 20 seconds. The fixture will store this information and automatically ignite the lamp when the 5 minutes period has expired.

Caution: The message is disabled if the lamp light sensor (function "En.Sn.") is switched Off (only if the lamp was turned Off and On within 5 minutes, the message "HEAt" will appear).

LA.Er.

The ignition of the lamp is seven times unsuccessful (the "HEAt" message appeared six times before), and the display shows "LA.Er", meaning that the lamp could be damaged or even missed, the fixture is overheating (this can occur if the ambient temperature is 40° C or more) or there could be a failure on the ignitor or ballast.

Please place or replace the lamp, check the ambient temperature or contact your dealer if the situation was not caused by the lamp.

Caution: The message is disabled if the lamp light sensor (function "En.Sn.") is switched Off.

Po.Er.

This message will appear if the fixture was shortly disconnect from the main.

PA.Er.(Pan-yoke movement error)

This message will appear after the reset of the fixture if the yoke's magnetic-indexing circuits malfunction (sensors failed or magnet missing) or the stepping motor is defective. (Or its driving IC on the main PCB). The yoke is not located in the default position after the reset.

ti.Er.(TILT-head movement error)

This message will appear after the reset of the fixture if the head's magnetic-indexing circuit malfunctions (sensor failed or magnet missing) or the stepping motor is defective. (Or its driving IC on the main PCB). The head is not located in the default position after the reset.

MA.Er.(Master error)

The message informs you that the fixture was addressed as a master and DMX signal is connected to its input. Disconnect the DMX controller from fixture's input and address the fixture as the master again.

11. Technical specifications

Power supply:

EU-model:	208/230/240V AC, 50/60Hz ~
Fuse:	T 2.5A @ 230V
US-model:	100/120/208/230/240V AC, 50/60Hz ~
Fuse:	T 5.0A @ 120V
Power consumption:	300 VA


Lamp:

Philips CDM-SA/T 150/942, G12


Optical System:

- High luminous-efficiency parabolic system and PC lens of diameter 88 mm
- 21° beam angle .

Beampath:

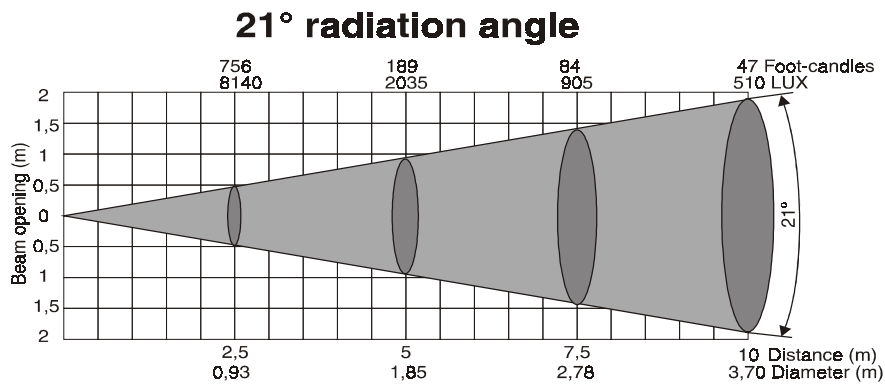

Distance=5m

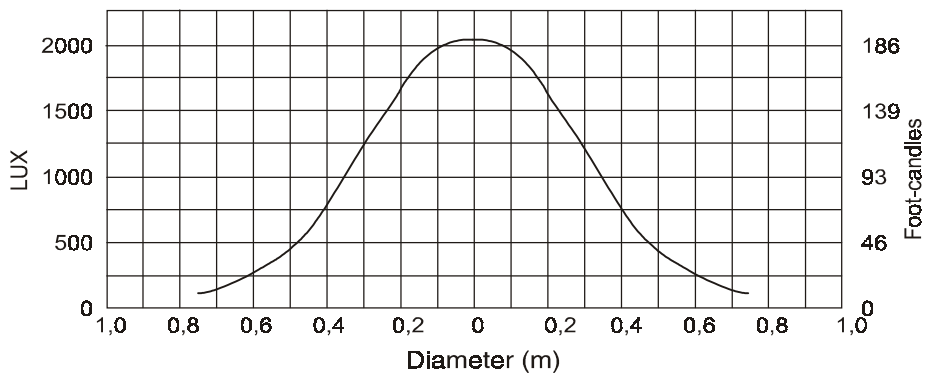

Colours:

- 11 dichroic filters plus white
- Colour-wheel with variable rotation speed

Dimmer:

- Smooth dimmer from 0 - 100 %

Shutter/Strobe:

- Strobe effect with variable speed (1 - 8 flashes per second)

Motors:

- 5 high quality stepping motors controlled by microprocessors

Fans:

- Two axial fans - one in the projector head and one in the base.

Electronics:

- master/slave operation
- built-in microphone
- 3 freely programmable programs, each up to 99 steps
- Digital serial input DMX-512
- 4 DMX channel-presettings (8 or 16-bit protocols):

Channel	Mode 1	Mode 2	Mode 3	Mode 4
1	Pan	Pan	Pan	Pan
2	Tilt	Fine Pan	Tilt	Tilt
3	Fine Pan	Tilt	Speed	Colours
4	Fine Tilt	Fine Tilt	Colours	Dimmer
5	Speed	Speed	Dimmer	No function
6	Colours	Colours	Lamp on/off, strobe	Lamp on/off, strobe
7	Dimmer	Dimmer		
8	Lamp on/off, strobe	Lamp on/off, strobe		

Pan/Tilt:

- Pan movement range 530°
- Tilt movement range 280°
- Automatic Pan / Tilt position correction
- Maximum PAN-movement 530° in 3.0 s
- Maximum TILT-movement 280° in 1.9 s

Rigging:

- Ceiling box for 600x600 (625x625)mm grid mounting or version for ceiling from plaster-boards
- Integral attachment points for wire hangers or all-thread support

Temperatures:

- Maximum ambient temperature t_a : 40° C
- Maximum housing temperature t_b (steady state): 70° C

Minimum distances:

- Min.distance from flammable surfaces: 0,5m
- Min.distance to lighted object: 0.8m


Weight-moving head:

- EU-version:10 kg
- US-version:12.5 kg

Weight-ceiling box:

7.0 kg

Dimensions (mm)- ceiling box is version for 600x600mm grid:

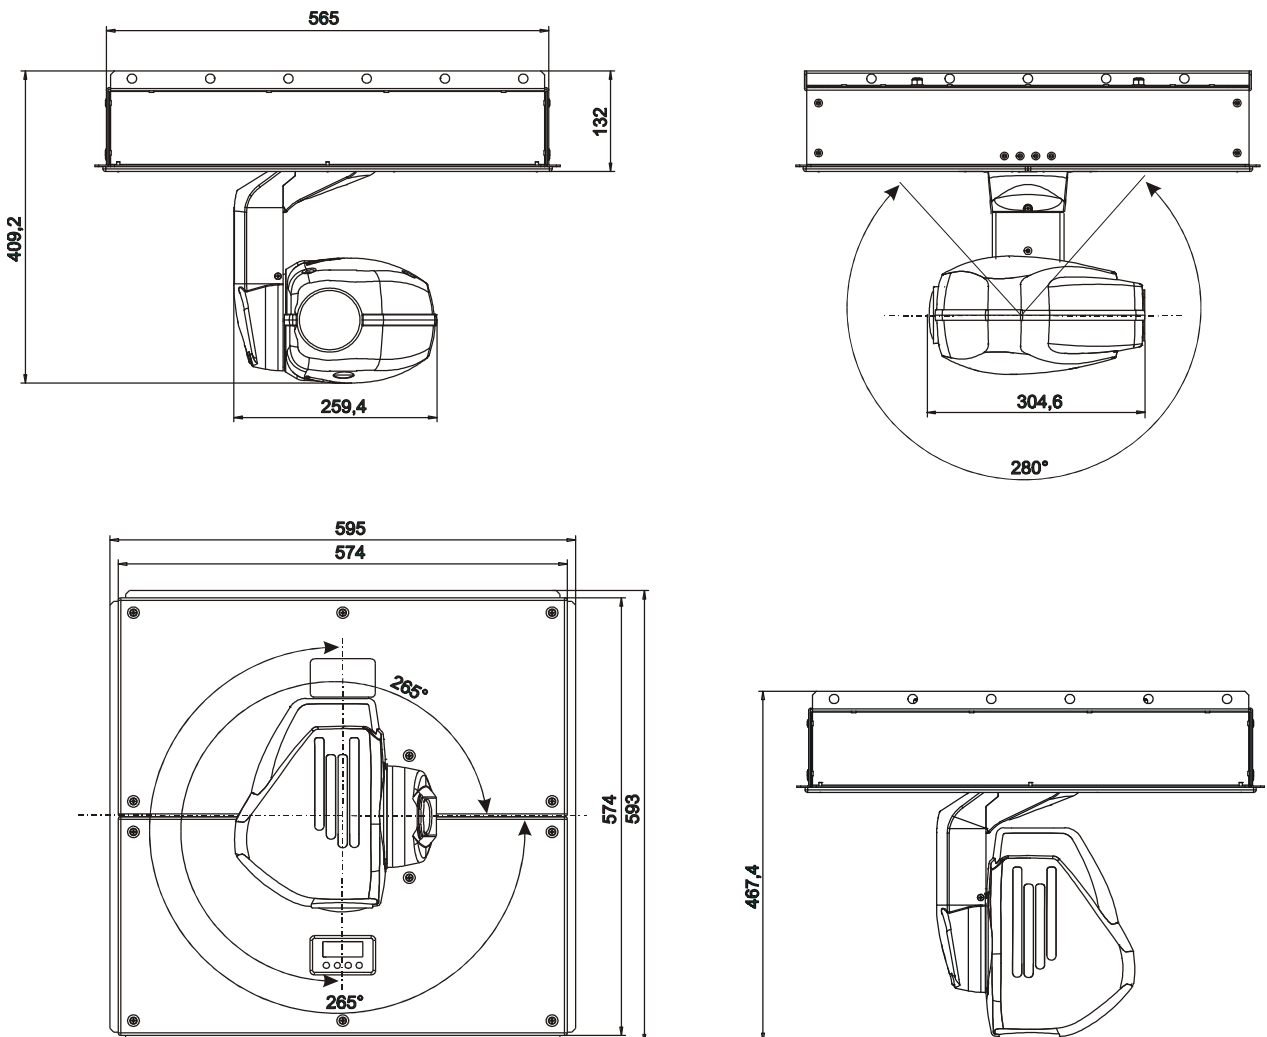

12. Maintenance and cleaning

The operator has to make sure that safety-relating and machine-technical installations are inspected by an expert after every four years in the course of an acceptance test.

The operator has to make sure that safety-relating and machine-technical installations are inspected by a skilled person once a year.

The following points have to be considered during the inspection:

- 1) All screws used for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2) There must not be any deformations on housings, fixations and installation spots (ceiling, suspension, trussing).
- 3) Mechanically moved parts like axles, eyes and others must not show any traces of wearing (e.g. material abrading or damages) and must not rotate with unbalances.
- 4) The electric power supply cables must not show any damages, material fatigue (e.g. porous cables) or sediments. Further instructions depending on the installation spot and usage have to be adhered by a skilled installer and any safety problems have to be removed.

DANGER TO LIFE !
Isolate the fixture from AC power before starting maintenance operation!

It is absolutely essential that the fixture is kept clean and that dust, dirt and smoke-fluid residues must not build up on or within the fixture. Otherwise, the fixture's light-output will be significantly reduced. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to function reliably throughout its life. Please use a moist, lint-free cloth. Never use alcohol or solvents!

The front objective lens will require weekly cleaning as smoke-fluid tends to building up residues, reducing the light-output very quickly. The cooling-fans should be cleaned monthly.

The interior of the fixture should be cleaned at least annually using a vacuum-cleaner or an air-jet.

The dichroic colour-filters and the internal lenses should be cleaned monthly.

There are no serviceable parts inside the device except for the lamp and the fuse. Maintenance and service operations are only to be carried out by authorized dealers.

Please refer to the instructions under "Fitting/Exchanging the lamp".

Replacing the fuse

If the lamp burns out, the fine wire fuse of the device might fuse, too. Only replace the fuse by a fuse of same type and rating.

Before replacing the fuse, isolate the fixture from AC power!

Procedure:

Step 1: Remove the mounting box cover (cover without display) by loosening the 7 fixative screws.


Step 2: Unscrew the fuse holder on the power panel in the moving head base with a fitting screwdriver from the housing (anti-clockwise).

Step 3: Remove the old fuse from the fuse holder.

Step 4: Install the new fuse in the fuse holder.

Step 5: Replace the fuse holder in the housing and fix it.

Step 6: Fix back the mounting box cover.

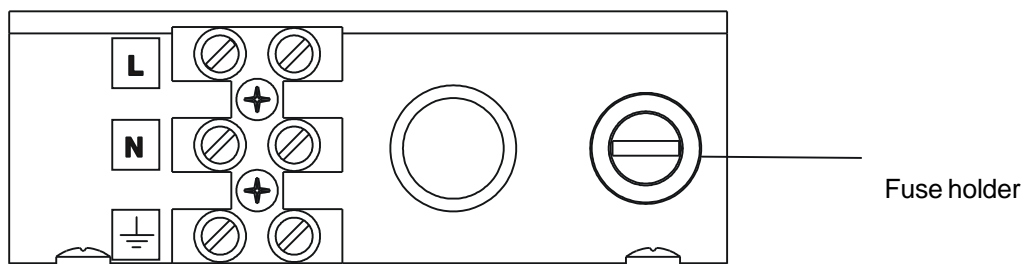

Should you need any spare parts, please use genuine parts.

If the power supply cable of this device will be damaged, it has to be replaced in order to avoid hazards.

Should you have further questions, please contact your dealer.

13.Apendix 1 - Menu map

Menu Level 1	Menu Level 2	Menu Level 3	Menu Level 4	Menu Level 5	Menu Level 6	DESCRIPTION	
A001	dM.Ad.	A001-A505				DMX addresss	
	MA.SL.	d.Abl.				Disable master/slave	
		MASt. SLA.1- SLA9				Set fixture as a master Slave address	
SL.Ct.	SL.C.1- SL.C.9					Select slave for remote control	
InFo	Po.ti.	totl				Total hours of operation since fabricated	
		rSEt				Hours of operation since counter reset	
	La.ti.	totl				Total hours of lamp operation since fabricated	
		rSEt				Lamp hours since counter reset	
	LA.St.	totl				Total number of lamp strikes since fabricated	
		rSEt				Number of lamp strikes since counter reset	
	dM.In.	Pan	0-255				View DMX pan position value
		tilt	0-255				View DMX tilt position value
		F.Pan	0-255				View DMX fine pan position value
		F.tilt	0-255				View DMX fine tilt position value
		SPEd	0-255				View DMX pan/tilt speed value.
		Colo.	0-255				View DMX colour -wheel position value
		dimr	0-255				View DMX dimmer position value
b.out		0-255				View DMX shutter position value	
VERs					Software version		
PErS	r.PAN	On				Set pan invert ON	
		OFF				Set pan invert OFF	
	r.tilt	On				Set tilt invert ON	
		OFF				Set tilt invert OFF	
	dM.Pr.	Mod.1					Mode1 (16 bit movement resolution)
		Mod.2					Mode2 (16 bit movement resolution)
		Mod.3					Mode3 (8 bit movement resolution)
		Mod.4					Mode4 (8 bit movement resolution)
	LA.Pr.	LA.Au.	On				Lamp automatic. ON after switching fixture on
			OFF				No automatic lamp strike
		d.L.OF.	On				Enable lamp OFF via DMX command
			OFF				Disable lamp OFF via DMX command
	dM.On	On				Lamp automatically ON if DMX is present	
		OFF				Lamp will remain OFF if DMX is present	
	dM.OF.	On				Lamp automatically OFF if DMX is missing	
		OFF				Lamp will remain ON if DMX is missing	
	EN.Sn.	On					Enable lamp light sensor
		OFF					Disable lamp light sensor
	diSp.	turn	<i>normal</i>				Normal LED display
			<i>inverted</i>				LED display turned by 180°
d.On		On				Display permanent on	
		OFF				Display turns off 2 min. after last key press	
d.Int.	20,40,60, 80,100				Set display intensity [%]		
bL.Co	On					Enable blackout during pan/tilt mov. correction	
	OFF					Disable blackout during pan/tilt mov. correction	
FEEd.	On					Enable pan/tilt feedback	
	OFF					Disable pan/tilt feedback	
Mi.SE.	1..10..20					Set microphone sensitivity	
dF.SE.						Return all personality options to factory defaults	

Menu Level 1	Menu Level 2	Menu Level 3	Menu Level 4	Menu Level 5	Menu Level 6	DESCRIPTION	
LAMP	On					Lamp power ON	
	OFF					Lamp power OFF	
tEst	Mod.1	Pan	0-255			Select pan value for demo running	
		tilt	0-255			Select tilt value for demo running	
		Go	run			Run demo without any head movement	
	Mod.2	run				Run demo with head movement	
St.Al.	Audi	On				Enable the sound control of the run. programs	
		OFF				Disable the sound control of the run.programs	
	Auto	OFF				No program runs after switching fixture on	
		tEst				Test program runs after switching fixture on	
		PrG.1				Program No.1 runs after switching fixture on	
		PrG.2				Program No.2 runs after switching fixture on	
	PLAy	tEst	run			Test runs in loop	
		PrG.1	run			Program No.1 runs in loop	
		PrG.2	run			Program No.2 runs in loop	
		PrG.3	run			Program No.3 runs in loop	
	Edit	PrG.1- PrG.3	MASt.- SLA.9 (only if Master is selected)	P.End	1-99		Set a total number of the program steps
				Pan	0-255		Set DMX value for pan
				tilt	0-255		Set DMX value for tilt
				F.Pan	0-255		Set DMX value for fine pan
				F.tilt	0-255		Set DMX value for fine tilt
				SPEd	0-255		Set DMX value for speed of pan/tilt mov.
				Colo.	0-255		Set DMX value for colour
b.out				0-255		Set DMX value for shutter	
dimr				0-255		Set DMX value for dimmer	
S.tim				0,1-25,5		Set step time [sec.]	
	COPY				Copying current prog.step to next step		
rESE						Run a reset	
SPEC.	Manu.	PAn	Pan.1- Pan.3			Select presetting pan position	
		tilt	tilt.1-tilt.3			Select presetting tilt position	
		SPEd	SPd.1- SPd.5			Select presetting speed of pan/tilt movement	
		Colo.	Co.01- Co.17			Select presetting colour -wheel position	
		dimr	dim.0- dim.C			Select presetting dimmer position	
		b.out	OPEn- CLOS			Select presetting shutter position	
	LAAAd	Pan	0-255			Select pan position for lamp adjustment	
		tilt	0-255			Select tilt position for lamp adjustment	
	Code					Fixture code	
	AdJ.	Pan	0-255			Select DMX value for pan position	
		tilt	0-255			Select DMX value for tilt position	
		F.Pan	0-255			Select DMX value for fine pan position	
		F.tilt	0-255			Select DMX value for fine tilt position	
		SPEd	0-255			Select DMX value for speed of pan/tilt	
		Func.	0-255			Select DMX value for lamp on/off,reset	
Colo.		0-255			Select DMX value for colour-wheel pos.		
dimr		0-255			Select DMX value for dimmer		
b.out		0-255			Select DMX value for shutter position		
F.CAL	Colo.	0-255			Calibrate colour-wheel to required position		
	A.rES				Save calibration values to memory,reset		

Bold print=Default settings

14. Appendix 2 - Changing the power supply settings

Both the transformer and the ballast must be connected correctly for the local AC voltage and frequency. The wrong settings can cause poor performance or damage of the moving head. The factory settings are printed on the label on the bottom of the moving head base.


If you want to change the power supply settings, follow the instructions:

1. Disconnect the fixture from AC power.
2. Remove the ceiling box covers by loosening the 14 screws.
3. Move the wire ① on the transformer connection block to the position according to the desired voltage.
4. Move the wire ② on the ballast connection block to the position according to the desired frequency (voltage).
5. Close the ceiling box before applying AC power.

Examples:


EU-version

Power supply settings: 230V/50Hz

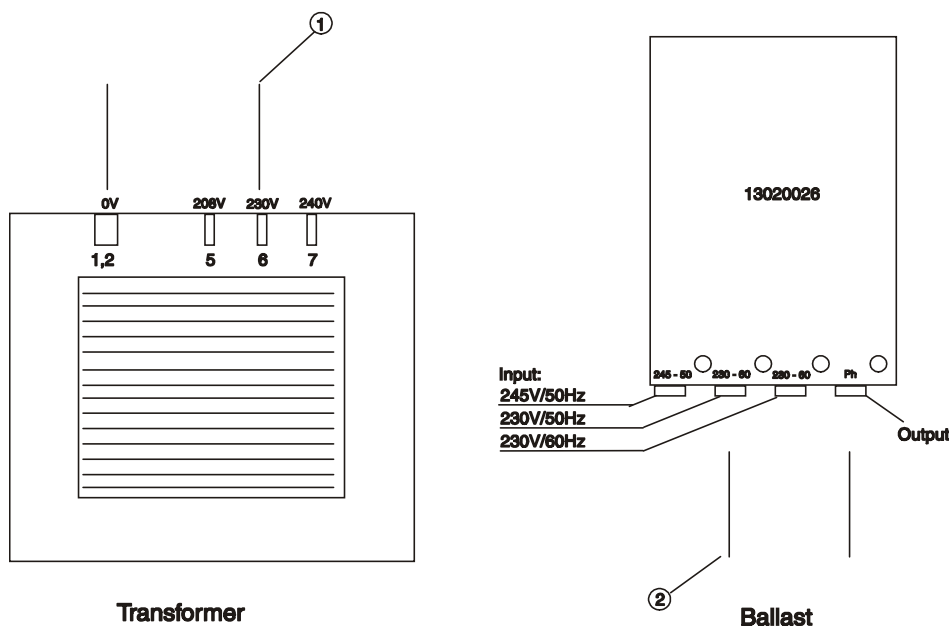

US-version


Power supply settings: 120V/60Hz

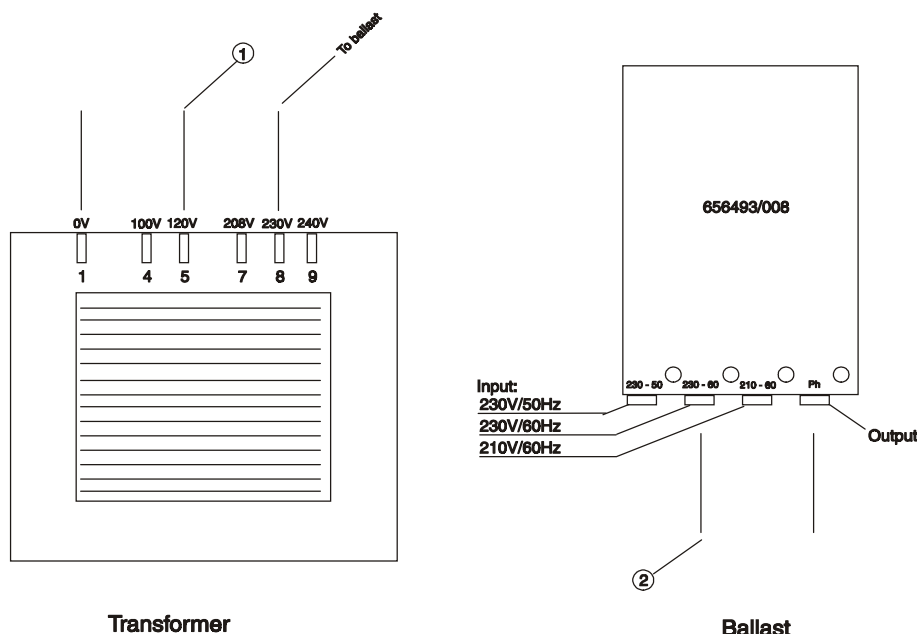


14. Appendix 3 - Box versions and dimensions

Version for 600x600mm mounting grid


Ceiling box
99010551

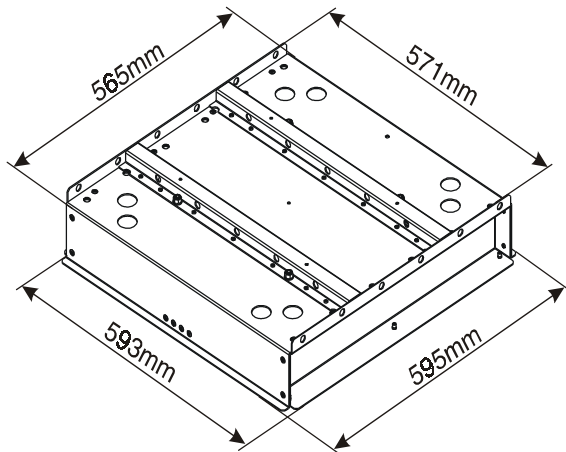


Box covers
19010084 19010083

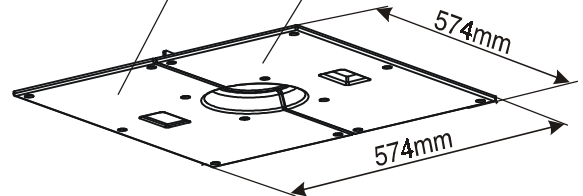


Installation

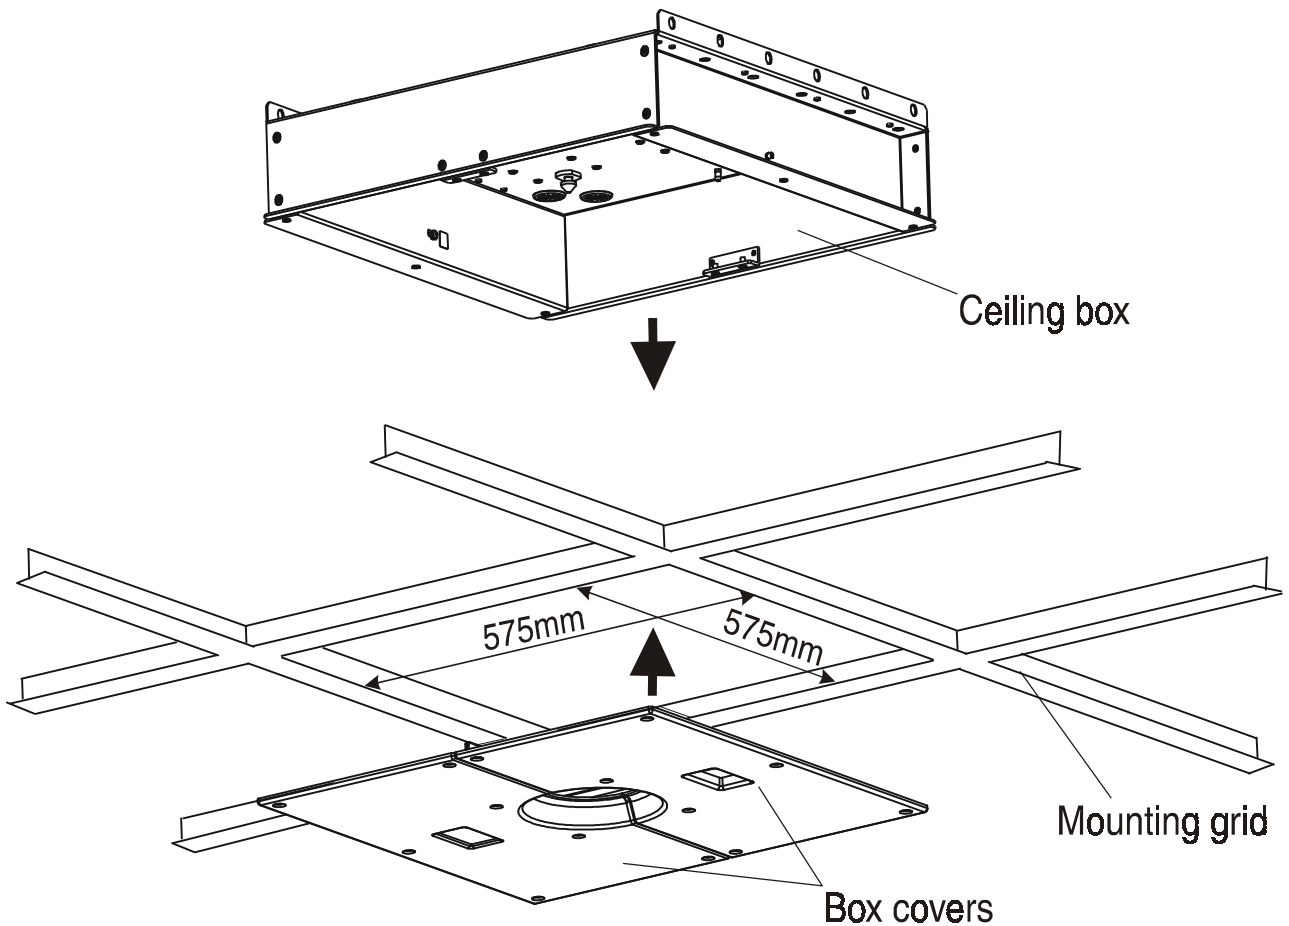


Version for 625x625mm mounting grid

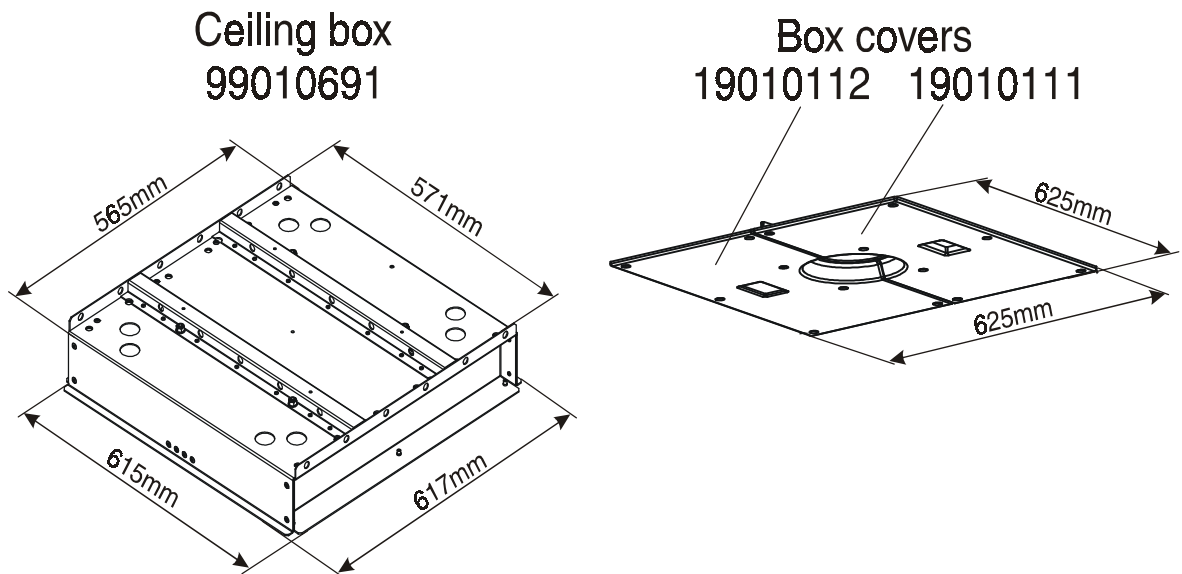


Installation

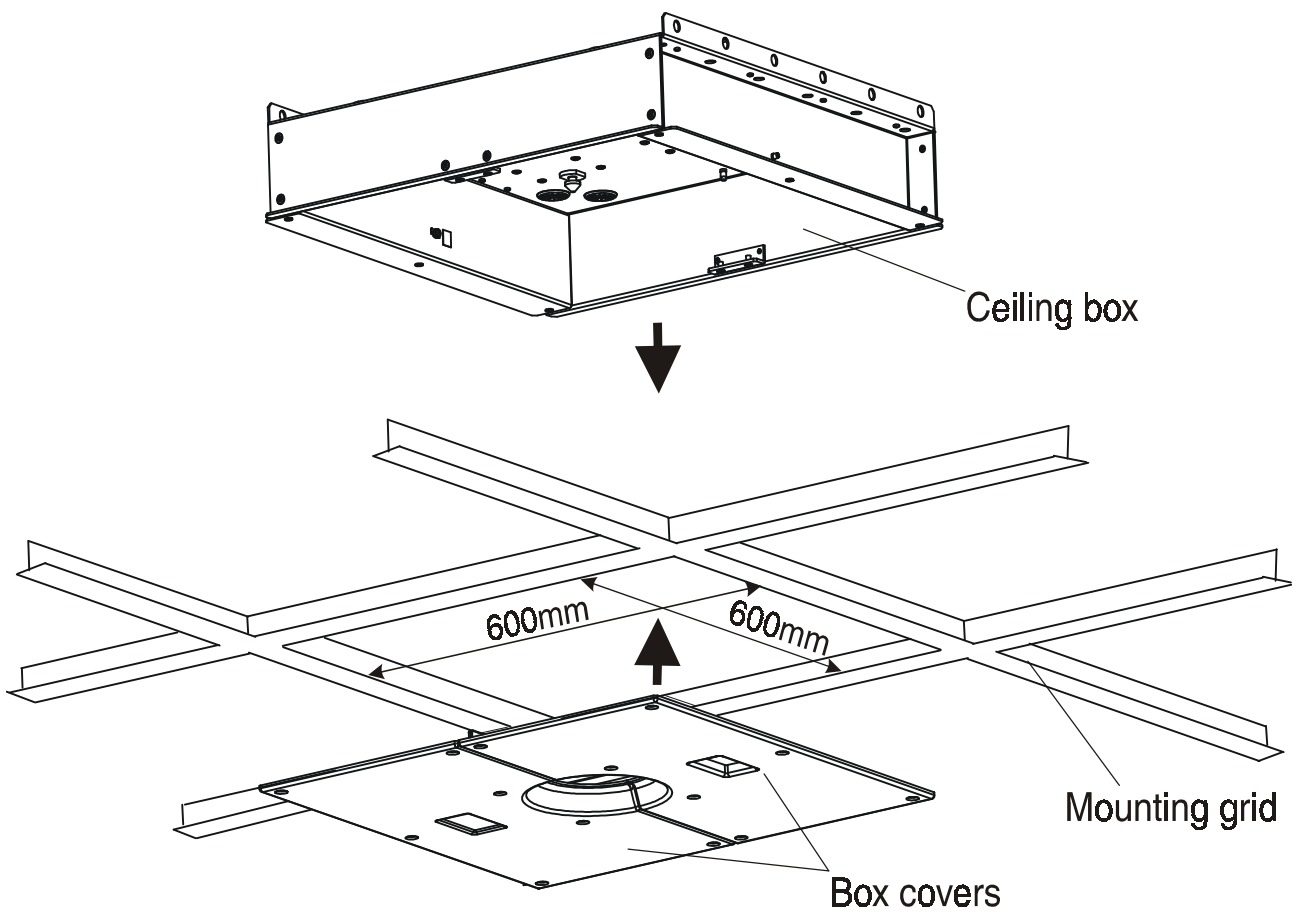





Version for lower ceiling from plaster-boards

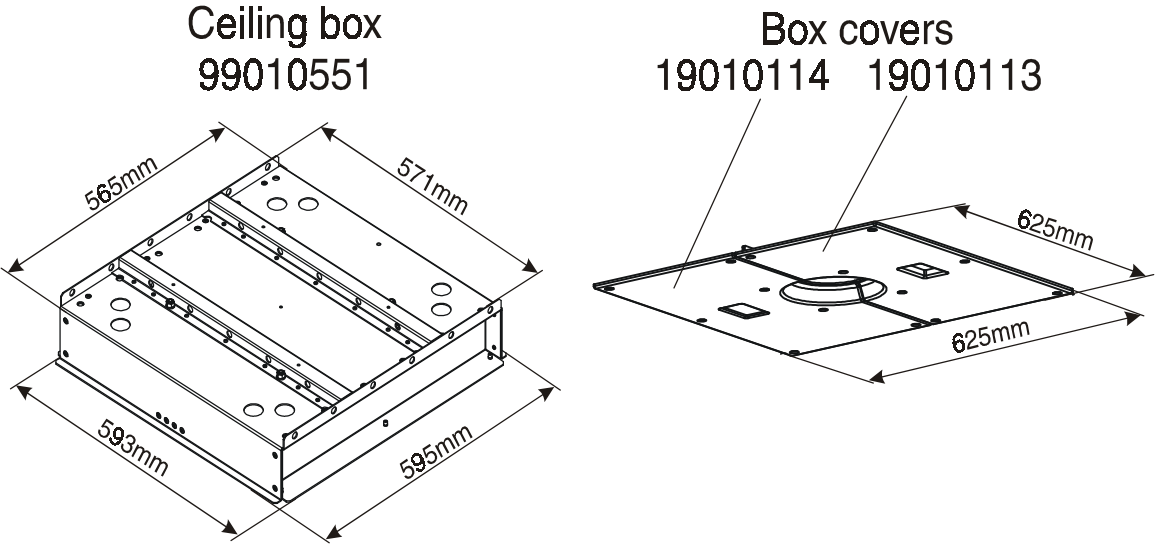

Installation




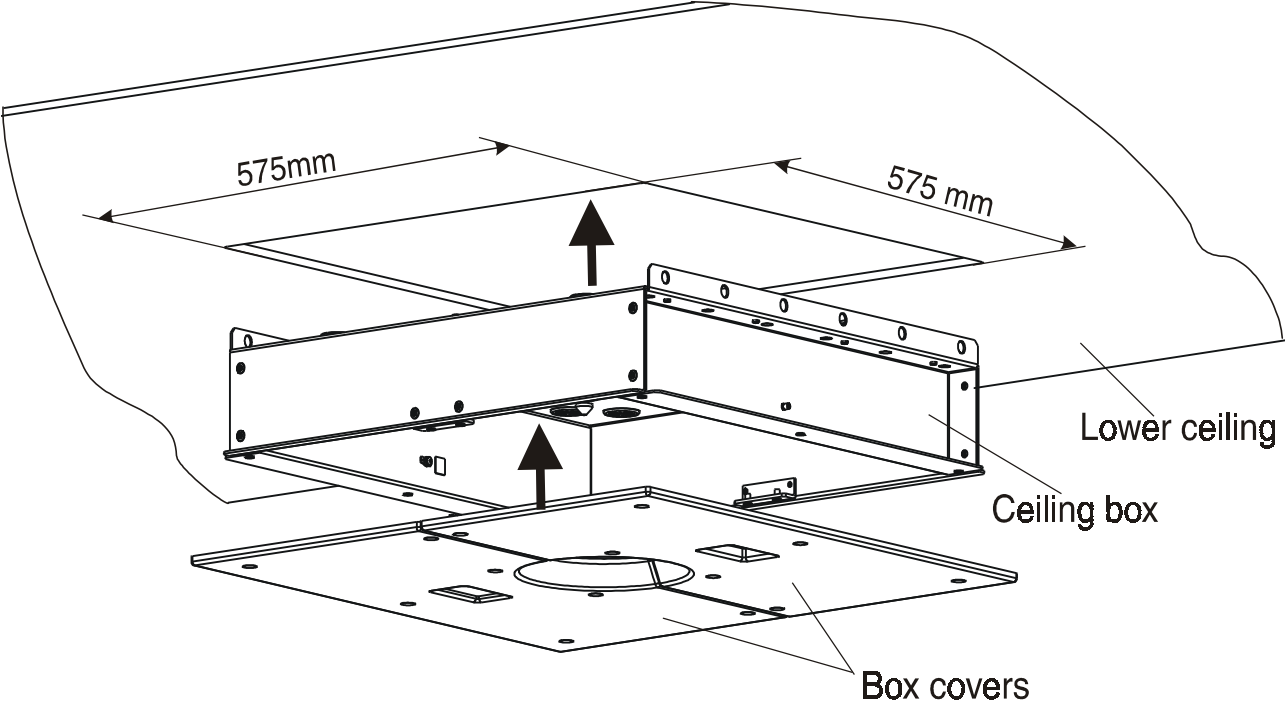


Ceiling box No.99010551

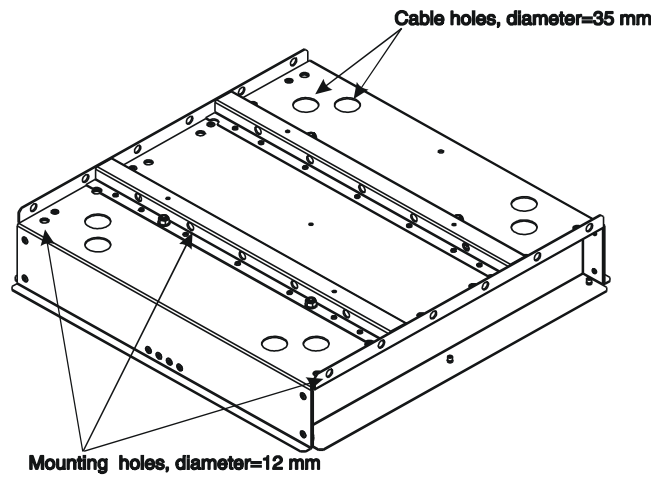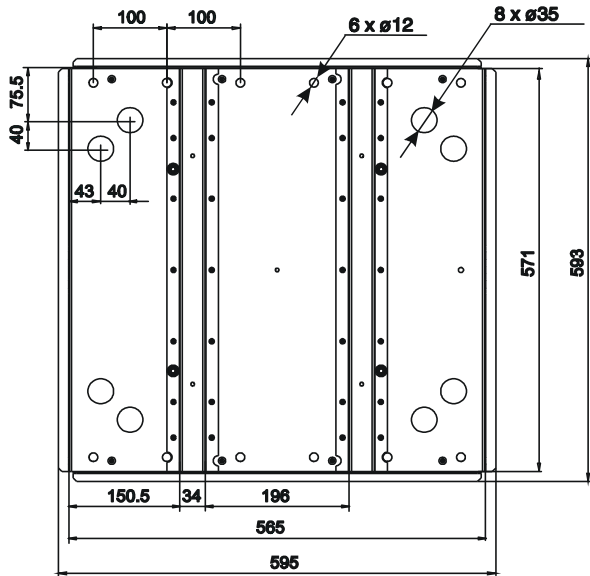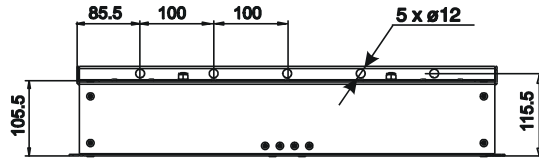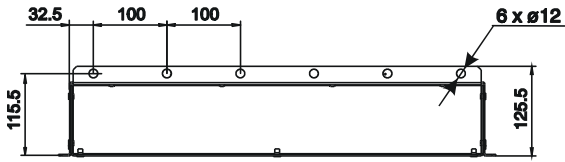

All dimensions are in mm

Ceiling box No.99010691

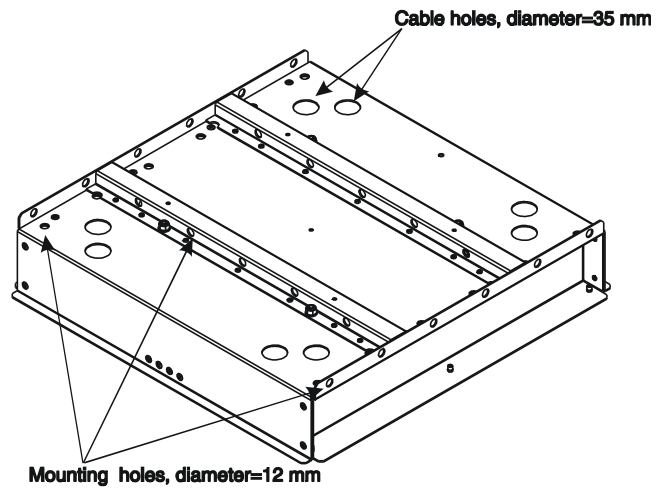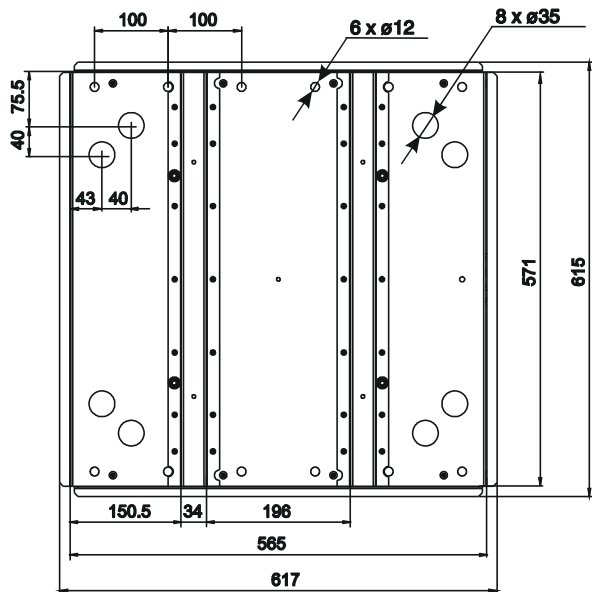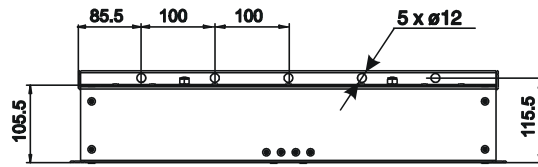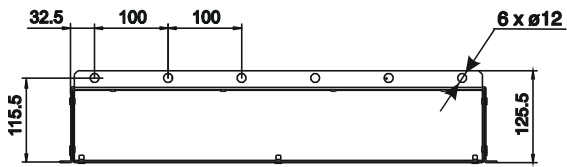

All dimensions are in mm