

User's Manual

PBM4D SISTEMA

PBM MONITOR



www.altoproaudio.com

Version 1.0 April 2005

— English —

SAFETY RELATED SYMBOLS



This symbol, wherever used, alerts you to the presence of un-insulated and dangerous voltages within the product enclosure. These are voltages that may be sufficient to constitute the risk of electric shock or death.



This symbol, wherever used, alerts you to important operating and maintenance instructions. Please read.

⊕ Protective Ground Terminal

~ AC mains (Alternating Current)

⚡ Hazardous Live Terminal

ON: Denotes the product is turned on.

OFF: Denotes the product is turned off.

WARNING

Describes precautions that should be observed to prevent the possibility of death or injury to the user.

CAUTION

Describes precautions that should be observed to prevent damage to the product.

WARNING

• Power Supply

Ensure that the mains source voltage (AC outlet) matches the voltage rating of the product. Failure to do so could result in damage to the product and possibly the user.

Unplug the product before electrical storms occur and when unused for long periods of time to reduce the risk of electric shock or fire.

• External Connection

Always use proper ready-made insulated mains cabling (power cord). Failure to do so could result in shock/death or fire. If in doubt, seek advice from a registered electrician.

• Do Not Remove Any Covers

Within the product are areas where high voltages may present. To reduce the risk of electric shock do not remove any covers unless the AC mains power cord is removed.

Covers should be removed by qualified service personnel only.

No user serviceable parts inside.

• Fuse

To prevent fire and damage to the product, use only

the recommended fuse type as indicated in this manual.

Do not short-circuit the fuse holder. Before replacing the fuse, make sure that the product is OFF and disconnected from the AC outlet.

• Protective Ground

Before turning the product ON, make sure that it is connected to Ground. This is to prevent the risk of electric shock.

Never cut internal or external Ground wires. Likewise, never remove Ground wiring from the Protective Ground Terminal.

• Operating Conditions

Always install in accordance with the manufacturer's instructions.

To avoid the risk of electric shock and damage, do not subject this product to any liquid/rain or moisture. Do not use this product when in close proximity to water.

Do not install this product near any direct heat source.

Do not block areas of ventilation. Failure to do so could result in fire.

Keep product away from naked flames.

IMPORTANT SAFETY INSTRUCTIONS

Read these instructions

Follow all instructions

Keep these instructions. Do not discard.

Heed all warnings.

Only use attachments/accessories specified by the manufacturer.

• Power Cord and Plug

Do not tamper with the power cord or plug. These are designed for your safety.

Do not remove Ground connections!

If the plug does not fit your AC outlet seek advice from a qualified electrician.

Protect the power cord and plug from any physical stress to avoid risk of electric shock.

Do not place heavy objects on the power cord. This could cause electric shock or fire.

• Cleaning

When required, either blow off dust from the product or use a dry cloth.

Do not use any solvents such as Benzol or Alcohol.

For safety, keep product clean and free from dust.

• Servicing

Refer all servicing to qualified service personnel only. Do not perform any servicing other than those instructions contained within the User's Manual.

PREFACE

Dear customer

Thank you for choosing the ▲LTO PBM SERIES MONITOR - PBM4D SISTEMA, which is the result of our ▲LTO AUDIO TEAM's endeavours.

For the ▲LTO AUDIO TEAM, music and audio are more than a profession, it is a passion and an obsession!

We have, in fact, been designing professional audio products for a number of years in cooperation with many of the world's major brands.

The ▲LTO line represents unparalleled analogue and digital products made by musician, for musicians. With our design centres in Italy, the Netherlands, and United Kingdom we provide you with world-class designs, while our software development teams continue to develop an impressive range of audio specific algorithms.

By purchasing our ▲LTO products you become the most important member of our ▲LTO AUDIO TEAM. We would like to share with you our passion for what we design and invite you to make suggestions, which will aid us in developing future products for you. We guarantee you our commitment for quality, continual research and development, and of course the best prices.

The ▲LTO PBM4D SISTEMA is extremely flexible, ultra-low noise, which is configured with four inputs channels, each of them is equipped with a variety of key features including a 2-band equalizer, one AUX send and level control etc.. Besides, the miraculous DSP with 16 presets and powerful digital power amplifier will meet your requirements.

We would like to thank all the people who made the ▲LTO PBM4D SISTEMA possible, especially to our designers and ▲LTO staff. It is their passion for music and professional audio that has made it possible for us to offer you, our most important team member, our continued support.

Thank you very much
▲LTO AUDIO TEAM

TABLE OF CONTENTS

1. INTRODUCTION.....	4
2. FEATURES.....	4
3. QUICK START.....	5
4. CONTROL ELEMENTS.....	6
4.1 MONO INPUT CHANNELS	
4.2 +15V PHANTOM POWER SWITCH	
4.3 TAPE IN	
4.4 TAPE OUT	
4.5 LEVEL CONTROL	
4.6 DSP/FX AUX1 POST CONTROL	
4.7 2-BAND EQ (FOR INPUT CHANNELS)	
4.8 3-BAND EQ (FOR MAIN POWER OUT)	
4.9 MONITOR OUT	
4.10 MAIN POWER OUT	
4.11 OPERATING LED	
4.12 MONITOR LEVEL CONTROL	
4.13 MAIN MIX LEVEL LED	
4.14 MAIN MIX LEVEL CONTROL	
4.15 DSP SECTION	
4.16 THE REAR PANEL	
5. INSTALLATION AND CONNECTION.....	9
5.1 AUDIO CONNECTIONS	
6. PRESET LIST.....	11
7. TECHNICAL SPECIFICATION.....	12
8. BLOCK DIAGRAM.....	13
9. WARRANTY.....	14

1. INTRODUCTION

Thank you very much for expressing your confidence in ▲LTO products by purchasing ▲LTO PBM4D SISTEMA. The PBM4D SISTEMA is professional monitor, which provides the state of the art digital amplifier technology specifically. You will get the smooth, accurate, more natural and open sound from this apparatus, it is really ideal for small gigs, recording and fixed PA installations.

The PBM4D SISTEMA is packed with some key features. For example: there are 3 Mic/Line inputs which provided with ultra low noise microphone pre-amplifiers and phantom power at +15V and one Tape in/out channel, each of them features a 2-band EQ, AUX send and level control; main power out with a 3-band EQ and level control; monitor out with level control, 16 positions multi-effect and so on.

Though your PBM4D SISTEMA is very easy to operate, we strongly recommend you to go through each section of this manual carefully, in this way you will get the best out of your PBM4D SISTEMA.


2. FEATURES

The PBM4D SISTEMA is designed for professional application. It provides the following features:

- Digital amplifier technology, offering high power and a very dynamic sound
- 3-band EQ for MAIN POWER OUT
- 3 MIC/line input channels with balanced XLR and TRS inputs
- Ultra-low noise discrete MIC pre-amps with +15V phantom power
- 2-band EQ on each input channel
- Each input channel with level control and DSP/FX AUX1 POST control
- Tape in/out
- 16 positions digital signal processor
- POWER OUTPUT: 80Wrms.(load.8Ohm)

3. QUICK START

- 3.1 Please check the AC voltage available in your country before connecting your PBM4D SISTEMA to the AC socket.
- 3.2 Be sure that the main power is turned off before connecting the monitor to the AC socket. Also, you should make sure that all input and output controls are turned down. This will avoid damages to your speakers and avoid excessive noise.
- 3.3 Please connect one side of the passive speaker cable to the MAIN POWER OUT of your PBM4D SISTEMA, and the other side to the input of your passive speaker cabinet.
- 3.4 Before disconnecting the PBM4D SISTEMA always turn off the power switch.
- 3.5 Do not use solvents to clean your PBM4D SISTEMA. A dry and clean cloth will be OK.

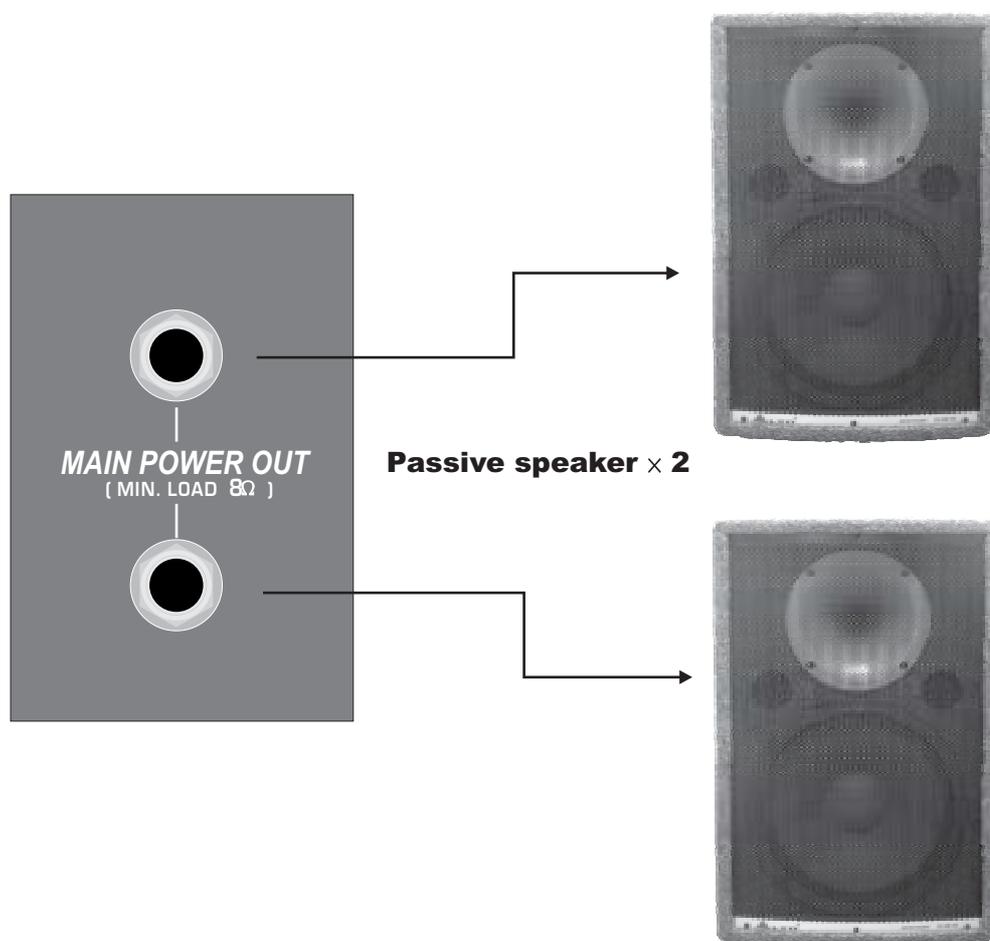

4. CONTROL ELEMENTS



LTO[®]

PBM4D SISTEMA

DSP

DSP MUTE

CLIP MUTE

PRESETS

1. WARM HALL
2. BRIGHT HALL
3. WARM ROOM
4. BRIGHT ROOM
5. VOCAL 1
6. VOCAL 2
7. VOCAL 3
8. PLATE
9. STEREO DELAY 1
10. STEREO DELAY 2
11. REV + DELAY 1
12. REV + DELAY 2
13. REV + DELAY 3
14. REV + DELAY 4
15. REV + CHORUS 1
16. REV + CHORUS 2

BASS

0

-15dB +15dB

MIDDLE

0

-15dB +15dB

HIGH

0

-15dB +15dB

MAIN

0 dB

-∞ +10dB

MONITOR

10 0 -10 -30

0

-∞ +10dB

OPERATING

PHANTOM ON OFF

MAIN POWER OUT
(MIN. LOAD 8Ω)

MONITOR OUT

CH 1

MIC IN (bal.)

LOW NOISE PREAMP

LINE IN (bal.)

CH 2

MIC IN (bal.)

LOW NOISE PREAMP

LINE IN (bal.)

CH 3

MIC IN (bal.)

LOW NOISE PREAMP

LINE IN (bal.)

CH 4

TAPE IN

TAPE OUT

LEVEL

HIGH 12KHz

LOW 80Hz

-15dB 0 +15dB -∞ +10dB

LEVEL

HIGH 12KHz

LOW 80Hz

-15dB 0 +15dB -∞ +10dB

LEVEL

HIGH 12KHz

LOW 80Hz

-15dB 0 +15dB -∞ +10dB

LEVEL

HIGH 12KHz

LOW 80Hz

-15dB 0 +15dB -∞ +10dB

DSP/FX

AUX1

POST

DSP/FX

AUX1

POST

DSP/FX

AUX1

POST

DSP/FX

AUX1

POST

4.1 MONO INPUT CHANNELS 1

There are CH1 through CH3, which comes with balanced MIC IN and LINE IN connectors. Use the XLR (MIC IN) socket to connect low impedance microphone or low level signal, which also features +15V Phantom Power allowing you to connect condenser microphone. Use the 1/4" TRS (LINE IN) jack to connect either a microphone or a line level instrument such as synthesizer, drum machine, and effect processor or any other line level signal.

Note: You shall never connect an unbalanced microphone to the XLR socket if you do not want do damage both the microphone and the monitor.

4.2 +15V PHANTOM POWER SWITCH 2

This switch will apply +15 Volt Phantom Power only to the 3 XLR sockets. When these XLR sockets are connected with devices that do not require Phantom Power, please make sure the Phantom Power is turned off, otherwise, this may damage the device and monitor.

4.3 TAPE IN 3

Your PBM4D SISTEMA features dual RCA jacks (left and right). If you wish to listen to your monitor from a tape recorder, DAT or cassette, please use these tape input jacks.

4.4 TAPE OUT 4

Via these jacks (left and right), you can route the main out signal into a tape recorder or DAT for recording.

4.5 LEVEL CONTROL 5

This control is used to adjust the overall level of respective channel. The adjustable ranges goes from $-\infty$ to +10dB.

4.6 DSP/FX AUX1 POST CONTROL 6

This control is used to adjust the level of the effect signal for respective channel.

4.7 2-BAND EQ (FOR INPUT CHANNELS)




Your PBM4D SISTEMA features a 2-band equalizer on each input channel allowing you to adjust the HIGH and LOW frequencies.

HIGH 7

This is the treble control. You can use it to get rid of high frequency noises or to boost the sound of cymbals or the high harmonics of the human voice. The gain range goes from 15dB to +15dB with a center frequency of 12kHz.

LOW 8

This is the bass control. It is used to boost male voice or kick-drum and bass guitar. Your system will sound much bigger than what it is. The gain range goes from 15dB to +15dB and the center frequency is 80Hz.

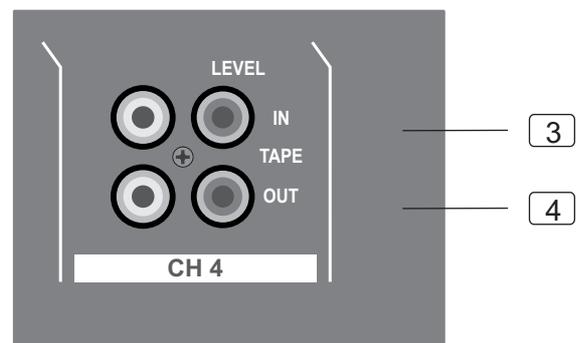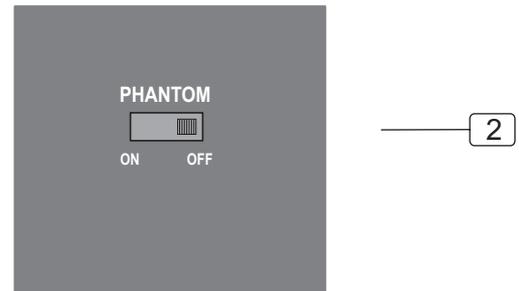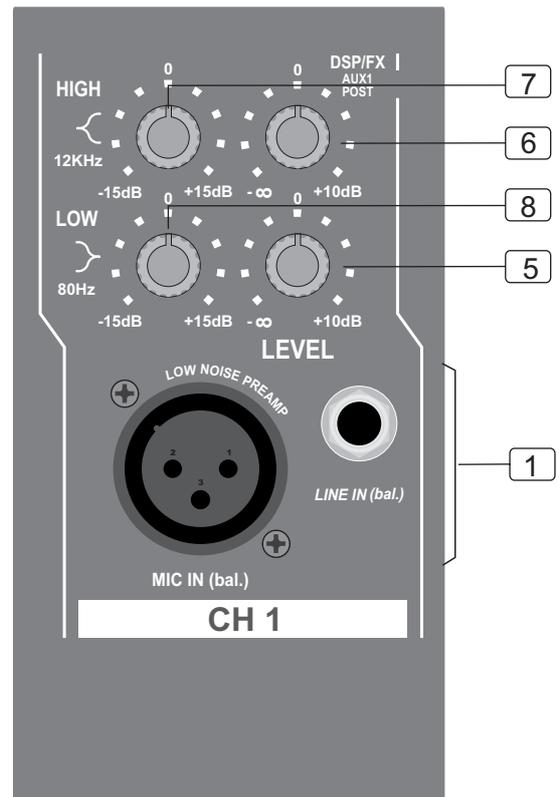

4.8 3-BAND EQ (FOR MAIN POWER OUT)

A 3-band EQ is provided for output signals of MAIN POWER OUT, it allows you to adjust the HIGH, MIDDLE and BASS frequencies respectively.

HIGH 9


This is the treble control. You can use it to get rid of high frequency noises or to boost the sound of cymbals or the high harmonics of the human voice.

MIDDLE 10

This is the midrange control. It can affect most fundamental frequencies of all musical instruments and human voice. An attentive use of this control will give you a very wide panorama of sound effects.

BASS 11

This is the bass control. It is used to boost male voice or kick-drum and bass guitar. Your system will sound much bigger than what it is.

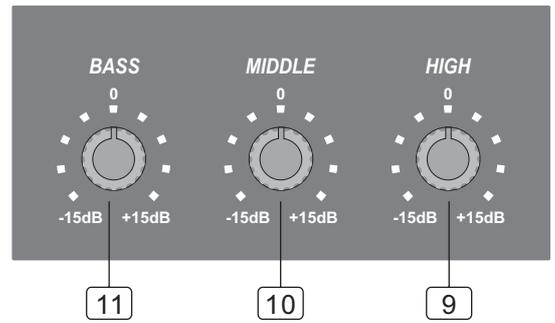

4.9 MONITOR OUT 12

This jack is used to connect the input of external monitor amplifier or active monitor speaker.

4.10 MAIN POWER OUT 13

The both jacks are used to output the main mix signal to external passive speaker, and the minimum load is 8ohm.

4.11 OPERATING LED 14

This LED indicates when the power is switched on in your PBM4D SISTEMA.

4.12 MONITOR LEVEL CONTROL 15

This control is used to adjust the level of monitor output.

4.13 MAIN MIX LEVEL LED 16

The stereo 4-segment LED meter is used to monitor the main power output level.

4.14 MAIN MIX LEVEL CONTROL 17




This control is used to adjust the overall volume of main mix output.

4.15 DSP SECTION

Your PBM4D SISTEMA features a 16-preset digital signal processor, further details please refer to following content.

PRESETS 18

Adjust this knob to select the right effect you wish to perform. There are total 16 options for you: WARM HALL, BRIGHT HALL, WARM ROOM, BRIGHT ROOM, VOCAL 1, VOCAL 2, VOCAL 3, PLATE, STEREO DELAY1, STEREO DELAY2, REV + DELAY1, REV + DELAY2, REV + DELAY3, REV + DELAY4, REV + CHORUS1 and REV + CHORUS2.

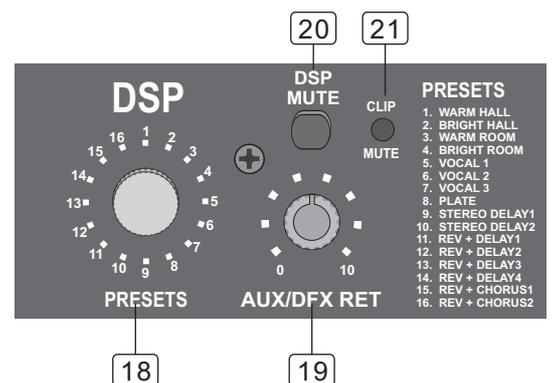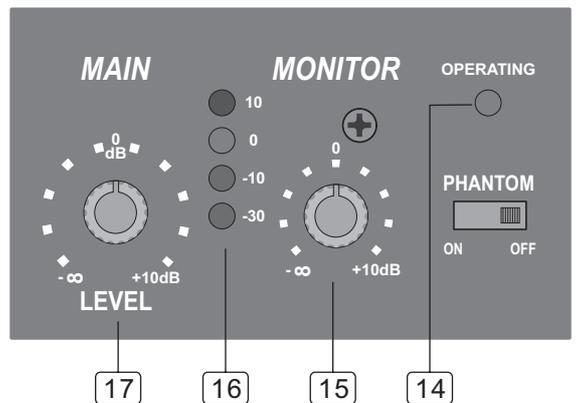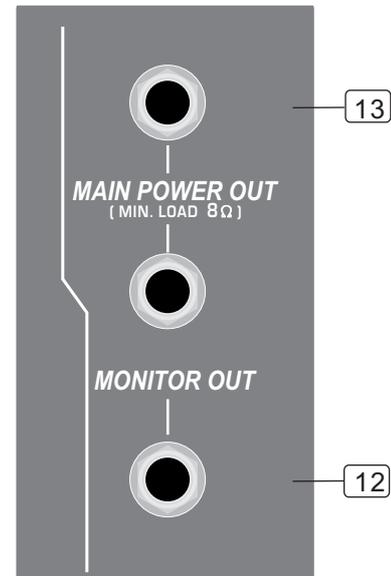

-AUX/FX RET 19

This control is used to adjust the volume of FX RETURN.

-DSP MUTE 20

This switch is used to activate/deactivate the effect facility. To activate the muting function by pressing this button, to deactivate the muting function by depressing this button.

-CLIP/MUTE LED 21

This LED lights up when the input signal is too strong. In case of the digital effect module being muted, this LED also lights up.

4.16 THE REAR PANEL


POWER ON/OFF 22

This switch is used to turn the main power ON/OFF.

AC INLET 23

Use it to connect your PBM4D to the main AC with the supplied AC cord.

Please check the voltage available in your country and how the voltage for your PBM4D SISTEMA is configured before attempting to connect your PBM4D SISTEMA to the main AC.

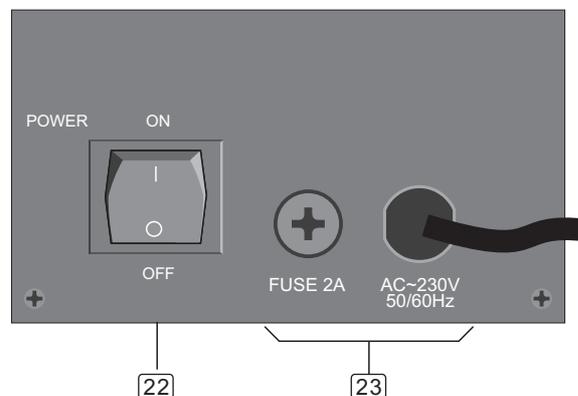




5. INSTALLATION AND CONNECTION

Ok, you have got to this point and you are now in the position to successfully operate your PBM4D SISTEMA. However, we advise you to read carefully the following section to be the real master of your own monitor. Not paying attention enough to the input signal level, to the routing of the signal and the assignment of the signal will result in unwanted distortion, a corrupted signal or no sound at all. So you should follow this procedure for every single channel.

- Turn down all input and output level controls.
- Connect phantom powered microphones before switching on the +15Volt phantom power switch.
- Set the output level of your PBM4D SISTEMA at no more than 75%.
- Now, set the MONITOR level at no more than 50%. In this way you will be able to hear later what you are doing connecting a pair of powered studio monitor speakers.
- Position EQ controls on middle position.
- Now repeat the same sequence for all input channels. The main LED meter could move up into the red section. In this case you can adjust the overall output level through the MAIN MIX LEVEL control.

5.1 AUDIO CONNECTIONS

You can connect unbalanced equipment to balanced inputs and outputs. Simply follow these schematics.

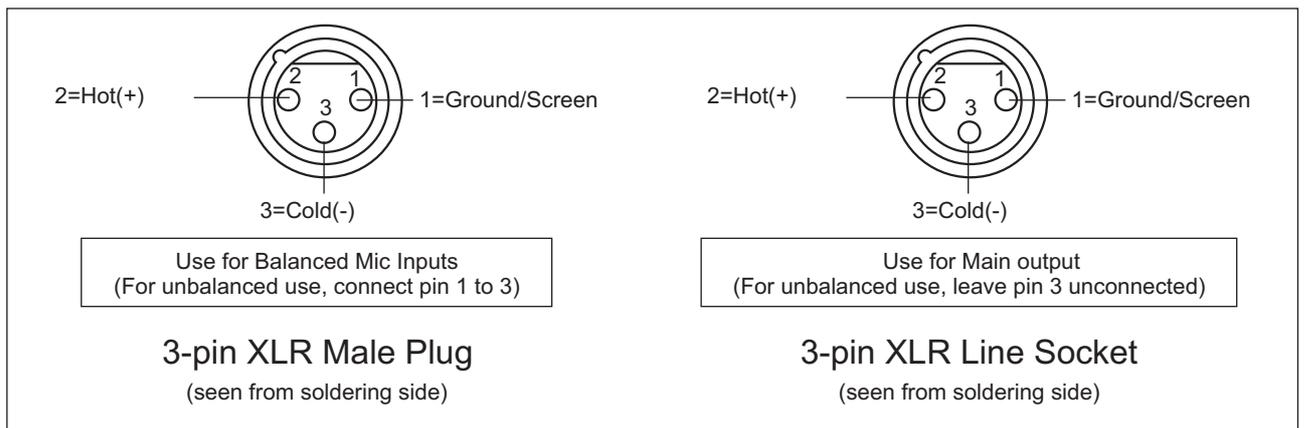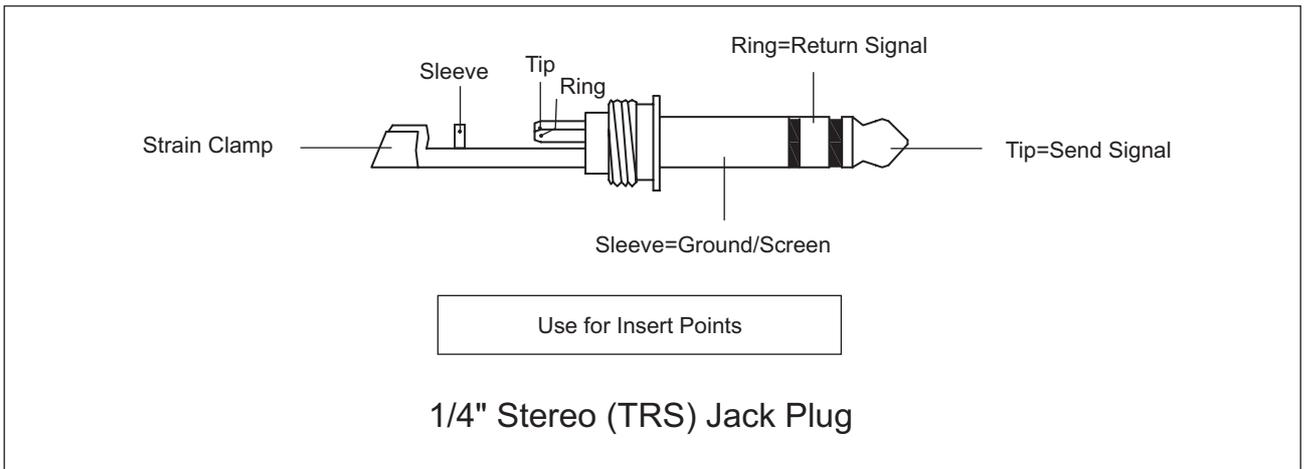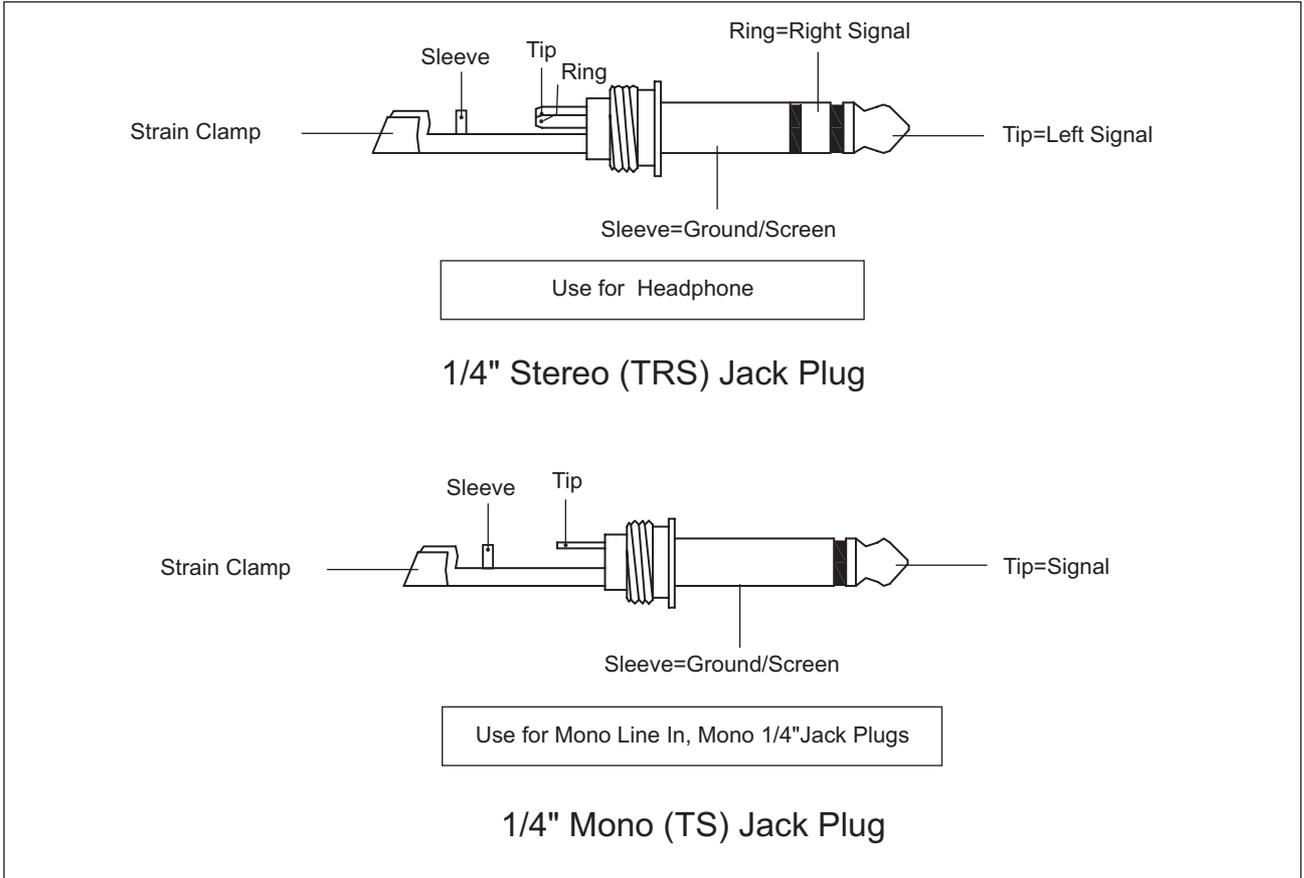


6. PRESET LIST

No.	Preset	Description	parameter
1	WARM HALL	Simulate a small acoustic space of the sound.	Rev. Decay time: 360ms Pre-delay: 45ms
2	BRIGHT HALL	Simulate a large acoustic space of the sound.	Rev. decay time: 290ms Pre-delay: 23ms
3	WARM ROOM	Simulate a small acoustic space of the sound.	Rev. decay time: 210ms Pre-delay: 45ms
4	BRIGHT ROOM	Simulate a studio room with many early reflections.	Rev. Decay time: 210ms Pre-delay: 23ms
5	VOCAL 1	Simulate a room with without delay time.	Rev. decay time: 450ms
6	VOCAL 2	Simulate a room with small delay time.	Rev. decay time: 240ms Pre-delay: 25ms
7	VOCAL 3	Simulate a small space with slight decay time.	Rev. decay time: 100ms Pre-delay: 114ms
8	PLATE	Simulate the transducers sound like classic bright vocal plate.	Pre-delay: 10ms Rev. decay time: 290ms
9	STEREO DELAY 1	Recreate the input sound on the stereo output with different time.	Period: 352ms
10	STEREO DELAY 2	Recreate the input sound on the stereo output with different time.	Period: 238ms
11	REV + DELAY 1	Delay with room effect.	Delay period: 326ms Rev. decay time: 290ms
12	REV + DELAY 2	Delay with room effect.	Delay period: 211ms Rev. decay time: 240ms
13	REV + DELAY 3	Delay with room effect.	Delay period: 375ms Rev. decay time: 210ms
14	REV + DELAY 4	Delay with room effect.	Delay period: 277ms Rev. decay time: 150ms
15	REV + CHORUS1	Simulate the sound effect achieved by rotating horn speakers and a bass cylinder.	Chorus rate: 3.67Hz Rev. decay time: 290ms
16	REV + CHORUS2	Simulate the sound effect achieved by rotating horn speakers and a bass cylinder.	Chorus rate: 3.02Hz Rev. decay time: 150ms

7. TECHNICAL SPECIFICATION

Input channels	Microphone Input	Electronically balanced, discrete input configuration	
	Frequency response	10Hz to 55kHz, +/- 3dB	
	Distortion(THD&N)	0.05% at +4dBu, 1kHz	
	Gain	30dB	
	SNR(Signal to Noise Ratio)	>94dB	
	Line input	Electronically balanced	
	Frequency response	10Hz to 55kHz, +/- 3dB	
	Distortion(THD&N)	0.05% at +4dBu, 1kHz	
	Gain	10dB	
Impedances	Microphone Input	1.4kOhm	
	Channel Insert return	2.5kOhm	
	All other inputs	10kOhm or greater	
	Tape out	1kOhm	
	All other outputs	120Ohm	
Equalization	Hi shelving	+/-15dB@12kHz	
	Low shelving	+/-15dB@80Hz	
DSP Section	A/D and D/A converters	24bit	
	DSP resolution	24bit	
	Type of effects	HALL, ROOM, VOCAL, PLATE, STEREO DELAY REV+DELAY, and REV+CHORUS combinations	
	Presets	16	
	Controls		16-position PRESET selector
			CLIP LED MUTE SWITCH with LED indicator
Main Mix Section	Noise(Bus noise)	Fader 0 dB, channels muted: -85dBr (ref.: +4dBu)	
		Fader 0 dB, all input channels assigned and set to UNITY gain: -81dBr(ref.: +4dBu)	
	MONITOR max out	+22dBu unbalanced, 1/4"jacks	
	FX Sends max out	+22dBu	
Amplifier Section	Output Power	80W RMS (Nominal power)	
	Frequency Response	25HZ-20KHZ	
	Output Impedance	8 ohm	
Power supply	Main voltage	USA/Canada 100 - 120V~, 60Hz	
		Europe 210 - 240V~, 50Hz	
		U.K./Australia 240V~, 50Hz	
	Power Consumption	133 watts	
	Fuse		100-120V~: T4A
		210-240V~: T2A	
Physical	Dimensions	216.5x143.5x152.5mm(LxWxH)(8.5"x5.6"x6")	
	Net Weight	12.6kg	
	Shipping Weight	14.45 kg	
	Volume	2.81CFT	

8. BLOCK DIAGRAM

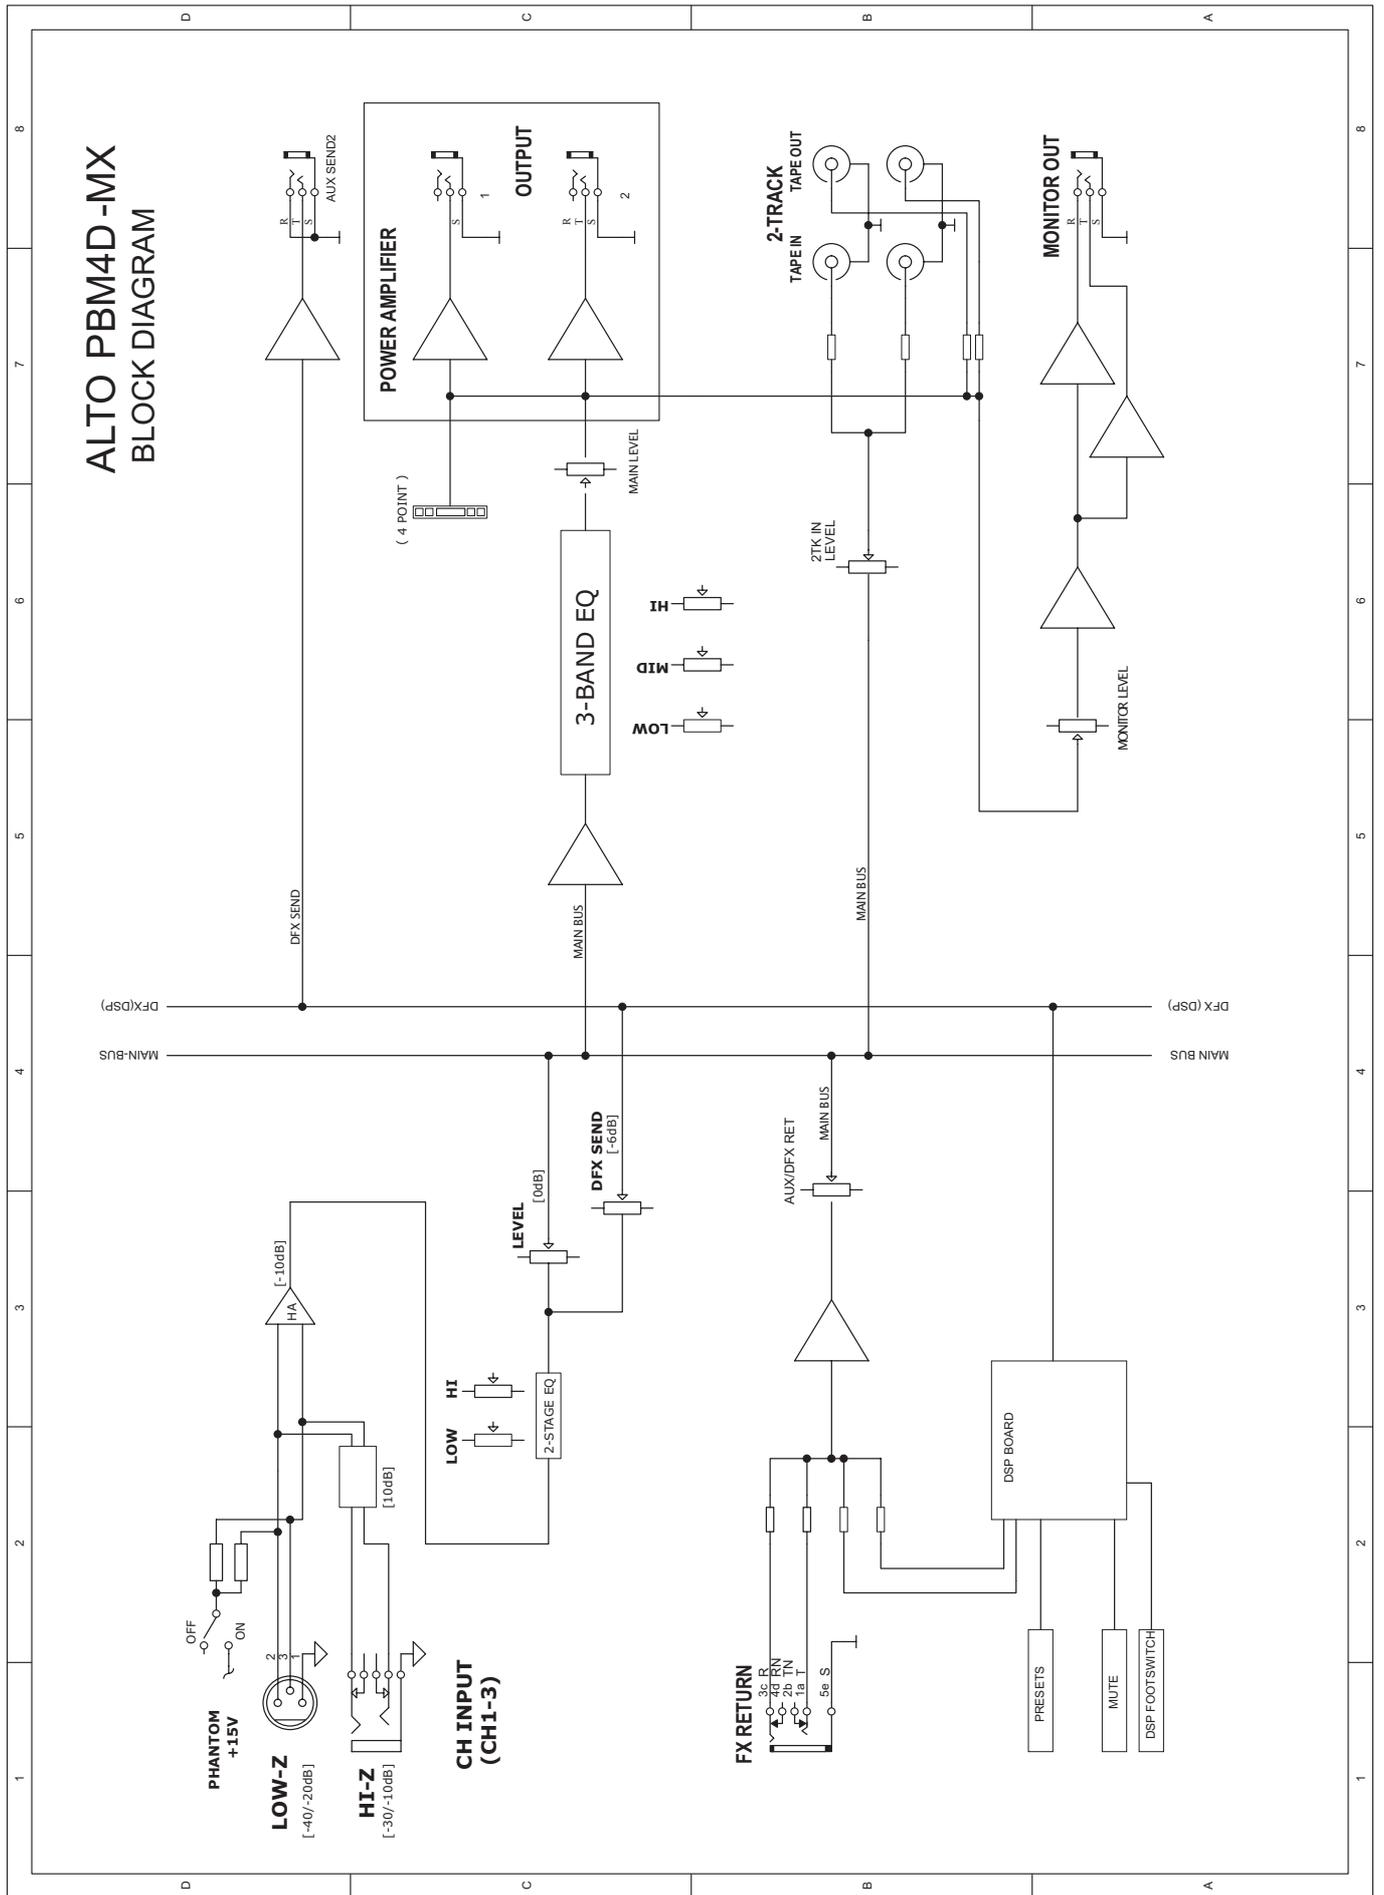

9. WARRANTY

1. WARRANTY REGISTRATION CARD

To obtain Warranty Service, the buyer should first fill out and return the enclosed Warranty Registration Card within 10 days of the Purchase Date.

All the information presented in this Warranty Registration Card gives the manufacturer a better understanding of the sales status, so as to purport a more effective and efficient after-sales warranty service.

Please fill out all the information carefully and genuinely, miswriting or absence of this card will void your warranty service.

2. RETURN NOTICE

2.1 In case of return for any warranty service, please make sure that the product is well packed in its original shipping carton, and it can protect your unit from any other extra damage.

2.2 Please provide a copy of your sales receipt or other proof of purchase with the returned machine, and give detail information about your return address and contact telephone number.

2.3 A brief description of the defect will be appreciated.

2.4 Please prepay all the costs involved in the return shipping, handling and insurance.

3. TERMS AND CONDITIONS

3.1 ▲LTO warrants that this product will be free from any defects in materials and/or workmanship for a period of 1 year from the purchase date if you have completed the Warranty Registration Card in time.

3.2 The warranty service is only available to the original consumer, who purchased this product directly from the retail dealer, and it can not be transferred.

3.3 During the warranty service, ▲LTO may repair or replace this product at its own option at no charge to you for parts or for labor in accordance with the right side of this limited warranty.

3.4 This warranty does not apply to the damages to this product that occurred as the following conditions:

- Instead of operating in accordance with the user's manual thoroughly, any abuse or misuse of this product.
- Normal tear and wear.
- The product has been altered or modified in any way.
- Damage which may have been caused either directly or indirectly by another product / force / etc.
- Abnormal service or repairing by anyone other than the qualified personnel or technician.

And in such cases, all the expenses will be charged to the buyer.

3.5 In no event shall ▲LTO be liable for any incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion or limitation may not apply to you.

3.6 This warranty gives you the specific rights, and these rights are compatible with the state laws, you may also have other statutory rights that may vary from state to state.

SEIKAKU TECHNICAL GROUP LIMITED
SEKAKU ELECTRON INDUSTRY (H.K.) CO., LTD.
No. 1, Lane 17, Sec. 2, Han Shi West Road, Taichung 40151, Taiwan
<http://www.altoproaudio.com> Tel: 886-4-22313737
email: alto@altoproaudio.com Fax: 886-4-22346757

All rights reserved to ALTO. All features and content might be changed without prior notice. Any photocopy, translation, or reproduction of part of this manual without written permission is forbidden. Copyright ©2005 SEIKAKU GROUP